

1. Product Introduction

Thank you for using our electric lunch boxes. The company independently developed multi-functional electric lunch box series, the design is independent and novel,exquisite and fashionable.This product is safe, practical and easy to operate.It can be used to take rice, vegetables, soup and other food when going out.It is your good helper at home, work and school.


2. product specifications

Model	MKE-001	rated capacity	1.0L
rated voltage	110V~240V	rated power	40W~80W


3.product features

- Exquisite design, stylish appearance.
- Unique heating design, the temperature is more uniform and the food is softer.
- Heat at a constant temperature with the PTC element, safer to use.
- The design of the preservation container is convenient and practical.
- Containers that come into contact with food are made of food contact grade PP and SUS304 materials

4.electrical equipment schematic Diagram

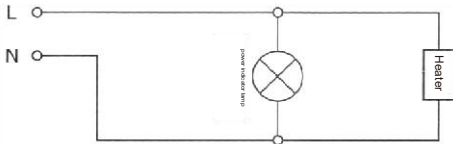

5.product structure

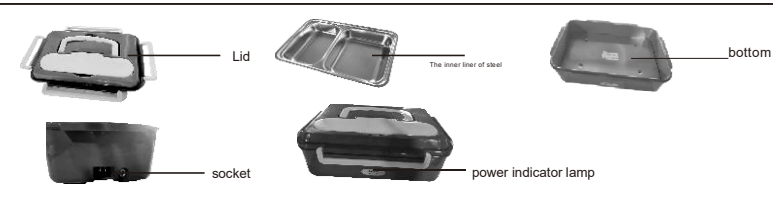

6.use method

Please read the instruction carefully and follow the instructions.

Take out the electronic lunch box from the packing box, remove the inner packing, clean the steel plate, the lid and the seal ring of the lunch box with food detergent, and dry it after washing with clean water. Do not wash lunch boxes with water.

1. Add cooked food into the lunch box.



2. Put the food box into the lunch box, align the cover and buckle down the lunch box.



3. Plug directly into the power cord.



4. Turn on the power, light up,start heating food.

Note: The electric heating time needs to be determined according to the amount of food, the degree of cold or hot, the ambient temperature

- (1) At an ambient temperature of 25 ° C, the food can be eaten after 30 minutes of electric heating
- (2) When the ambient temperature is low or the food is refrigerated, it is necessary to increase the electrical heating time appropriately
- (3) Unplug the power cord before eating.



5. eat food, steel can be separated, easy to clean.

7.safety precautions

- Before use, check whether the rated voltage on the nameplate is the same as the voltage you are using
- If the power cord is damaged, it must be replaced with a special cord or a special component purchased from its manufacturer or maintenance department. .
- Do not use near flammable materials.
- Do not pull the plug when your hands are wet, or you may get an electric shock.
- Do not use water to wash or immerse in water, so as not to damage the performance of electrical appliances.
- non-electrical professionals do not modify, dismantle or repair this product.
- 7.Do not use in unstable and wet areas, damp place, or you may get damaged or break down. 8. Do not put in high temperature disinfection cabinet disinfection.
- 9.Do not put in the microwave oven for heating.
- 10.Do not put in the refrigerator to freeze.
11. Do not turn on electricity when there is no food.
12. Don't add water



8.cleaning and maintenance

- You must unplug the product after use.
- Wash immediately after use to avoid product smell.
- do not use days with banana oil , gasoline, decontamination powder, hard brush, stainless steel ball and so on to wipe.
- put a small amount of warm water in the box to clean when used, or use a soft cloth to wipe clean.
- When the product is not used for a long time, please clean it, pack it into the packing box and put it in a ventilated and dry place, so as not to be affected by moisture.
- If there is any problem with this machine, please send it to our maintenance department or contact our maintenance service department.

9.maintenance service guarantee

Serial number	Phenomenon of failure	Cause of occurrence	The solution
1	The heater doesn't work or the light doesn't work	1. The power supply is not connected 2. The power cord is damaged	Check the plug socket, whether the power cord is intact then plugge into the socket
2	The heater isn't working, but the lights are on	1. The heater is broken	Send it to the designated department for Repair
3	The temperature is too low	1.Power on time is too short 2.The temperature of the environment or food is too low	Appropriate extension of power-on time

- the company's household appliances products to implement a one-year warranty.
- The starting date of the warranty shall be the date of the purchase receipt of the product.
- Please show your warranty card and your purchase receipt.
- one of the following situations, does not belong to the scope of free maintenance:
(1) as a result of not according to the specifications of the use and cause failure.

- (2) failure due to fall or collision.
- (3) failure due to self-disassembly and repair.
- (4) the model of the bill and the model of the maintenance product are not attached or have been altered.
- (5) commercially displayed samples, preparations, and products that have been subjected to a performance overload test.
- (6) exceeding the warranty period.
- (7) damage caused by force majeure (E.G. flood, fire, earthquake, etc.) .
- 5.does not belong to the free maintenance product, the maintenance service center still warm for your service.

Electrical Warranty

Product Model		fuselage number	
invoice number		date of purchase	
customer name		telephone	
Address			

Thank you for your purchase of the company's products, this product is a well-designed, using high-quality components of household appliances, it will bring you great convenience in life. If the machine breaks down, please contact with the company's After-sales Service Center in time, the company will provide you with good maintenance services.

- A one-year warranty service is available from the date of purchase.
- during the warranty period, all damaged parts can be replaced and repaired due to the quality of the products.
- if the warranty period is exceeded, maintenance fees and spare parts fees will be charged as appropriate.

This copy is saved by the user

Cut along this dotted line

Electrical Warranty

Product Model		fuselage number	
invoice number		date of purchase	
customer name		telephone	
Address			

Serial Number	warranty item	Replacement Parts Name	Quantity	maintenance costs	Repairman Signature	date

This copy is saved by the maintenance service center


Cut along this dotted line

Electrical Warranty

Product Model		fuselage number	
invoice number		date of purchase	
customer name		telephone	
Address			

This copy is saved by the company

Electric lunch box

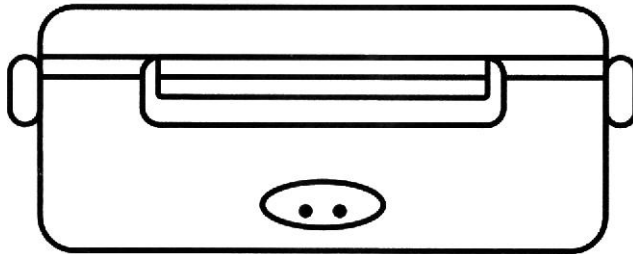

(The pictures in this article are for reference only,the products are subject to physical objects.)

Instruction Manual of Electric Lunch Box

Thank you for purchasing our company's electirc lunch box! Please read this instruction manual carefully before use. Please take good care of it after reading, so that you can check it late.