


amazonbasics

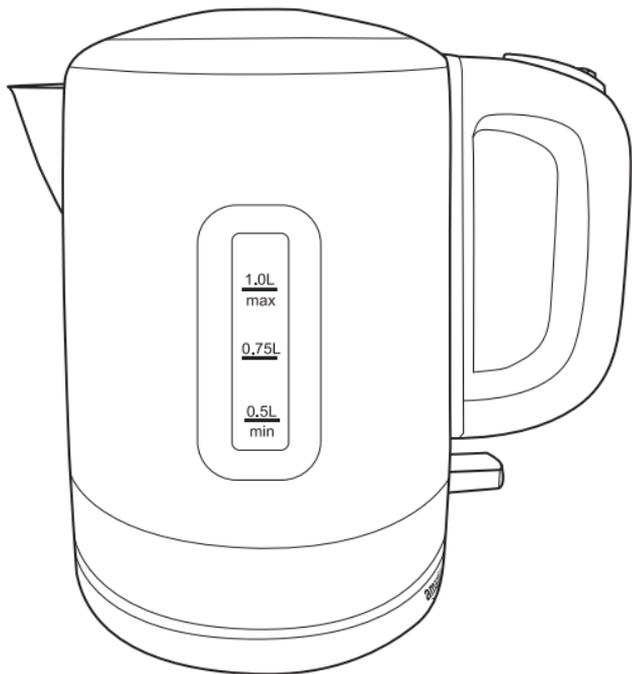

Stainless Steel Electric Kettle, 1L

Hervidor Eléctrico De Acero Inoxidable, 1L

Bouilloire Électrique En Acier Inoxydable, 1 l

B072DWYBL7

English

English 3

Español 10

Français 18


Español

Français

Stainless Steel Electric Kettle, 1L

Contents:

Before getting started, ensure the package contains the following components:

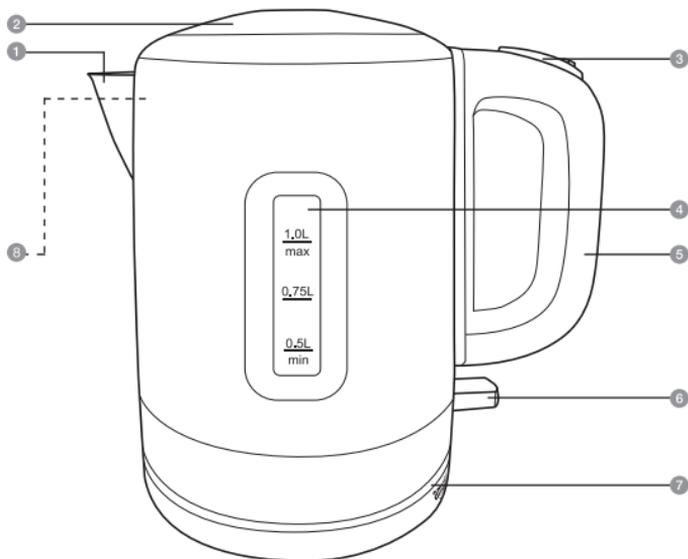

- | | | | |
|---|--------------------|---|------------------|
| 1 | Spout | 5 | Handle |
| 2 | Lid | 6 | On/Off Switch |
| 3 | Lid release button | 7 | Base |
| 4 | Water gauge | 8 | Removable filter |

IMPORTANT SAFEGUARDS

- Read carefully and save all the instructions.
- When using electrical appliances, ALWAYS follow basic safety precautions to reduce risk of fire, electric shock, injury to persons.
- This product is intended for household use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Never touch hot surfaces and/or hot water. Always use handles or knobs. Burn Hazard!
- Do not open the lid while the water is heating. Risk of scalding!
- To prevent fire, electric shock, and personal injury, do not immerse the product, its cord, its plug or its power base in water or other liquid.
- Never operate a product whose power cord and/or plug are damaged.
- Never operate a product after it malfunctions or has been dropped or damaged in any manner.

- The replacement and repairs of the power cord must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid hazard.
- If an extension cord is used, its capacity needs to be suitable for the power consumed by this product.
- Do not operate the appliance with wet hands or while standing on a wet floor.
- Never use accessories which are not recommended by the manufacturer. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
- Do not let cord hang over edge of table or counter. Do not let the cord touch any hot surface.
- Do not place electric kettle on or near a hot gas or electric burner or in a heated oven.
- Do not use outdoors.
- Always unplug the product when not in use and before cleaning. Allow to cool before touching the product, putting on or removing parts and before cleaning.
- To disconnect, turn the product off and remove the plug from the wall outlet.
- Never pull on the cord. This may damage the cord and increase the risk of electric shock.
- Do not use appliance for other than intended use.
- **ONLY** use the product for heating water. Liquids other than water will tarnish the inside of the product and void the warranty.

- Never let the product boil dry.
- To prevent circuit overload, do not plug another high-wattage appliance into the same circuit.
- Risk of scalding if the lid is left open while the product is heating.
- Make sure the lid is securely in place while the water is heating up and when pouring it out.

SAVE THESE INSTRUCTIONS

The particular length of the power cord of this appliance is meant to reduce the risk of becoming tangled in it and/or tripping on it. Should the length of this cord be insufficient, use an approved extension cord. The marked electrical rating of the extension cord shall be equal to (or greater than) that of the appliance. If the appliance is of the grounding type, the extension cord should be a grounding type, 3-wire cord. Lay the extension cord down so that it will not hang down from tabletop or countertops where it can be pulled on by children or create risk of tripping over it.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Intended Use

- This product is intended for boiling water.
-

Before First Use

When using for the first time or after a lengthy period of disuse, we recommended to fill the product up to the Max mark (1.0 L), bring to boil, then discard the water and repeat.

This will remove potential extraneous and unwanted residues.

Operation

- Press the lid release button to open the lid.
- Fill the product with water (between the 0.5 L and the 1.0 L marks).
- Close the lid. Place the product on the base.
- Connect the plug to a power outlet. Press the On/Off switch down.
- The light goes on, the product is now heating the water.
- The product will switch off automatically when the water starts boiling. The light will then go out.
- The product features a safety switch that shuts it down if it boils dry. If this should occur, remove it from the base and wait until it cools down before using it again.

NOTE: The kettle should ONLY be used with the base provided.

Burn Hazard! Do not overfill kettle:

- Water might enter the steam tube and leak from the bottom of the product
 - Boiling water might spill out of the spout.
-

Cleaning and Maintenance

- Regular cleaning will prolong the lifespan of the product.
- Always unplug from the plug socket and allow to cool down before cleaning.




WARNING Do not immerse any part of the product in water or other liquid.

- Do not use chemical or abrasive agents (or tools) to clean the outside of the product. These may damage the outside surface.
-

- Fill the product up to the 1.0 L mark with a half water, half white vinegar solution and let it sit for over 1 hour.
- Pour the solution out of the product. Wipe off the residues (if any) with a damp cloth.
- Fill the product with clean water, bring to boil and then discard the water.
- To clean the kettle thoroughly, it may be necessary to repeat the cleaning process above several times.
- Wipe the outside surface with a damp cloth and then wipe dry with a soft cloth.

Removing and Cleaning the Filter

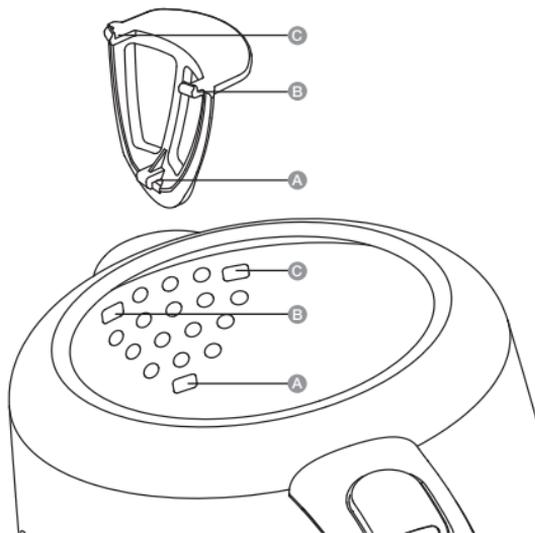

- Push the filter down near point **B** (or point **C**) to dislodge the hook.
- Now push the filter down near point **C** (or point **B**) to dislodge the other hook.
- Carefully pull out the hook (point **A**) and remove the filter.
- Wash it with clean water and dry thoroughly before replacing it in the kettle.
- To reinstall the filter, follow the steps above in the reverse order.

Specifications

Capacity	1.0 L	Dimensions	8 x 5.5 x 7.9 in
Rated voltage	120 V~ 60 Hz	Weight	1.75 lbs
Rated power	1500 W		

Feedback and Help

Love it? Hate it? Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.



amazon.com/review/review-your-purchases#



amazon.com/gp/help/customer/contact-us

amazonbasics

amazon.com/AmazonBasics

MADE IN CHINA

HECHO EN CHINA

FABRIQUÉ EN CHINE