 





Thank you for your purchase of
the new Rubbermaid® Reveal™
Microfiber Spray Mop Kit!


CONTENTS

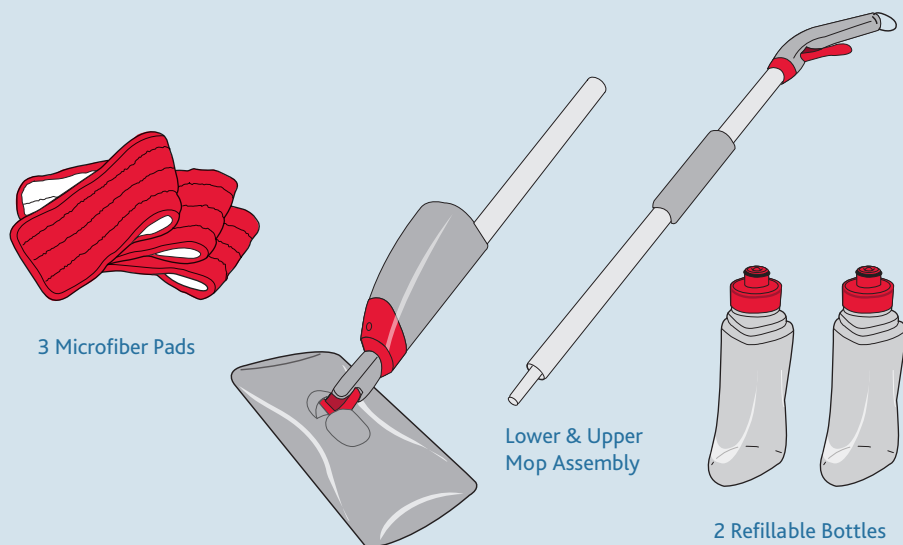

 GETTING STARTED

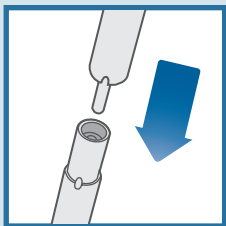


 Align the tabs on the trigger handle pole and lower spray mop pole. Push together to lock poles into place.

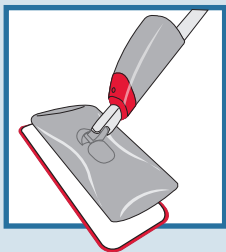


Washable microfiber pad attaches to bottom of mop head with "Velcro-like" strips to hold pad in place during mopping. Each pad can be used for two or more rooms.

 GETTING STARTED (CONTINUED)

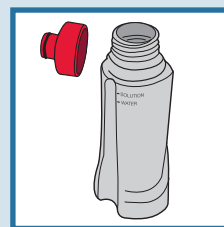


 Refillable bottle is easy to use, just unscrew cap and fill with hot water or a mixture of your favorite cleaning solution and water. Securely screw cap back on before inserting into mop.

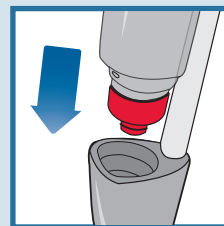

Turn bottle upside down and snap into the bottle receptacle in the lower assembly. Make sure flat side of bottle is facing away from the pole. Please note that when switching bottles, it is common for a small amount of fluid to be left behind in the bottle receptacle. Spray mop 3-4 times to dispense the leftover liquid and then snap in new bottle.

 USAGE & TIPS

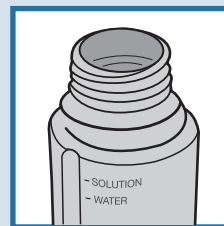

If you prefer a mixed solution, fill bottle first with water up to water fill line on back and then simply add your favorite cleaning solution up to solution fill line. This mixture ratio is the standard cleaning solution ratio of 1/4 cup per gallon of water. Do **NOT** use bleach.

Microfiber Pads

1. Reusable microfiber pads are machine washable and should be washed with like colors. Pad can be washed up to 100 times!
2. Do **NOT** wash with bleach.
3. Do **NOT** wash with fabric softener as this will impede the microfiber pad performance.
4. Tumble dry air or low heat setting.

Refillable Bottles

1. Bottle can be cleaned by hand or in dishwasher (top rack only).
2. Bottles are **NOT** to be used for drinking purposes.