

Tabletop Basketball

● Introduction



We congratulate you on the purchase of your new product. You have chosen a high quality product. Familiarise yourself with the product before using it for the first time. In addition, please carefully refer to the operating instructions and the safety advice below. Only use the product as instructed and only for the indicated field of application. Keep these instructions in a safe place. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

● Intended use

The product is only intended for private household use. This product is not intended for commercial use.

● Delivery contents

- 1 court
- 1 ball
- 1 plastic launcher
- 1 basket with stand
- 1 set of game instructions



Safety notices

- ⚠ **WARNING.** Not suitable for children under 36 months. Small ball. Choking hazard.
- ⚠ **WARNING.** Not suitable for children under 36 months. Long Cord. Strangulation hazard.
- **WARNING.** To be used under the direct supervision of an adult.
- **WARNING.** All packaging are not part of the toy and for safety reasons should always be removed before it is handed over to children to play with.
- Retain packaging for future reference.
- The product is suitable for children aged from 3 years old.

● Assembly

See figures

1. Position launcher on the game board **[1]**.
2. Fix stand **[2]** on game board by a screw **[A]**.
3. Insert the basket **[3]** into the opening provided for it in the board on the stand **[2]**.
4. Fasten the basket **[3]** with the corresponding fastening element **[4]**.

● Rules of the game

Throw the ball by pressing plastic launcher. The aim is to hit the basket.

● Care and storage

- Do not use harsh or aggressive cleaning agents.
- Clean the product using a soft, dry cloth only.
- Always store the product dry and at room temperature.

● Warranty

The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of product defects you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.

The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Please keep the original sales receipt in a safe location. This document is required as your proof of purchase.

Should this product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you. This warranty becomes void if the product has been damaged, or used or maintained improperly.

The warranty applies to defects in material or manufacture. This warranty does not cover product parts subject to normal wear, thus possibly considered consumables (e.g. batteries) or for damage to fragile parts, e.g. switches, rechargeable batteries or glass parts.

● Warranty claim procedure

To ensure quick processing of your case, please observe the following instructions:

Please have the till receipt and the item number (e.g. IAN 123456_7890) available as proof of purchase.

You will find the item number on the rating plate, an engraving on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product.

If functional or other defects occur, please contact the service department listed either by telephone or by e-mail.

You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.

● Service

(GB) **Service Great Britain**
Tel.: 08000569216
E-Mail: owim@lidl.co.uk

(IE) **Service Ireland**
Tel.: 1800 200736
E-Mail: owim@lidl.ie

(NI) **Service Northern Ireland**
Tel.: 0800927852
E-Mail: owim@lidl.ie