


Instructions to Set Up and Use Your Card Shuffler

Step 1: Insert Batteries (Figure 1)

- Requires 4C Batteries (not included).
- Insert 2C batteries in each compartment. Make sure all 4 batteries are brand new for the best performance.
- Replace battery compartment covers.

Figure 1

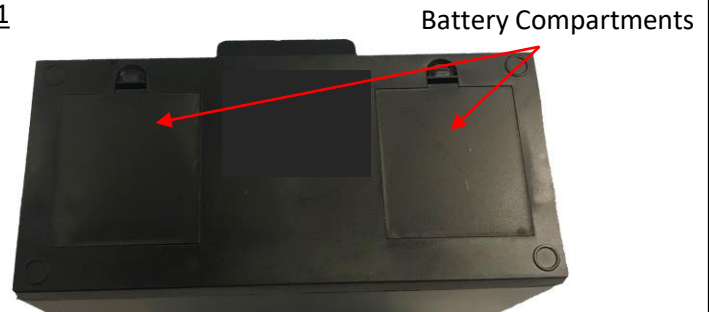

Step 2: Card Return Tray

- Remove clear card return tray from the plastic bag.
- Insert tray into the top of the shuffler's card return area behind the guides on each side, (Figure 2).

Figure 2

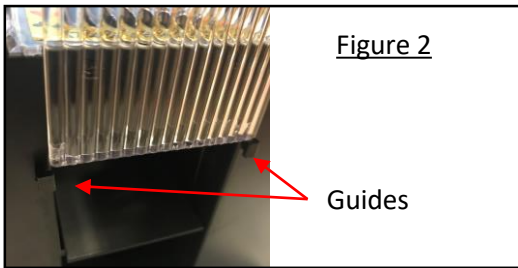


Figure 3


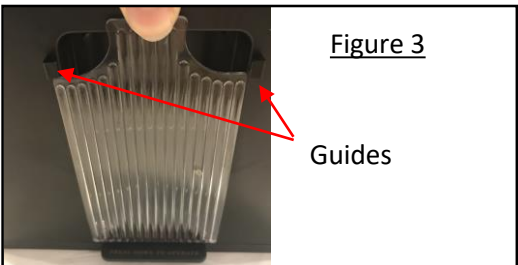


Figure 4

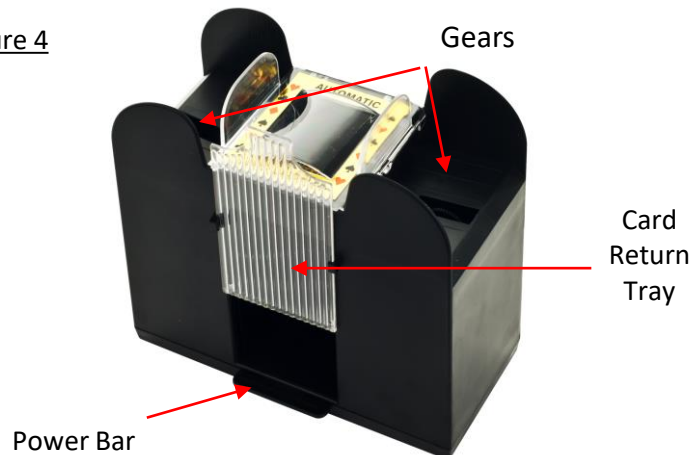

Step 3: Shuffle Cards

- Insert up to 3 deck of cards on each side of the shuffler.
- Press Down on the Power Bar to shuffle your cards. Hold this bar down until cards have been emptied from the top loading deck (Figure 4).
- Push the Card Return Tray to the bottom so the top of the Card Return Tray can clear the guides to retrieve your cards (Figure 3).

Tips for Optimal Performance of Your Card Shuffler

- Use brand new batteries of the same brand in this shuffler. Each battery compartment serves a different motor. Partially used batteries may affect the speed at which the motors turn.
- Use the Card Return Tray when unloading your cards from the shuffler (Figure 4). Tipping the shuffler over or jarring it may cause the batteries to come loose and prevent the shuffler from operating.
- Use cards of the same size and material for optimal performance. Glossy cards can move through the shuffler faster than matte cards.
- Stack and divide the cards evenly on each side of the shuffler.
- Occasionally during shipping, the gears may slip out of alignment and need to be adjusted. Make sure all gears are touching so they engage with the drive jam (Figure 4). If they are not, simply slide the gears back into place with your finger.
- Remove batteries when shuffler is not in use or stored. There is no ON/OFF switch on this shuffler to prevent the motors from drawing power from the battery when not in use.
- If the shuffler is not working or only one side of the shuffler is working, check the batteries to ensure they have not come loose or have no power.