


User Manual

Product Appearance

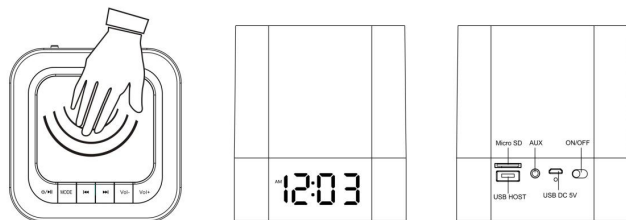

Operating Instructions



1. **Power On/Off** Key: Play/ Pause/ Answer call/ Hang up calling/ Turn on/ Turn off.
2. **MODE** Key: Briefly press to choose different modes. The device sequence is: TIME > DATE > ALARM > BLUETOOTH > MP3 Mode > Line in
3. **Fast Backward** Key: In music and Bluetooth mode, briefly press to select the last song. In the MP3 mode, press longer to fast backward. In Clock mode, briefly press to choose 12/24-time format.
4. **Fast Forward** Key: In music and Bluetooth mode, briefly press to select the next song. In the MP3 mode, long press to fast forward. In clock mode, briefly press to choose 12/24 hours
5. **Vol-** Key: Decrease volume in Bluetooth/ MP3/ Line-in mode.
6. **Vol+** Key: Increase volume in Bluetooth/ MP3 / Line-in mode.
7. **Power On/Off** Key: Switch on to power on; switch off to power off.

Light Function Instructions

Seven different light modes and 48 different colors. Select by touching the speaker.

- **Low/ Middle/High brightness.**
- **Breathing light:** The light alternates between low brightness and high brightness and varies in color.
- **Transform light:** Cycles through the 48 colors light automatically to let you enjoy variety.
- **Music light:** The light changes color for different volumes and musical rhythm. It blinks after 2.5 seconds when not playing music.
- **Customized light color:** Continuously touch the speaker surface and the lamplight will

change color automatically. When you remove your hand, it will stop at your favorite color.

NOTE: To remember your favorite color, every one of the 48 colors has a code which will display.

Time Instructions

Time Mode

1. To adjust the time mode for a 12 or 24-hour clock, briefly press **Fast Backward** or **Fast Forward**.
2. Briefly press the **MODE** key to set the date and time.
3. The Year blinks. Briefly press the **Fast Backward** or **Fast Forward** key to adjust it.
4. Set the month/date/ hour/ minute at the same way.

Date Mode

1. Briefly press the **MODE** key when in the Time mode to enter the Date mode.
2. The display shows the date. Briefly press **Fast Backward** and **Fast Forward** to check the year, month, or date.

Alarm Mode

1. Press the **MODE** key longer to set the alarm.
2. Briefly press the **MODE** key to adjust ON/OFF status.
3. Press **Fast Backward** or **Fast Forward**.
4. Briefly press **MODE** to confirm it.

The device supports a customized alarm bell.

1. Save a song or sound with a filename of “alarm” to a USB memory stick or micro SD card.
2. Insert the memory card into the device.

Other songs can be stored, but only the file named “alarm” will play when the alarm activates.

Sleep Mode

The sleep mode turns off music for a specified time after the alarm sounds.

1. The display shows **S OFF**.
2. Briefly press the **Power On/Off** key to set the delay time.
3. You can set the time for **off, 15, 30, 60, or 120** minutes.

This setting works only once. You need to set it again after you turn on the device the next time.

Functions

Bluetooth Mode

To pair a device:

1. Briefly press Mode key to enter Bluetooth mode. **BLUE** displays and you will hear a voice.
2. Turn on the Bluetooth digital device (mobile phone/MID/computer etc.) and connect it with a device named as **DY28 Plus**.

MP3 Mode

The device automatically enters the MP3 mode when you insert a USB or micro SD memory card.

LINE-IN Mode

The device automatically enters AUX mode when connected to another digital device using a line-in cable.

Specifications

Display	LED	
Built-in rechargeable lithium battery	Play time: Maximum 8 to 10 Hours Varies according to the volume level	
LINE-IN Audio in (AUX)	Max. input	(L) 300mV+ (R) 300mV
	Output power	5W
	MP3 Bit Rate	8 Kbps – 320 Kbps
	Signal to Noise Ratio (SNR)	85 dB
	Signal Distortion	<0.55%
Music Format	MP3, WMA, APE,	
Operating temperature	-5 to +40 degrees Celsius	

* Product appearance, function and specification might change without prior notice.