


amazonbasics

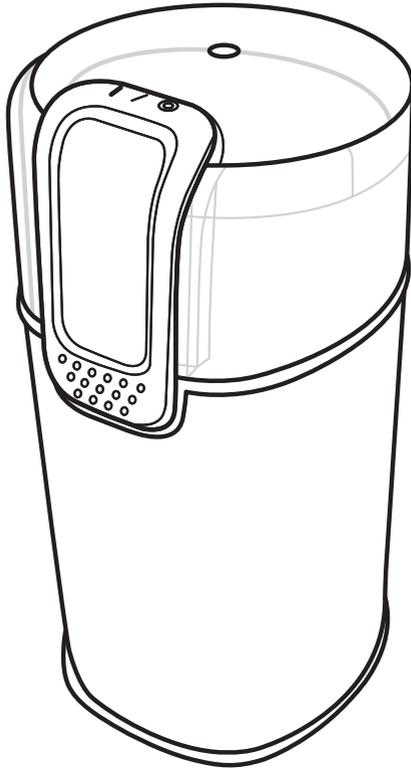

Stainless Steel Electric Coffee Bean Grinder

Molinillo Eléctrico de Café en Grano, Acero Inoxidable

Moulin à Café Électrique en Acier Inoxydable

B07SYTRPSG

English	3
Español	9
Français	15



IMPORTANT SAFEGUARDS



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

⚠ WARNING Risk of electric shock! To protect against risk of electrical shock do not put the main body in water or other liquid.

⚠ CAUTION Risk of cuts! Blades are sharp. Keep hands, hair, clothing, as well as other utensils away from the blades while grinding to reduce the risk of severe injury to persons or damage to the appliance.

- Read all instructions.
- To protect against risk of electrical shock do not put main body in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surface, including the stove.
- Check hopper for presence of foreign objects before using.

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

SAVE THESE INSTRUCTIONS



Intended Use

- This product is intended for grinding small quantities of coffee beans. This product is not intended to grind spices, pepper or other foodstuff.
- This product is intended for household use only. It is not intended for commercial use.
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.




Before First Use

- Check the product for transport damages.
- Clean the product before first use.
- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product rating label.

⚠ DANGER Risk of suffocation! Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.



Product Description

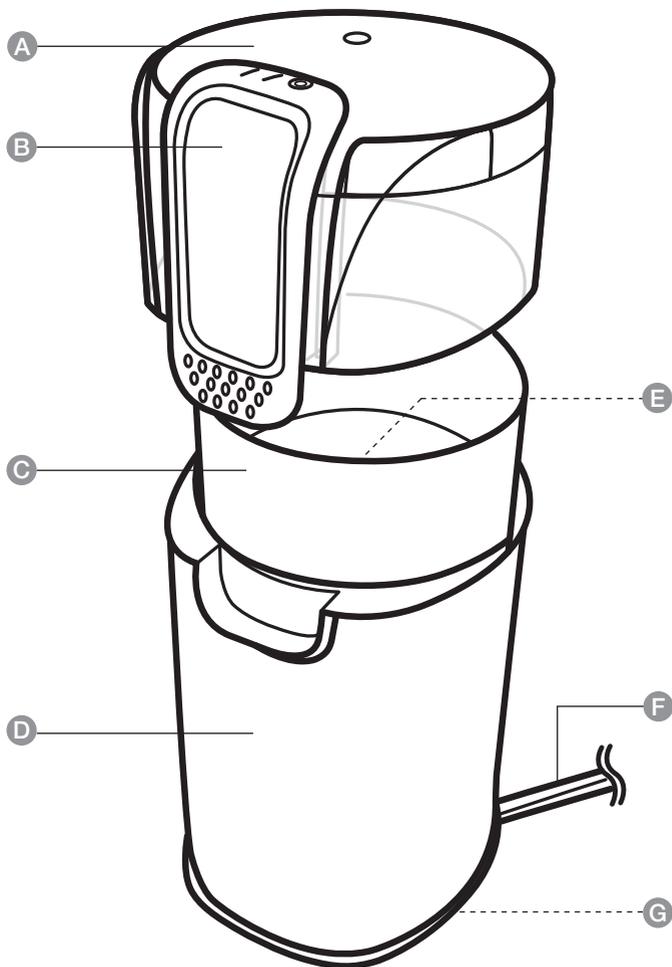

- A** Lid
- B** Power button
- C** Hopper
- D** Main body
- E** Blades
- F** Supply cord with a plug
- G** Supply cord storage compartment



Operation

Filling the hopper

NOTICE Do not grind more than 2.1 oz (60 g) of coffee beans at a time.

- Remove the supply cord (F) from the cord storage compartment (G).
- Place the appliance on a flat, stable surface.
- Remove the lid (A).
- Fill the hopper (C) with coffee beans. Do not exceed the **MAX** marking.
- Place the lid (A) on the hopper (C).

Switching on/off

⚠ CAUTION Risk of injury! Do not remove the lid (A) until the blades (E) come to a complete stop.

NOTICE Do not operate the appliance for more than 45 seconds at a time. Let the appliance cool down for 3 minutes before resuming operation.

- To switch on, press and hold the power button (B) in the **/** (on) position.
- To switch off, release the power button (B) to the **O** (off) position.

Operation tips

- For the freshest, most flavorful coffee, grind only the amount of beans you need for the next brew. Grind the coffee beans just before brewing.
- Fresh beans ensure the best flavor and aroma.
- Unused coffee beans can be stored in an airtight container in a freezer for up to 2 months. Coffee beans can be grounded while still frozen.
- Coffee grounds left in the hopper (C) can become stale and can affect the flavor of freshly ground coffee beans. Empty and clean the hopper (C) after each use.
- For best effects, only grind dry coffee beans.

- There are 3 coffee grind types:

Type	Grinding time	Application
Coarse	8-10 seconds	Large chunks of coffee beans. Use for percolators and coffee urns.
Medium	10-15 seconds	Use for drip coffee makers and steam-type espresso machines.
Fine	30 seconds	Use for espresso machines with an electric pump.



Cleaning and Maintenance

⚠ WARNING Risk of electric shock! To prevent electric shock, unplug the product before cleaning.

⚠ WARNING Risk of electric shock! During cleaning do not immerse main body the product in water or other liquids. Never hold the product under running water.



Cleaning

- To clean the product, wipe with a soft, slightly moist cloth.
- Use a small, dry brush (not provided) to dislodge dry particles around the blades (E).
- Dry the product after cleaning.
- The lid (A) is dishwasher safe.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Storage

- Wrap the cord in the cord storage compartment (G) located on the bottom of the product.
- Store the product in its original packaging in a dry area. Keep away from children and pets.

Maintenance

- Any other servicing than mentioned in this manual should be performed by an authorized service representative.



Specifications

Rated voltage:	120 V~, 60 Hz
Power input:	150 W
Maximum operating time:	45 seconds on / 3 minutes cool down
Maximum capacity:	2.1 oz (60 g)
Net weight:	1.5 lb (0.68 kg)
Dimensions (W x H x D):	3.8 x 6.8 x 3.5" (9.7 x 17.4 x 8.9 cm)



Feedback and Help

Love it? Hate it? Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.

 amazon.com/review/review-your-purchases#

 amazon.com/gp/help/customer/contact-us

amazonbasics

amazon.com/AmazonBasics

MADE IN CHINA
HECHO EN CHINA
FABRIQUÉ EN CHINE

V04-08/19