

 
CHERIMOR

More than Comfort

Don't Worry.


It is **Stretch**, not **Leaking**.

1

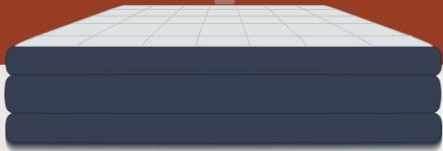

When you first use the air mattress, you may experience a sensation of air leakage due to the **stretching** of the material.

2

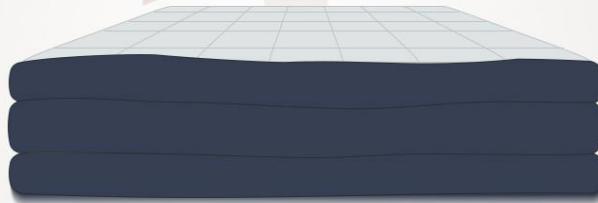

This is often misunderstood as a puncture or air leakage.

Simply re-inflate it to your desired firmness, and the issue will be resolved.

3



It typically takes 2-4 reinflations for the mattress to fully stretch.



Give your chosen product one more chance before you decide to give up on it!