

## **CLEANING BOWL**

- 1) Place fingers under bowl and lift Bowl up to remove.
- 2) Pull Bowl out horizontally removing it from the Base.
- 3) Hand clean with soft cloth and hand dry.

**Warning:** Base unit should not be submerged in water at any time, this will damage electronic components and void the warranty. Allow parts to dry completely before adding new food.

**NOT DISHWASHER SAFE.**

---

## **PET TRAINING TIPS**

### **FOR PETS NEW TO THE AUTOMATIC FEEDER**

Some pets may require a special adjustment period to acclimate to their new automatic feeder. If this is your dog or cat, try:

- 1) Place the Programmable Lebistro Food Dispenser next to your pet's existing bowl or feeder. (Do not turn the power on)
- 2) Place food in the bowl of the Programmable Lebistro Food Dispenser (only for a period of time to allow adjustment).

3) Keep food in the pet's current bowl (only for a period of time to allow adjustment).

4) Once you have observed your pet eating from the Programmable Lebistro Food Dispenser, remove their old feeding dish.

**NOTE:** Adjustment time for the pet could be as short as a day or as long as a few weeks, depending on your pet's personality. You can also introduce your pet to the Programmable Lebistro Food Dispenser by placing small treats in the bowl.

---

## **TROUBLESHOOTING**

- 1) If no display is showing, turn on power.
- 2) If the clock is flashing, the unit has lost its power and current time setting, reset current time.

**NOTE:** previous meal programming does not need to be reset.

- 3) If "MEALS" is flashing, this indicates the unit did not completely deliver the full amount of food programmed for the meal.
  - a. Turn unit off, empty the hopper and remove the hopper from the base.
  - b. Check for food jamming in the throat of the base.
  - c. Dislodge food jam. Works best with .5" or smaller diameter food.
  - d. Re-assemble unit.
  - e. Turn unit on and reset current time.

4) If the "Low Battery" indicator light is lit:

- a. Turn unit off.
- b. Refer to "INSTALL BATTERIES" Section
- c. Turn the unit back on and set current time.

**NOTE:** Meal programming remains and does not need to be reprogrammed.

**NOTE:** Clock will be set after setting minutes and the unit is now in AUTOMATIC MODE. While setting current time, if the programming is not completed the Programmable Lebistro Food Dispenser waits until the current time is set and will not go into AUTOMATIC MODE.

**Replacement parts are available at: [www.petmate.com](http://www.petmate.com)**

---

## **CAUTION**

### **SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE. READ ALL INSTRUCTIONS BEFORE OPERATING PRODUCT.**

- For indoor use only.
- For dry food use only. Works best with .5" or smaller diameter food.
- NOT recommended for puppies or kittens less than 7 months old or unable to reach the feeding dish.
- Do NOT use this feeder with puppies, kittens, dogs or cats with any physical disability.
- Do NOT allow small children to play with, in or around feeder.
- Before leaving for extended time, always replace batteries with 3 new, "D" size batteries.
- Do NOT place any foreign object in the feeder.
- Do NOT operate feeder without hopper and hopper lid securely in place.

- Feeder should be placed on a level surface.
- Do NOT disassemble feeder other than bowl, hopper, hopper lid and battery cover.
- Check the low battery light frequently to be sure the feeder is dispensing properly.
- Dispose of all packaging material properly. Some items may be packed in poly bags; these bags could cause suffocation; keep away from children and pets.

### **WARNING**

- Do NOT place anything on top of feeder.
- Base unit should NOT be submerged in water at any time, this will damage electronic components and void the warranty.
- **NOT DISHWASHER SAFE.**