

WARNING

Turn off electrical current to the unit before attempting any service work. If you are unfamiliar with methods of installing electrical wiring, secure services of a qualified electrician. All electrical connections must be in accordance with local codes, ordinances or national electrical codes.

WIRING INSTRUCTIONS

1. Disconnect the power to the unit.
2. Remove the thermostat cover.
3. Remove the box.
4. Mount the new box to the rafter using wood screws to attach.
5. Connect one black wire from the thermostat to the black wire of the incoming power supply.
6. Connect the other black wire from the thermostat to the black motor wire.
7. Connect the white wire from the power supply to the white motor wire.
8. Attach the ground from the incoming power supply to the ground screw.

Ventamatic, Ltd.

FOR ASSISTANCE PLEASE CALL

800.433.1626

XXADJTSTAT / XXFIRESTAT (415 THERMOSTAT) WIRING DIAGRAM

