 


HAUSHOF

ORIGINAL OPERATING INSTRUCTIONS ELECTRIC SALT & PEPPER GRINDER SET

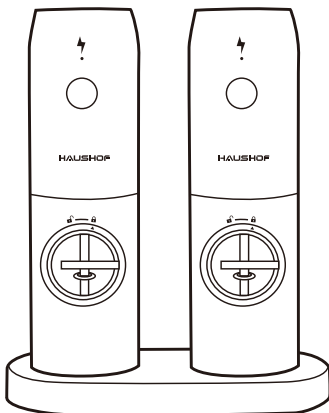

Thank you for buying a HAUSHOF Electric Salt & Pepper Grinder Set. It has been engineered and manufactured to HAUSHOF's high standard for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of rugged, trouble-free performance.

⚠ WARNING: To reduce the risk of injury, the user must read and understand the operator's manual before using this products.

SAVE THIS MANUAL FOR FUTURE REFERENCE

Model# KYMQ-15C



 
Distributed by:
Hangzhou GreatStar Industrial Co., Ltd.
No.35 Jiuahuan Road, Jiubao Town,
Hangzhou 310019, China
www.greatstartools.com
Made in China

IMPOTANT SAFETY WARNING

⚠ WARNING: Important safety information. When using electric appliances, basic safety precautions should always be followed, including the following:

- **READ THROUGH THIS ENTIRE INSTRUCTION MANUAL.**
- When using or recharging the electric salt & pepper grinder, keep your workspace clean and free from potential hazards.
- Do not force the grinder to tighten or twist it or attempt to speed up the mechanism.
- Do not touch or adjust the grinder's mechanism or the grinding head. Only hold the grinder by its body.
- Do not operate the grinder after it has malfunctioned in any way, or if it has dropped or been damaged in any manner.
- Do not attempt to grind salt & pepper if the UP/DOWN button is not working correctly.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not let the recharging cord hang over the edge of a table or counter.
- Do not let the recharging cord contact hot surfaces, including the stove.
- To protect against the risk of electrical shock, do not put the grinder in water or other liquid. This may cause personal injury and/or damage to the product.
- To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
- Do not incinerate this device even if it is severely damaged. Care should be taken with the rechargeable batteries, as these are flammable when exposed to heat.
- For indoor use only. Do not expose the grinder or charging base to rain or other extreme conditions.
- This device is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are closely supervised and instructed concerning the use of the device by a person responsible for their safety.
- Close supervision is necessary when any device is used by or near children. Children should be supervised to ensure that they do not play with the device.
- Use for pepper and salt only. Do not use the grinder for any other purpose than for its intended use.
- This product is intended for normal domestic household use only.
- For storage, it is suggested to recharge the battery between 50% and 75% charge, and charge the device at least once in 3-6 months to preserve battery lifespan.
- **SAVE THIS INSTRUCTION MANUAL.**

LAYOUT

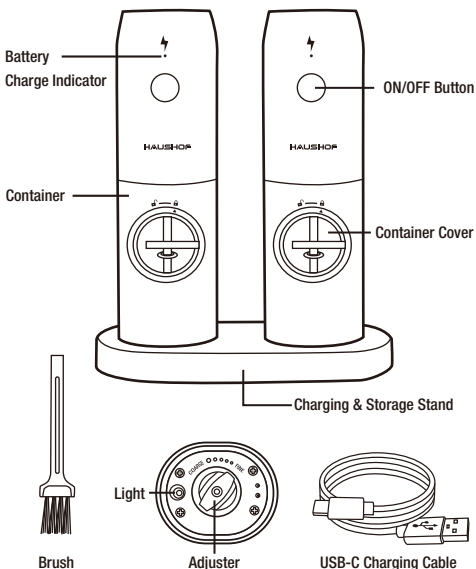

TECHNICAL DATA


Battery voltage	Maximum 4V, Nominal 3.7V
Battery capacity	300 mAh
Battery type	Lithium-ion
Weight	0.48kg/1.06lbs
Battery charge voltage	5V DC
Charging time.	1.5~2.5 hours
Container capacity	70ml/2.4oz

CHARGING YOUR ELECTRIC SALT & PEPPER GRINDER

Hazard!

Charge the equipment with the charger cable supplied. Please place the equipment on non-flammable surfaces.

 - Place the two Electric Salt & Pepper Grinders into the Charging & Storage Stand, making sure they are tightly connected to the stand, and insert the charging cable into the charging port.(located on the back of the stand)
- When place the grinder into stand, please pay special attention to put the bottom light into arched notch.
- Connect to power supply (DC 5V), it can be any mobile phone charger or USB port of the computer or power bank (output 5V DC).
- The charge indicator will light red to indicate the battery pack is being charged. When charging is finished, the indicator will turn to white.
- The battery will take approximately 1.5~2.5 hours to charge.

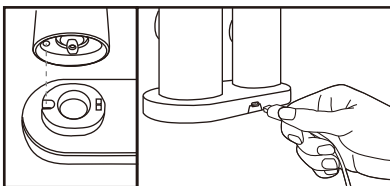

⚠ WARNING:

 
- Keep out of reach of children to avoid injuries!
- To ensure that the battery provides long service, you should take care to recharge it promptly.
- For safety considerations, never pressing the ON/OFF Button while charging the battery.

OPERATING INSTRUCTIONS

⚠ WARNING:

- Always holding the grinder firmly during using.
- Do not turn the grinder upside down for a long time in case condiment might get into the battery compartment and cause battery corrosion.

STEP 1: Place the grinder on a flat, turn the container cover anticlockwise. Put pepper or salt into container, replace the container cover on the container, and turn it clockwise to lock the cover.

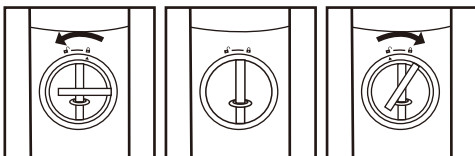

OPERATING INSTRUCTIONS

⚠ CAUTION:

- Do not fill the container all the way to the top, but leave a little space.

STEP 2: Turn the adjuster at the bottom of the grinder anticlockwise for coarser grinding, turn clockwise for finer grinding.

 


⚠ CAUTION:

- This product adopts an adjustment knob. The adjuster could be rotated for multiple circles between the finest and the coarsest grinding.
- If the adjuster loosens, it could be caused by some pepper grains stuck in the burr. Start the product to rotate for 1 second, then the burr will be loosened and you can continue to adjust. This is a normal situation of ceramic burr and will not affect its normal use.
- If the adjuster falls off, please assemble the components in the orders shown below.



STEP 3: Press the ON/OFF Button to grind, release the button to stop.

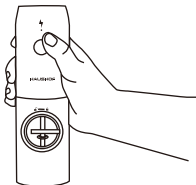

CLEANING AND MAINTAINANCE

- When condiment using up, remove the remaining in container with brush.
- Electric salt & pepper grinder should be wiped clean with a damp cloth or a sponge, using a mild non-abrasive cleaner followed with a clean, dry cloth to dry it completely.
- NEVER immerse the grinder in water, or wash under running water, or wash in dish - washer.

TROUBLE SHOOTING

If the grinder does not work or stops while grinding:

- Charging the battery
- Please turn the adjuster anticlockwise.
- If the above operations are all correct and the opener still works abnormally, please contact the online service center.

STORAGE

Store the equipment and accessories in a dark and dry place at above freezing temperature. The ideal storage temperature is between 5°C(41°F) and 30°C(86°F).

For storage, it is suggested to recharge the battery between 50% and 75% charge, and charge the device at least once in 3-6 months to preserve battery lifespan.

DISPOSAL AND RECYCLING

The equipment is supplied in packaging to prevent it from being damaged in transit. The raw materials in this packaging can be reused or recycled. The equipment and its accessories are made of various types of material, such as metal and plastic. Never place defective equipment in your household refuse. The equipment should be taken to a suitable collection center for proper disposal. If you do not know the whereabouts of such a collection point, you should ask in your local council offices.



DISPOSAL OF THE APPLIANCE

This product has been marked with a symbol relating to removing electric and electronic waste. This means that this product shall not be discarded with household waste but that it shall be returned to a collection system. It will then be recycled or dismantled in order to reduce the impact on the environment. Electric and electronic equipment can be hazardous for the environment and for human health since they contain hazardous substances.



Li-ion

DISPOSAL OF AN EXHAUSTED BATTERY PACK

To preserve natural resources, please recycle or dispose of the battery pack properly. This battery pack contains Li-ion batteries. Consult your local waste authority for information regarding available recycling and/or disposal options. Discharge your battery pack by operating your tool, then remove the battery pack from the tool housing and cover the battery pack connections with heavy-duty adhesive tape to prevent short circuit and energy discharge. Do not attempt to open or remove any of the components.



DISPOSAL OF THE PACKAGING

The packaging consists of cardboard and correspondingly marked plastics that can be recycled. Make these materials available for recycling.

HAUSHOF

Manufacturer: ZHUHAI KELITONG ELECTRONIC CO., LTD.
Yongan Second Road, Liangang Industry Zone, Jinwan District,
Zhuhai City, Guangdong Province, China 519090