

Assembly

Before you clean

1. Remove loose dirt and impediments before deep cleaning.
2. Pretreating (optional):
 - 2a. Pretreating is recommended to improve cleaning effectiveness for heavily soiled carpet in high traffic areas such as entryway and hallways.
 - 2b. **BISSELL Stain Pretreat**
Spray any BISSELL Stain Pretreat formula onto heavy traffic areas, soiled areas or stains.
Allow to penetrate for at least 3 minutes.
Clean as normal, following the instructions below.

NOTICE

Some Berber carpets have a tendency to fuzz with wear. Repeated strokes in the same area may aggravate this condition.

Preparing the machine


1. Release flex hose by twisting the hose secure latch clockwise. Unwrap flex hose completely.
2. Attach the Large Stain Tool or Tough Stain Tool to the hose grip until it snaps together. Make certain the tool is securely attached.
3. Twist the Quick Release™ cord wrap clockwise to unwrap the power cord completely and plug into grounded outlet.

Filling the formula & water tank

1. Remove tank from the back of the machine by lifting up tank carry handle.
Note: This tank was designed with a flat bottom so it can be easily filled.
2. Unscrew the black cap and remove bottle insert.
3. Fill tank with hot tap water (140° F/60° C MAX) to the water fill line. Add 60 mL/2 oz of BISSELL 2X formula to the tank.
4. Replace the bottle insert in the tank and tighten the black cap. Replace the tank on the machine.

Tip

Make only one trip to the sink by bringing the entire portable cleaner. Fill and empty in the same trip.

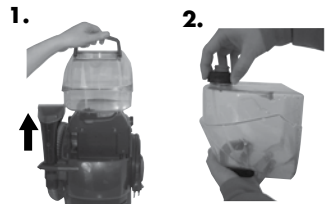

Operations

Cleaning with your spot cleaner

1. Plug unit in and turn on by pressing power button.
2. Hold cleaning tool approximately 2.5cm above soiled surface. Press spray trigger to apply cleaning solution to soiled area.
3. Using the brush on the cleaning tool, gently scrub area to be cleaned.
4. For thorough cleaning, spray additional solution while brush and suction are in contact with surface.
5. Apply downward pressure on cleaning tool and pull it toward you. The suction will remove the dirt and cleaning solution. Continue until no more dirt can be removed.
6. As a final step, use “drying strokes” (by not pressing the spray trigger) to remove as much liquid/moisture as possible. Repeat this step as often as necessary.

WARNING


Keep spray away from face. Failure to do so may result in personal injury.

IMPORTANT

Check the manufacturer's tag before cleaning upholstery. Test a small, hidden area for colourfastness. If colour is affected, do not use. If manufacturer's tag is missing or not coded, check with your furniture dealer.

Cleaning with 3"/4"/6" tool


1. Attach the 3"/4"/6" Tough Stain Tool to the handheld cleaning hose.
2. Press the spray trigger to mist solution over and onto the soiled area.
3. Release spray trigger and gently scrub the stain.
4. To lift the stain away, apply downward pressure on the tool and slowly pull it toward you. Then use “drying strokes” (by not pressing down trigger) to remove remaining moisture. Repeat as needed.

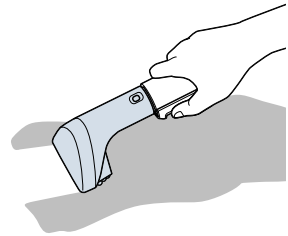

Cleaning with stain trapper tool*

***select models only**

1. Attach the Stain Trapper tool to the end of the hose.
2. Slowly move the tool back and forth over the stain. Be careful not to move the tool back and forth too quickly or soiled water will flow back into the hose.
3. To empty the tool, rotate the small tank on the bottom of the tool to unlock it.
4. Dump dirty water into a sink or toilet and rinse the tank out with clean water.
5. Replace the tank by lining up the locking teeth with their mating slots (make sure the two teeth that are closest together are pointed toward the brush). Turn the tank to lock it into place.

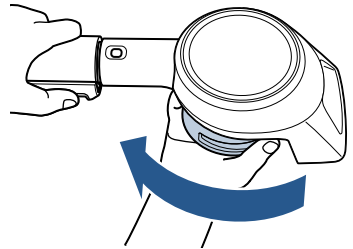


Maintenance & Care

Empty dirty tank

1. When the dirty tank reaches the "FULL" line on the tank it is time to empty.
2. Remove dirty tank and carry to a utility sink, toilet or outside (where you will dispose of the dirty water).
3. To unlock the dirty tank lid, rotate handle over the back of the tank. Remove lid and pour out dirty water. Rinse out dirty tank to remove any debris.
4. Replace top of tank, and rotate the handle forward to lock in place on front of tank.
5. Before replacing tank on machine, wipe debris from red filter.

⚠️ WARNING

To reduce the risk of fire, electric shock, or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

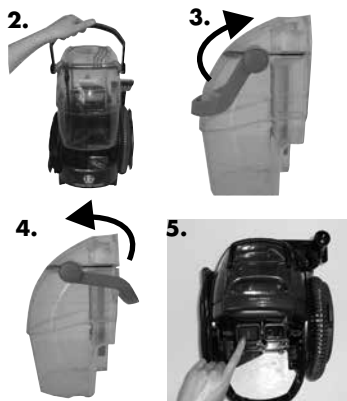

Cleaning machine

1. Remove and rinse the tools under clean, running water. Allow tools to dry.
2. It is recommended that you suction clean water from a bowl to rinse out the hose. Then lift end of hose and stretch out to ensure all water is cleared from hose.
3. Wrap the flex hose around the hose wrap and secure with latch.

Machine care (check regularly)

Cleaning Debris Filter

1. Remove all hair and debris from the red filter.
2. Place the Dirty Water Tank back onto the machine.

Machine storage

Store machine in a protected dry area.

Tip

For best results empty, rinse and dry tanks and tools before storing.

Debris Filter



NOTICE

To reduce the risk of a leaking condition, do not store unit where freezing may occur. Damage to internal components may result.

Troubleshooting

WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Reduced spray or no spray	Formula and water tank may be empty	Refill tank
	Formula and water tank may not be seated completely	Turn power OFF; Remove and reseal tank
	Pump may have lost prime	Hold end of hose below water level in tank to prime
Loss of suction power	Tanks may not be seated properly	Pick up both tanks and reseal them so they fit snugly on the unit
	Dirty tank has picked up maximum amount of dirty water and has reached full line	Empty dirty tank
	Formula and water tank is empty	Check fluid levels in formula and water tank