

# Instructions For Use

Read and save these instructions for best results with your new CorningWare® stoneware.

These instructions apply to CorningWare® stoneware products, including Baking Dishes, Casseroles, Pie Plates, Ramekins, Serving Pieces and Meal Mug™ cups.

Note: for Visions® and CorningWare® Stovetop Cookware, refer to the Visions® and CorningWare® Stovetop Safety, Use and Care instructions.

## \*\* Warning \*\*

All stoneware can break, but you can help prevent damage and personal injury by following these guidelines.

## STONEWARE

When used near extreme heat, stoneware can break.

DO NOT use with:

Standard	Countertop	Other
Stovetop Broiler BBQ Grill Microwave Browning Element Stovetop Pressure Cooker	Toaster/Countertop Oven Air Fryer Slow Cooker/Crockpot Rice Cooker Grilling Appliance Air Fryer function of Instant Pot® Pressure Cookers & Multicookers	Direct Heating Source Open Flames Camping Stove

When heated or cooled too rapidly, stoneware can break.

While cooking, DO NOT:	After cooking, DO NOT:
Use in oven unless pre-heated Transfer directly from freezer to hot oven Add liquid to hot stoneware Use to microwave popcorn Microwave while empty Microwave a tiny amount of food Use for foods with browning wrappers Use to boil water Use at temperatures over 500°F (260°C)	Place hot glassware in sink Place hot glassware on a metal stove grate Place hot glassware on a wet or cold surface Handle hot glassware with a wet or cold cloth

## Notes

1. The safest place for hot stoneware to cool is on a cooling rack, dry potholder or dry cloth.

If handled or cleaned improperly, stoneware can scratch or develop fine cracks, and can eventually break.

When handling, DO NOT:	When cleaning, DO NOT:
Bump against hard objects Attempt to repair when cracked	Soak in water for an extended period of time Use abrasive cleanser or abrasive scouring pads Clean with hard objects that can damage the surface, such as metal

## Notes

If stoneware or glass lid breaks, USE CARE when picking up sharp pieces to avoid cuts.

## LIDS

- For all lid types, follow Warnings above for Stoneware.
- If lid includes a vent feature, be sure to open it heating food in the microwave.

## Use

Your stoneware is designed for baking, serving and storing food.

Can be used in:	Stoneware Baking Dish	Meal Mug™	Serving Pieces	Plastic Cover	Glass Cover
Standard oven (preheated)	✓	✓	✓	No	✓
Standard convection oven (preheated)	✓	✓	✓	No	✓
Microwave	✓	If lid vented	✓	If vented	✓
Instant Pot® Pressure Cooker + Multicooker (see notes)	✓	No	No	No	No
Refrigerator	✓	✓	✓	✓	✓
Freezer	✓	✓	✓	✓	✓

1. Always preheat standard oven and standard convection oven before inserting stoneware for cooking.
2. Always vent plastic lids on baking dishes and mugs when microwaving.
3. Handle hot stoneware and glass lids with a dry potholder or cloth.
4. Place stoneware on a placemat or hot pad to avoid scratching countertop and table surfaces.
5. For plastic covers, use care with tomato and acidic sauces since they can stain.

### Instant Pot® Brand Pressure Cooker Notes (in addition to standard stoneware use and care instructions)

1. To see which size stoneware dish fits in specific Instant Pot® products, see list at [www.corningware.com](http://www.corningware.com).
2. Always place the stoneware dish on the Instant Pot® steam rack. DO NOT place the dish directly on the inner pot surface.
3. Be careful and use a dry potholder or cloth when removing the hot stoneware and steam rack from the inner pot.

### \*\*CAUTION when using Instant Pot® Brand Pressure Cooker\*\*

1. USE CARE when cooking foods that expand (such as rice), as they can cause overfilling and clog steam release function
2. MAKE SURE the top fill line of the food in the stoneware is below the inner pot Max PC Fill line.
3. DO NOT use either the glass or plastic lid when cooking in the pot.
4. DO NOT stack stoneware dishes on top of each other in the pot.
5. DO NOT use the Sauté function and Air Fryer function.

## Care

Can be cleaned:	Stoneware	Meal Mug™	Serving Pieces	Plastic Lids	Glass Lids
Dishwasher	✓	✓(Lid top rack)	✓	Top rack	✓
Hand washing	✓	✓	✓	✓	✓
Cleaning pads	Plastic or nylon only	Plastic or nylon only	Plastic or nylon only	No	Plastic or nylon only
Cleanser	Non-abrasive only	Non-abrasive only	Non-abrasive only	Dish soap only	Non-abrasive only

## Notes

1. Before first use, wash stoneware and lids thoroughly.
2. Allow items to cool before placing in sink or water.
3. When using a dishwasher, load items to avoid bumping against other items.