

## Troubleshooting Guide

### **Please note!**

The HC4250 hair clipper requires simple maintenance to ensure a long and trouble-free life.

Two of the key things you should do is make sure any shaving debris is cleaned out after each use and periodically place a drop of oil on the blades as directed in the IB.

This prevents clogging up and blade friction that reduces performance and shortens battery life.

### **CARE FOR YOUR HAIRCLIPPER**

- To ensure long lasting performance of your clipper, clean the blades and unit regularly.
- Always keep the clipper in the provided travel pouch.
- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- Do not use harsh or corrosive cleaners on the unit or blades.
- Cleaning should be done with a soft brush.
- After each use - brush the accumulated hair from the blades.

### **WASHABLE CLEANING**

- The QuickCut Clipper is fully washable for easy cleaning.
- Ensure the appliance is switched off and unplugged from the mains.

### **WASHOUT PORT INSTRUCTIONS**

Note: Never rinse, wash or otherwise subject this product to liquid whilst the power cord is connected.

- For best results, keep trimmer running while running it under the tap. Allow water to run through the washout port and over the blades. Recommended to rinse after each use.
- Ensure the clipper is dry after cleaning.
- For more thorough cleaning the blade set can be easily removed to wash any hair trimmings from the blades. To release the blade set, push the blade set release button found on the base of the clipper.

- Ensure the blades are dry after rinsing under the tap. To reattach, align the blade set onto the clipper and push the blade set towards the clipper body until it clicks into place.
- Place a small drop of cutter or sewing machine oil onto the blades at each end and at the middle point of the blades. Turn the unit on for a few seconds to distribute the oil then turn off and wipe off excess oil.