



User Instructions

STAINLESS STEEL CUTLERY

BEFORE FIRST USE

Remove any tags or stickers. Rinse with warm soapy water and towel dry.

CARE AND CLEANING

Hand wash only in hot water using a mild soap or detergent. Rinse and towel dry immediately to prevent rusting. Excess heat and detergent from automatic dishwashers can damage or stain the blades. Do not allow blades to soak in water. Do not allow food to remain on blade after use, as this may cause stains. If blades are stained, use a non-abrasive metal polish to remove stains.

MAINTENANCE

To retain fine edges on blades, use a sharpening steel between each use. Professional sharpening is recommended if knife edge cannot be brought back with a sharpening steel.

CAUTION

Use extreme caution to protect against injury. These knives are extremely sharp. Never use a knife as a can opener, pry bar, screwdriver, wedge, or hand tool. Never handle a knife by the blade. Keep sharp edges pointed away from you when laying a knife down. Never attempt to catch a falling knife. Keep all knives away from children. Store properly in a knife block or other safe place.

LIFETIME LIMITED WARRANTY

This product is distributed by Gibson Overseas, Inc. and is warranted against original defects in workmanship and materials under normal household use, not commercial.

If any piece fails to conform to this warranty, return item with proof of purchase to the address below and Gibson will replace the item at no charge with one of equal value. Damage caused by misuse or failure to use proper care in accordance with instructions provided is not covered. This warranty provides specific legal rights and you may also have other rights which vary from state to state.

For warranty service or questions, please contact Gibson at the address or phone number below. You can also find us online at www.gibsonusa.com/warranty.

Gibson Overseas, Inc. 2410 Yates Avenue, Commerce, CA 90040-1918, USA.

1 (800) 281-2810.