 
 
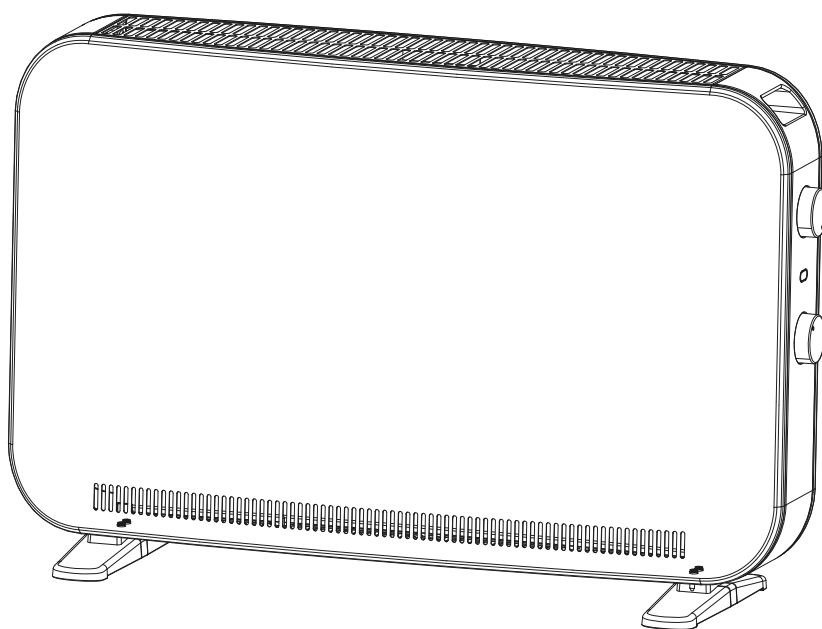 


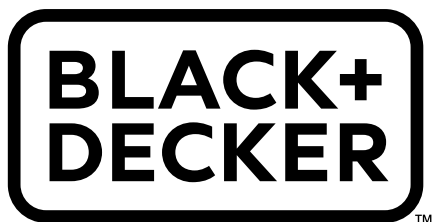

This product is only suitable for well-insulated spaces or occasional use.

www.blackanddecker.co.uk

BXCV41001GB

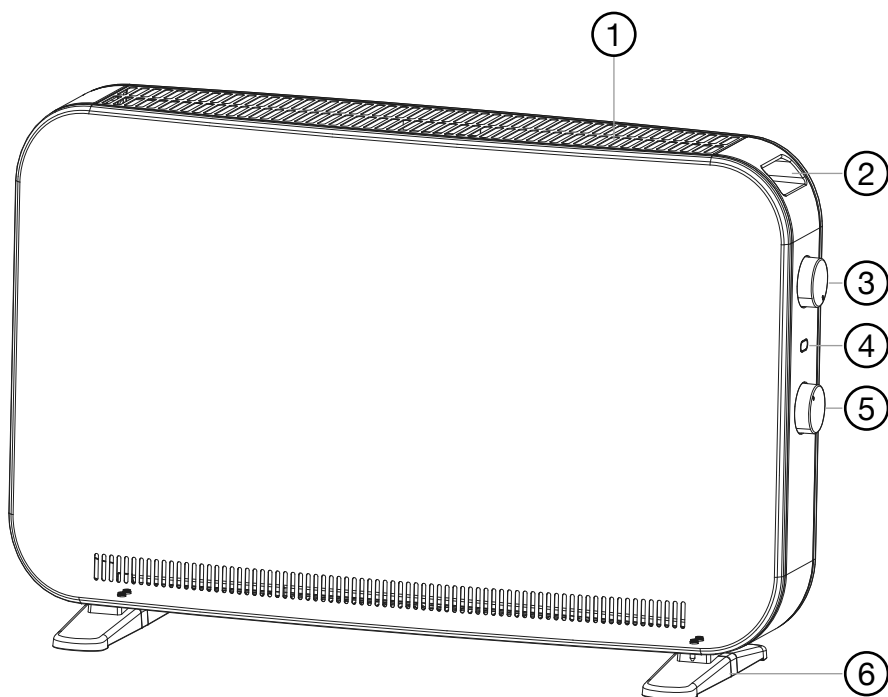

What's in the box

Instruction Manual
Convection Heater
Feet
Screws

Features

1. Air Outlets
2. Handle
3. Adjustable Thermostat
4. Indicator Light

5. Heat Selection Dial

6. Feet

Intended Use

Your BLACK+DECKER BXC41001GB 2KW Convection Heater has been designed for heating small and medium spaces.

This appliance is intended for indoor household use only.

Thank you for choosing BLACK+DECKER. We hope that you will enjoy using this product for many years.

Safety Instructions

⚠ WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury.

- ◆ Read this manual carefully before using the appliance.
- ◆ Retain this manual for future reference.
- ◆ The intended use is described in this manual.
- ◆ The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- ◆ Remove the unit from its packaging and check to ensure it is in good condition before using.
- ◆ Do not let children play with parts of the packing (such as plastic bags).

⚠ WARNING: When using mains powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

Using Your Appliance

Please read the operating instructions carefully before using your heater for the first time.

- ◆ Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- ◆ The heater must not be located immediately below a socket outlet.
- ◆ The appliance air inlet and outlet openings must not be obstructed in any way.
- ◆ In order to avoid overheating, do not cover the heater.
- ◆ Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- ◆ Never move the heater during operating, always unplug heater when not in use.
- ◆ Never use the appliance if the appliance or cable is damaged. The appliance may only be opened up and repaired by authorised qualified personnel.
- ◆ The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

- ◆ Children of less than 3 years should be kept away unless continuously supervised.
- ◆ Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- ◆ **⚠CAUTION:** Some part of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- ◆ Close supervision is necessary when the product is used by or near children or infirm persons.
- ◆ Do not allow children to play with the appliance.
- ◆ Do not let the cable hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- ◆ Before use ensure the cable is fully extended and is not in contact with any part of the heater.
- ◆ Do not pull the plug out by the cable as this may damage the plug and/or the cable.
- ◆ Do not carry the appliance by the power cable.
- ◆ Do not use this product for anything other than its intended use.
- ◆ This appliance is for normal household use only.
- ◆ **FOR INDOOR USE ONLY.** Do not use the appliance outdoors.
- ◆ Do not operate with wet hands.
- ◆ Do not leave the appliance unattended when switched on.
- ◆ The use of accessory attachments is not recommended by the appliance manufacturer. Use of an extension cable with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cable, appliance or plug point. Do not place the extension cable in a position where it can be pulled on by children or animals or tripped over.
- ◆ Ensure that no other high current appliances are plugged into the same circuit with your heater as an overload can occur.
- ◆ Always unplug the appliance when not in use or before cleaning.
- ◆ Do not operate any product with a damaged cable or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.

- ◆ The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.

Safety Of Others

- ◆ Close supervision is necessary when any appliance is used by or near children.
- ◆ Children should not play with the appliance.
- ◆ Cleaning and user maintenance should not be undertaken by children without supervision.
- ◆ Take care when any appliance is used near pets.
- ◆ Do not allow the cable to become twisted or come into contact with children.

After Use

- ◆ While cleaning, DO NOT use a wet cloth or use water on any part of the unit, as this may cause a short circuit or electrical shock.
- ◆ Keep this unit clean. Do not allow objects to enter the ventilation opening as this may cause electric shock, or damage to the unit. Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- ◆ Check all inlets and outlets from time to time for accumulated dust.

- ◆ Disconnect the unit from mains outlet when it is not in use, or before relocating or cleaning it.
- ◆ Switch off, remove the plug from the socket and let the appliance cool down before leaving it unattended and before changing, cleaning or inspecting any parts of the appliance.
- ◆ When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.

Inspections And Repairs

- ◆ Do not attempt to dismantle, repair or remould any part of the unit. This should only be done by a qualified service agent. Even the change of power cable should be done by a qualified person.
- ◆ In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the manufacturer.
- ◆ In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned precautions and instructions, could affect the safe operation of this product.

Additional Safety Instructions for This Appliance

- ◆ Install the unit on flat and hard floor to diminish vibration or noise.
- ◆ Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- ◆ Arrange the cable such that it is not a trip hazard.
- ◆ Ensure that the unit is switched off after use.
- ◆ Do not immerse cables, plugs or any part of the appliance in water or any other liquid.
- ◆ Operate the unit only at the voltage specified.
- ◆ Do not use the unit near open windows, as contact with rain and other natural elements could cause an electrical hazard.
- ◆ Do not put heavy objects on the appliance.
- ◆ Do not tip the unit on its side.
- ◆ Never insert any other object into the unit body to avoid any hazard or unit failure.
- ◆ Do not put the unit close to heat-generating devices or near flammable and dangerous materials.
- ◆ Do not use near or point the heater towards furniture, animals, curtains or other inflammable objects. Keep combustible materials, such as furniture and bedding, at least 1 metre from the front, sides, and rear of the heater.
- ◆ Do not place the cord under carpet, rugs or furniture. The unit is also fitted with a tip over switch. Do not use on thick and long pile carpets, as the tip over switch may not be activated.
- ◆ If the supply cable is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ◆ For optimal airflow circulation, leave a distance of at least 1 metre around the appliance on every side.
- ◆ Always direct the airflow in order to optimise heating. Avoid corners, small objects and other surfaces or objects which may impede the airflow.
- ◆ The appliance must be positioned so that the plug is accessible.
- ◆ Always turn the heater off and unplug it from the mains before attempting to move it. Due to the presence of hot parts, hold the heater only by the handle provided.

⚠WARNING: Do not place the unit on or near a hot gas electric burner.

Electrical safety

Before use, check that the mains voltage corresponds to the voltage on the rating plate.



Always check that the mains voltage corresponds to the voltage on the rating plate..

- ◆ Appliance plugs must match the outlet. Never modify the plug in any way.
- ◆ Do not use any adapter plugs with this appliance. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- ◆ To avoid the risk of electric shock, do not immerse the cord, plug or appliance in water or other liquid.

Extension cables

- ◆ Up to 30m (100 ft) can be used without loss of power.
- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or an authorised BLACK+DECKER Service Centre in order to avoid a hazard.

Labels on Appliance

The following pictograms along with the date code are shown on the appliance:



▲WARNING: Hot surface



▲WARNING: Do not cover

▲WARNING: Before assembling, switch the appliance off and remove the plug from the socket.

Features

1. Air Outlets
2. Handle
3. Adjustable Thermostat
4. Indicator Light
5. Heat Selection Dial
6. Feet

Use

 
About the Controls

- ◆ 2 heat settings
- ◆ Thermostatic Control

Installing the Feet

- ◆ To use the convection heater, start by installing the feet.
- ◆ To install the feet, turn the heater upside down and locate the foot notches at either end of the base.
- ◆ Align the two tabs in each of the foot brackets with the corresponding notches on the base of the unit, then push them in until they click into place.
- ◆ Once the two feet are correctly secured into place, thread one of the included screws through each of the corresponding screw-holes on the foot brackets.

Ensure the feet are correctly positioned before attempting to use the unit. The feet are correctly installed if the two screws on the base of the unit sit flush inside the two U-shaped sections of each foot bracket, and the screw-hole on each of the brackets is facing outwards.

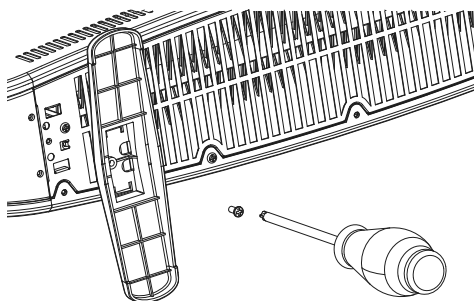

Turning the Unit On or Off

- ◆ To power the unit on, turn the heat selection dial to any position other than 0 and the thermostat dial clockwise, away from the Min position. The pilot light on the unit's control panel will come on and air will start emitting from the front grille to show the unit has been turned on.
- ◆ To power the unit off, turn the heat selection dial to the 0 position and the thermostat dial counter-clockwise to the Min position. The pilot light on the unit's control panel will go out and air will stop emitting from the front grille to indicate the unit has been turned off.
- ◆ **▲WARNING:** DO NOT touch the grille while the heater is operation, as it will be very hot and there will be a risk of burns.
- ◆ **▲WARNING:** DO NOT store the unit directly after turning it off. Allow for time for the unit to cool down before storing.

Mode Selection

- ◆ This heater offers a choice of 3 heat settings - Low (I), Medium (II) and High (III).
- ◆ Turn the heat selection dial from left to right from the 0 position to cycle between Off, Low, Medium and High settings, or turn this dial from right to left from the High heat setting to cycle between the High, Medium, Low and Off settings
- ◆ Turn the heat selection dial to the 0 position to turn the unit off.

Temperature Control

- ◆ This heater is equipped with an adjustable thermostat, which allows for temperature control within each of the 3 heat settings.
- ◆ Use the thermostat dial to manually increase or lower the heating temperature. Turn this dial clockwise from the '-' to the '+' position to increase the temperature, or counter-clockwise from the '+' to the '-' position to decrease it.

Cleaning and maintenance

- ◆ **▲WARNING:** Before cleaning and maintenance, switch the appliance off and remove the plug from the socket, to prevent electric shock.
- ◆ Do not immerse any part of the appliance, power cord or plug in liquids.
- ◆ Use a soft damp cloth to wipe the surface. Avoid using detergent, spray or chemicals as these may cause damage to the appliance.
- ◆ **▲WARNING:** DO NOT allow water or steam to enter any part of the appliance, as this could cause it to malfunction.
- ◆ Store the appliance in a cool, dry place, ideally in its original packaging.

Mains plug replacement

If a new mains plug needs to be fitted:

- ◆ Safely dispose of the old plug.
- ◆ Connect the brown lead to the live terminal in the new plug.
- ◆ Connect the blue lead to the neutral terminal.
- ◆ If the product is class I (earthed), connect the green/yellow lead to the earth terminal.

Note! If your product is class II double insulated (only 2 wires in the cord set), no connection is to be made to the earth terminal.

Follow the fitting instructions supplied with good quality plugs. Any replacement fuse must be of the same rating as the original fuse supplied with the product.

▲WARNING: The above section on mains plug replacement is for authorized service centre persons.

Protecting the environment



Separate collection. Products and batteries marked with this symbol must not be disposed of with normal household waste.

Products and batteries contain materials that can be recovered or recycled, reducing demand for raw materials. Please recycle electrical products and batteries according to local provisions. Further information is available at www.2helpU.com.

Technical data

		BXCV41001GB
Input voltage	V AC	220 - 240
Frequency	Hz	50/60
Power input	W	1830 - 2000W
Weight	KG	3.1

Product Guarantee

This product comes with a 2 Year guarantee from the original date of purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer. This guarantee is in addition to and in no way prejudices your statutory rights.

The Following Conditions Apply:

- ◆ The product must be returned to the retailer with proof of purchase or a receipt within the 1st year of purchase. For any product related issues after 12 months please contact our customer services team.
- ◆ The product must be installed and used in accordance with the instructions contained in this instruction guide.
- ◆ It must be used only for domestic purposes.
- ◆ It does not cover wear and tear, damage, misuse or consumable parts.
- ◆ This guarantee is valid in the UK and Republic of Ireland.

For all customer service enquires please contact us below;

RKW,

Sutton House,

Berry Hill Road,

Stoke-on-Trent,

ST4 2NL

Email blackanddecker@rkw ltd.com

Tel 0333 220 6089

Black & Decker® and BLACK+DECKER™ and the Black & Decker® and BLACK+DECKER™ logos are registered trademarks of The Black & Decker® Corporation and are used under licence. All rights reserved. Imported and Distributed by RKW LTD, Sutton House, Berry Hill Industrial Estate, Berry Hill Road, Stoke-on-Trent, ST4 2NL

Model Identifier(s): BXCv41001GB					
Item	Symbol	Value	Unit	Item	Unit
Heat Output				Type of heat input for electric storage, local space heaters only (select one)	
Nominal heat output	P _{nom}	2.015	kW	Manual heat charge with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0	kW	Manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max, c}	2.015	kW	Electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				Fan assisted heat output	No
At nominal heat output	el _{max}	0	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el _{min}	0	kW	Single stage heat output and no room temperature control	No
In standby mode	el _{SB}	0	kW	Two or more manual stages, no room temperature control	No
				With mechanic thermostat room temperature control	Yes
				With electronic room temperature control	No
				Electronic room temperature control plus day timer	No
				Electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				Room temperature control with presence detection	No
				Room temperature control with open window detection	No
				With distance control option	No
				With adaptive start control	No
				With working time limitation	No
				With black bulb sensor	No
Contact Details:	RKW LTD, Sutton House, Berry Hill Industrial Estate, Berry Hill Road, Stoke-on-Trent, ST4 2NL				

(Original instructions)

ENGLISH



