

How to use the PetSafe® Automatic Ball Launcher

Table of contents:

[Welcome](#)

[Understanding](#)

[Step 1: Set up](#)

[Step 2: Angle and distance setting](#)

[Step 3: Training](#)

Welcome


to your new PetSafe® Automatic Ball Launcher.

A few things to keep in mind:

-  Designed for indoor and outdoor play.
-  Nine distance and six angle settings.
-  This product is water resistant but not waterproof.


Understanding

Front view

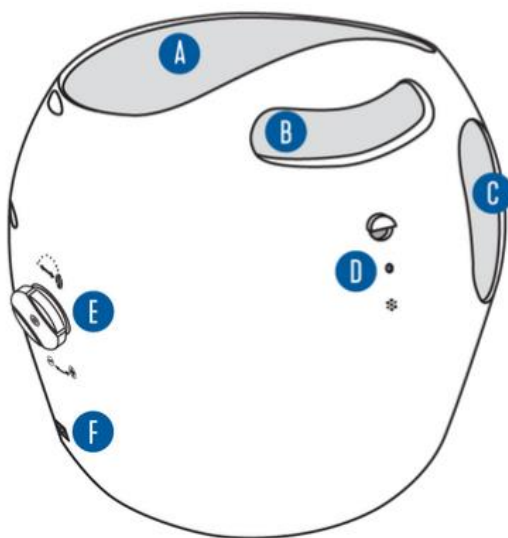


-  **G Hopper**
Houses standard sized tennis balls.
-  **H Carry handle**
Allows for easy transportation of the ball launcher.
-  **I Launch pocket**
Releases tennis balls.
-  **J Motion sensor**
Detects motion up to seven feet away to pause the launch of tennis balls.
-  **K Distance knob**
Sets the distance of the ball launch by turning to the left or right.
-  **L Adapter plug**
Location for the optional power cord to plug in.

Bottom view

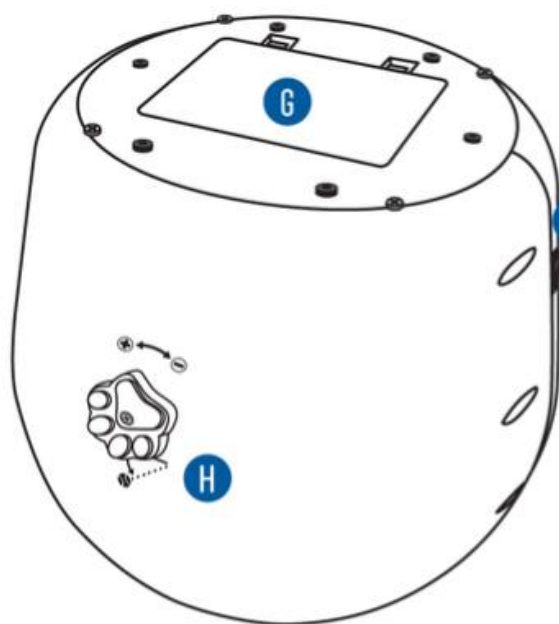

- M** Battery compartment
Houses 6 D-cell Alkaline batteries (not included).
- N** Angle knob
Sets the height of the ball launch by turning to the left or right.
- O** Power switch
Turns the ball launcher on (I) or off (O).


Included parts

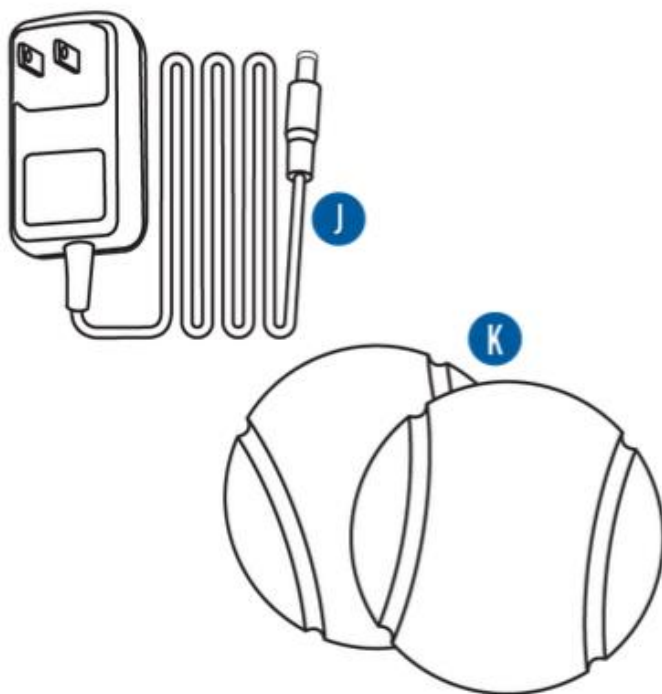

- P** Power cord
Plugs into a standard electrical outlet for indoor ball launcher use.
- Q** Standard sized tennis balls
Two standard tennis balls are included with this product.

Step 1: Set up

Important: Set up the ball launcher away from your dog as they are not yet acclimated to the sounds the unit will make. Training will be located further in the article.

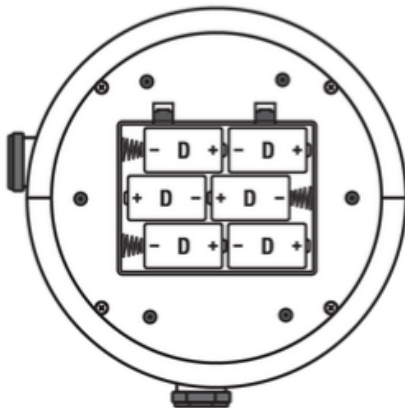


- Y** Locate the battery compartment on the bottom of the ball launcher and insert batteries (not included).



- Z** Turn the unit on and listen for the tone to play. The unit will then beep twice.

Note: For optimal use, we recommend using the power adapter indoors only. Otherwise, use battery power.

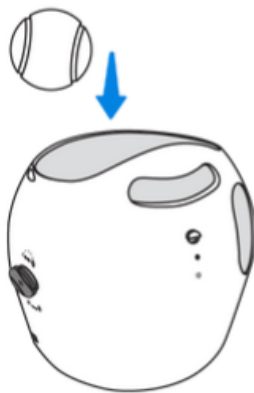

- !** Place one ball in the hopper area.




- !** Allow the ball to launch, as is, once. The ball launcher will come out of the package set to the lowest distance and angle settings.

Step 2: Angle and distance setting



Angle knob

Distance knob

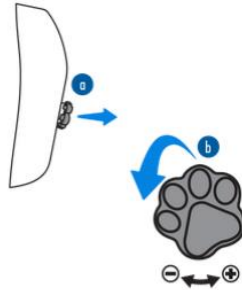

- Y Adjust the angle or distance by pulling(a) and turning counter-clockwise(b) to increase the distance or height.

Note: Angle and distance settings may need to be adjusted for indoor or outdoor play.

Materials needed:

- Treats
- Praise
- Tennis balls




- Y Place the ball launcher indoors or outdoors ensuring there is plenty of room to launch a tennis ball. The unit should be off.

Important: Ensure there are no tennis balls in the launcher at this time.



- 2 Allow your dog to approach the ball launcher offering treats and praise as he does so. Repeat this until your dog is comfortable around the unit.

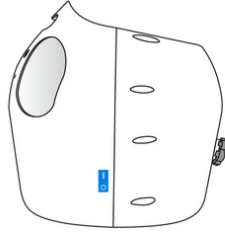

- 1 Turn the unit on. Give treats and praise as the unit tones and beeps. Turn the unit on and off allowing your dog to feel comfortable with the sounds. Repeat as necessary.



- 1 With your dog at a distance, place one tennis ball inside the launcher and allow your dog to watch it launch. Offer treats and praise and repeat until your dog is comfortable from a distance.



- 1 Move your dog and the unit closer to each other and continue placing a ball into the launcher. Offer treats and praise as your dog begins to play with the tennis balls.

Note: Ensure you and your dog are not within the seven foot safety zone of the ball launcher. Otherwise, the unit will not launch.