



# Safety tips to cruise through cooking! The reason E0 shows on the digital screen is:



When no utensil is placed.



when non-IB utensil is placed

Note: The heating will begin only once an IB utensil is placed on the plate.