

Troubleshooting Steps

1. Please do not use the pan in the dishwasher or oven as this will damage the non-stick properties.
2. Please do not use with high heat. Low to medium heat is recommended.
3. Please use wooden and silicone spatulas, not other sharp spatulas.
4. Please use sponge or soft scouring pad to clean.
5. Detailed size information is available on the page, please read it carefully before purchasing.
6. The pan is equipped with spout, so steam may escape, so please be careful with the steam when using the pan.