



How to use the Page Turner

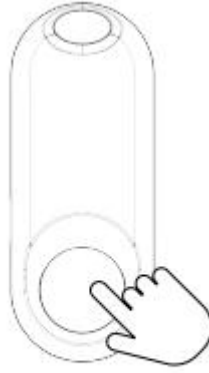

1



2

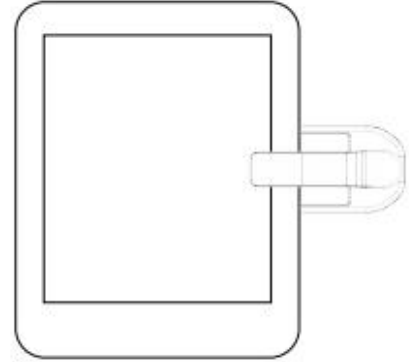

3

Step 1: Click the screen sensor clip button and the indicator shows blue light on.

Step 2: Click the RF remote control button. The screen sensor clip indicator light flashes blue three times. Connection successful.


Step 3: Clip the screen sensor clip on the kindle in a suitable position . Press the RF remote control button to turn the page normally.

Where can I place the screen sensor clip on my kindle?


1. The shaded area is the placement area. (P1-P2)
2. A sensor clip can only control one direction, clip on the left to turn the previous page, clip on the right to turn the next page. (P3)



P1

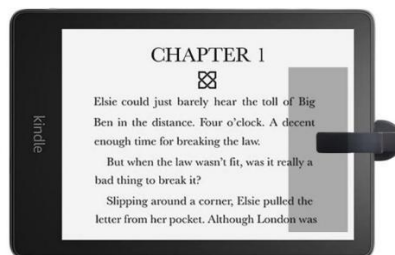

P2

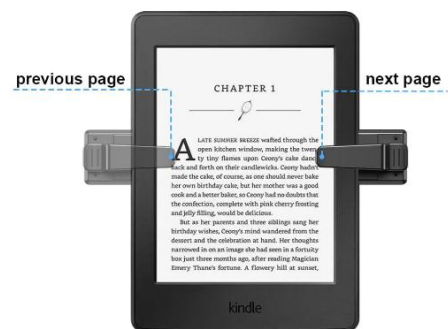

P3

Notice before use:



The maximum thickness should **not exceed 11.5mm**, if it is over, please take off the protective cover before use.



The **metal tip** of the screen sensor clip needs to be kept **clean** and **in contact with the screen** when in use.

No worry about this purchasing!

30 days no reason money back guarantee, 1 year Warranty and 24 hours customer service!
If you encounter any issues with the machine, refer to the user manual or contact customer support for assistance.

If it doesn't work on your device (not compatible with your device), please contact us and we will give you a satisfactory answer.

FYQK2@outlook.com