

## TO OPERATE:

- Once unit is completely assembled, load balls where indicated on carriage.
- Slide the power switch to "ON" position .
- Tilt the pitching machine with opening toward batter to the desired pitching angle.

**Note:** Unit has 3 different pitching angles.

- When machine is turned on and the motor reaches its operating speed, a ball will drop into the chute. Red light will come on immediately before each ball shoots out the "chute opening".

**Note:** This first ball may not pitch at full speed and distance due to location of lever when machine is turned on.

Second ball will be best to gauge location of pitch relative to batter. Readjust position of unit and angle as needed.

- The remaining balls will drop into the machine as the pitching cycle continues.
- The unit will pitch approximately seven (7) seconds apart.
- The red light comes on immediately before each pitch.
- After all loaded balls have been pitched, the motor will shut off. The red light will remain on until more balls are placed in the carriage or unit is switched to "OFF" position.

## NOTE:

Be sure to turn power to "OFF" position when reloading pitching balls on carriage. Pitching balls will automatically activate motor if unit is "ON". When the pitching balls have been loaded onto carriage, make sure batter is ready and slide switch to "ON" position.



Franklin Sports Inc.  
Stoughton, MA 02072

Made in China


For Replacement Parts Call:  
1-781-341-5178 or 1-800- 225-8649  
OR visit [www.franklinsports.com](http://www.franklinsports.com)



## Assembly and Playing Instructions

### Pitching Machine


### 6696S3, 6696S11

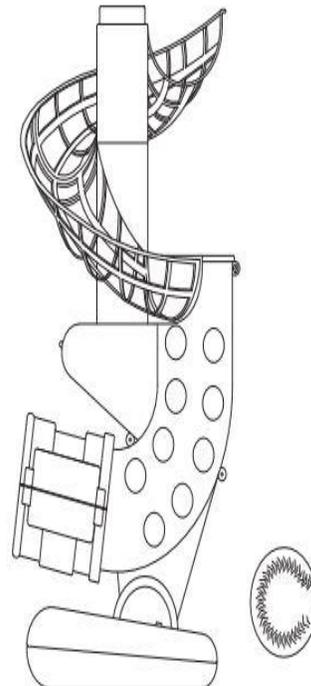

#### Please Read: Important Information:

- This product is intended only for outdoor recreational use in pitching lightweight plastic baseballs.
- Use only with balls designed for use with this item by Franklin Sports Inc.
- All person (s) not batting should stand behind the pitching machine.
- Do not use the product for any other purpose or with any other object or ball.
- Do not use regulation baseballs or teeballs.
- Do not point toward breakable objects, for example: windows, outdoor lights, etc.
- If the product jams, turn machine to "OFF" position. Pick it up, point toward ground away from a person or breakable object, dislodge ball.
- Use product only on a flat surface.
- Adult Assembly and Supervision Required.


## Assembly and Playing Instructions Pitching Machine

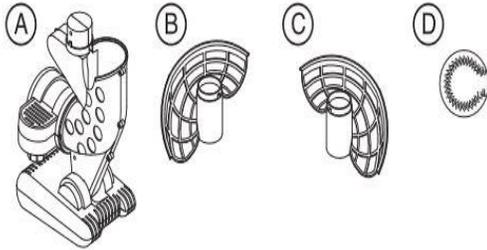

### PARTS LIST:

Part #	Description	Quantity
(A)	Base Unit	1
(B) and (C)	Ball Carriages	2
(D)	Plastic Baseballs	6

### BATTERY INSTALLATION:

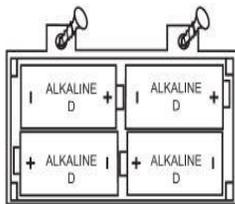

Remove screws and  
slide door to open

Insert batteries into base unit (A) as shown.

- Requires 4 "D" size batteries (not included)
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

### TO ASSEMBLE:

#### Base Unit

- Assemble the two sections of the ball carriage by inserting one carriage column into the other.
- Interlock tabs at mating corners of the carriage sections.
- Press firmly together.
- Align the base unit with the bottom of the carriage column and press the carriage firmly down onto the base.
- Interlock tabs at mating corners of the carriage assembly and the base.
- Load the balls into the carriage.

