



COMPONENT PARTS


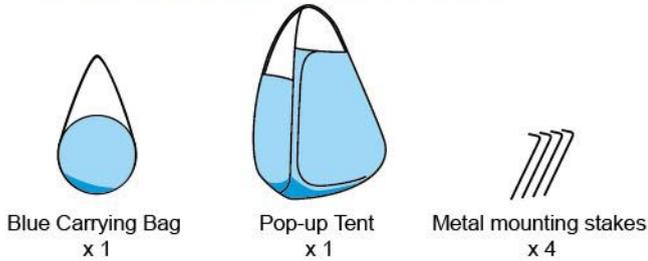


SPECIFICATION

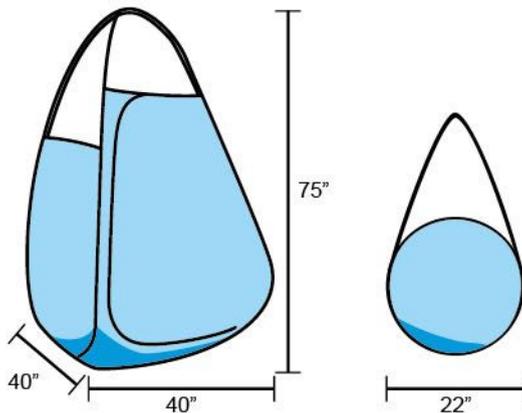

Product Name	Pop Up Tent
Weight	2500g/5.5LB
Material	Polyester+Steel
Color	● Blue ● Green ● Camouflage

FOLDING INSTRUCTIONS

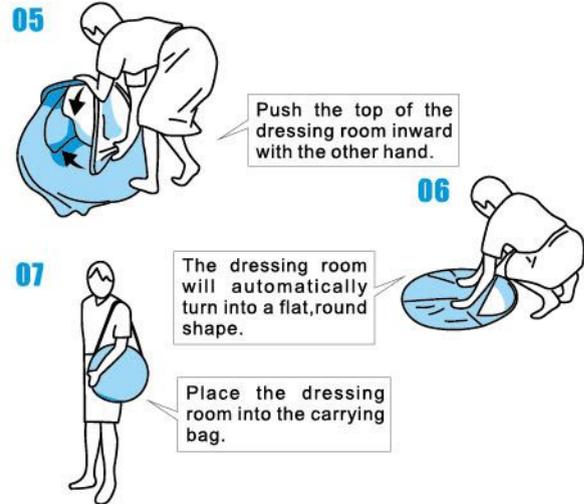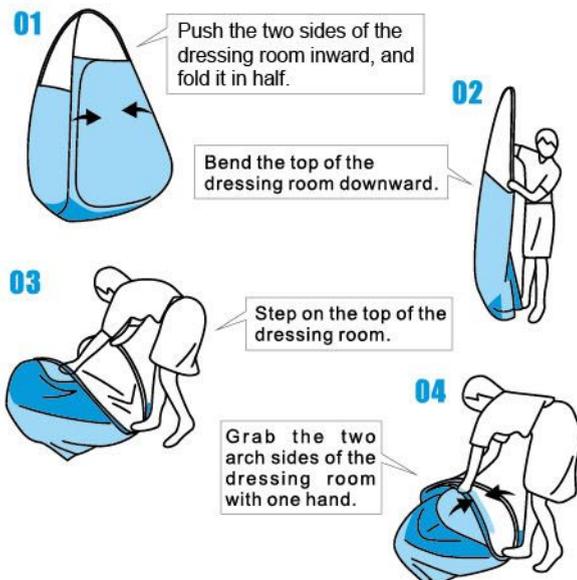

CARE AND CLEANING OF WOLFWISE TENTS

- 1 Set up tent before cleaning.
- 2 Wipe down using damp cloth with mild hand soap.
- 3 Dry tent naturally. Make certain that thicker area such as double-stitched seams are dried thoroughly before proceeding to store the tent. Damp tent can result in the growth of mold and mildew.
- 4 Roll the dry tent loosely, and store it in a dry and cool place. To prevent dust from making contact, cloth can be placed over the tent.

WARNING: Never use detergent, or wash/dry the tent in washer/dryer as this will damage the protective coating of the fabric.

GENERAL TIPS

Place ground cloth under the tent whenever possible to avoid the bottom of the tent from tearing and collecting unwanted water. Ground cloth are less expensive than a torn tent.

- Try not to wear shoes inside your tent.
- Bring a small rug or mat to put inside the tent door to wipe off mud and catch sand.
- Sweep the tent floor daily to prevent damage from stones.
- Do not keep food inside tent. Animals can sense the smell and tear through the fabric in search of food.