



**H2 Touch Pro Hi-Res Player**  
User Manual

# Contents

Read Before Use .....	4
Chapter I Product Introduction .....	5
1. Product features .....	5
2. What's in the box ? .....	6
3. Product safety information .....	7
4. Product illustration and function .....	9
Chapter II Operation Instructions .....	11
1. Power ON/OFF .....	11
2. Lock mode .....	11
3. Reboot the player .....	11
4. Return .....	12
5. Volume adjustment .....	12
6. Introduction of touch gestures .....	12
7. Drop-down menu .....	13
Chapter III Introduction of Functions .....	14
1. Music .....	14

2. Playing Set .....	15
3. Equalizer .....	17
4. Folder .....	18
5. Favorites .....	19
6. Search .....	20
7. WIFI .....	22
8. Bluetooth .....	23
9. E-book .....	24
Chapter IV System Set .....	25
1. Screen brightness .....	25
2. Backlight time .....	26
3. Power off time .....	26
4. Sleep time .....	26
5. Lock the screen clock .....	26
6. Automatically update .....	27
7. Language setting .....	27
8. Wallpaper settings .....	27

9. System upgrade .....	28
10. Product information .....	28
11. Restore default set. ....	28
12. Format disk .....	28
Chapter V Connecting Computers .....	29
1. Connect to the computer. ....	29
2. Upload and download files .....	30
3. Disconnect from the computer .....	30
4. Batteries and charging .....	31
5. Trouble Shooting .....	32
6. Technical specifications .....	35

## **Read Before Use**

**Thank you for purchasing HIFI WAKER H2 Touch Pro!**

Please read the manual carefully before using the player, which will help you to use this product better.

If you have any problems during using the product. Please contact our customer service, Thank you!

**Website:** [www.hifiwalker.com](http://www.hifiwalker.com)

**Customer Service:** [support@hifiwalker.com](mailto:support@hifiwalker.com)

**Facebook:** [@HIFIWALKER.Official](#)

**YouTube:** HIFI WALKER

## **Chapter I    Product Introduction**

### **1. Product features**

- 3.5-inch high-resolution IPS true color full touch and multi-touch capacitive screen.
- Pure aluminum alloy material, CNC processing technology with 2.5D tempered glass mirror.
- High-fidelity digital lossless music player.
- Professional ARM 64-bit quad-core Cortex-A35 audio processor and imported stereo headphones decode to restore real audio.
- Bluetooth 4.2 provides fast pairing and stable connections.
- Album cover and lyrics synchronization.
- The breakpoint function memorizes the track position of the stopped song, the startup volume, or the custom volume.
- High-precision Time function.
- An external TF card with a maximum capacity of 1TB.
- CUE breakpoint function.
- MP3, WMA, WAV, FLAC, APE, OGG, M4A, AIFF, DTS, DSF, DFF, DSD256, and other formats, with

excellent sound quality.

- Equalizer functions include Custom, Vocal, Pop, Jazz, Rock, Metal, Classical, Dance, Sad, and Off.
- Multiple play modes: playlist, single play, random play, and list loop.
- Add my favorite songs to playlist.
- Multi-theme wallpapers and DIY wallpapers.
- Song search function, genre and voice search.

## **2. What's in the box ?**

1\* HIFIWALKER H2 Touch Pro Player

1\* TYPE C USB Cable

1\* Card Ejection Pin

1\* Velvet bag

1\* Quick Guide

### 3. Product safety information


**Warning:** This manual describes how to properly use your new MP3 player. Read it carefully to avoid damaging the player and injuring yourself. Pay particular attention to the following serious warnings:

- Do not disassemble, repair, or modify this product on your own.
- Do not get the product wet or drop it in water. If the product gets wet, do not switch it on because you could get an electric shock.
- Do not use the product during a thunderstorm, as it may cause malfunction or a risk of electric shock.
- Do not use the earphones while you are driving a bicycle, automobile or motorcycle. It can cause a serious accident, and furthermore, is prohibited

by law in some areas. Using the earphones while walking or jogging on a road, in particular, on a crosswalk can lead to a serious accident.

- For your safety, make sure the earphone cable does not get in the way of your arm or other surrounding objects while you are taking exercise or a walk.
- Do not place the product in damp, dusty, or sooty areas because these environments could lead to fire or electric shock.
- Using earphones or headphones for an extended time may cause serious damage to your hearing.
- Do not spray water on the product. Never clean the product with chemical substances such as benzene or thinner, as it may cause fire, electric shock or deteriorate the surface.

## 4. Product illustration and function

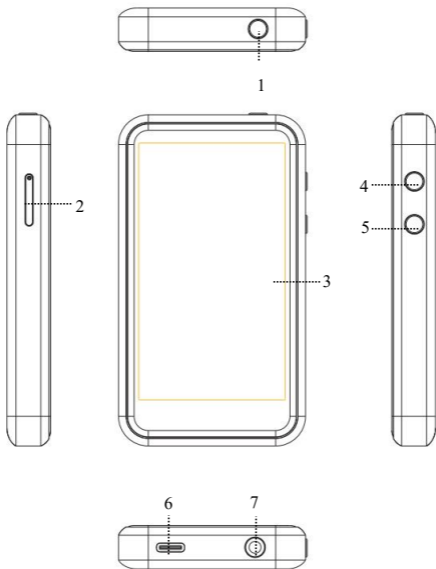

No.	Description	No.	Description
1	Power button & Screen lock button	2	TF card tray
3	Full touch screen	4	Up volume button
5	Down volume button	6	USB connection port
7	3.5mm earphone connection jack		

## Chapter II Operation Instructions

### 1. Power ON/OFF



Press the power button and hold for 3 seconds to turn on/off the player. When turning on, the boot interface will be shown in the display.

### 2. Lock mode



Short press the power button to enter into screen-lock mode(the screen will be locked automatically). Then touch the screen and slide up to unlock.

### 3. Reboot the player

If the player crashes, press the power button and hold for 8 seconds, then release it to reset the system. If the

player still cannot be turned on, check that the remaining amount of the player battery is sufficient to turn on.

#### **4. Return**

"<" : return back to last menu.

"": return back to main menu.

#### **5. Volume adjustment**

"Volume+" :to turn up the volume.

"Volume-" :to turn down the volume.


**Note:** In the screen-locked state, the volume can also be adjusted directly.

#### **6. Introduction of touch gestures**

In the Main interface, swipe left and right to switch the main interface;

In the File list or Menu list, swipe up/down to scroll up/down the list.

## 7. Drop-down menu

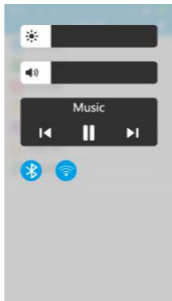


1. Swipe down from the top of the display screen to get short-cut menu.
2. 5 functions: Brightness level adjustment, Volume adjustment, Music control(the last song/the next song, play/pause),Bluetooth on/off and WiFi on/off.

## Chapter III Introduction of Functions



### 1. Music

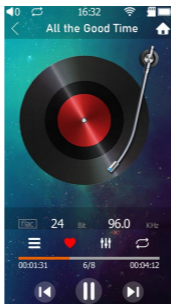Tap "Music" icon and enter into the playing interface.




 
- Tap "☰" to enter into playback settings, which is same function as "Playing Set".
- Tap "❤️" to mark and add the song into favorite

song list.

- Tap " " to set equalizer.
- Tap " " to change its play mode.


### **Fast forward/rewind the previous song/next song**

 
Tap " " to switch the playing music into the last song.

Tap " " to switch the playing music into the next song.


Fast forward/rewind: drag the progress bar into the position directly.

### **Play/Pause**


Tap " " to pause the playing music.

Tap " " to resume to play the music.

### **Music file selection**

 Tap " " to return to the playlist menu.

## **2. Playing Set**

On the main interface, tap the "Playing Set" icon, or " " when the music is playing, it will be directed to play function for below 9 functions:

### **1) Play Mode**

Tap the "play mode" to choose playing way from:

**Playlist, Single play, Shuffle, and List loop.**

## **2) Memory play**

Tap "Memory Play" menu to to choose memory mode from: Close, Track and Position.

## **3) Maximum volume**

Tap the icon to set up the maximum volume from 0-32 by dragging the progress bar.

## **Save the volume**

When it is ON, it will memorize and store the shutdown volume. And its start-up volume will always be same as last shutdown volume.

## **4) Equalizer**

Tap "Equalizer" icon to fast choose equalizer from:

Custo, Voice, Popula, Jazz, Rock, Metal, Classic, Dance, Sad, Close.

## **5) Digital filter**

Choose from Fast Roll-off, Slow Roll-off and Minimum Phase for audio quality fine-tuning.


## 6) List update

When it is on, the player will automatically search and update the play-list the next time it is turned on.

## 7) Delete the current file

Tap "Delete Current File" icon to delete the selected file from current play-list.

## 3. Equalizer

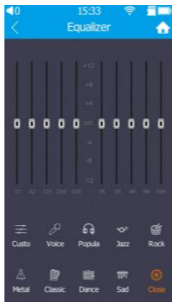


On the main interface, tap "Equalizer" icon to fast

choose equalizer effect from: Custo, Voice, Popula, Jazz, Rock, Metal, Classic, Dance, Sad, Close.

Tips: Custo means customization, which supports user to set all factors by themselves.

Tap the "<" back button to exit.


## 4. Folder

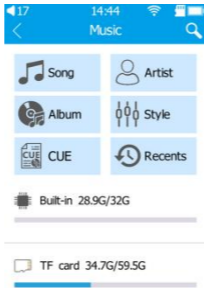

In the main menu, tap "Folder" icon.


- All musics are classified according to song name, Artist, Album, Style, CUE and Recent playing music, convenient for the players to fast identify preference music.
- Built-in storage contains all music stored in built-in player.
- TF Card contains all music stored in external TF card.

## 5. Favorites

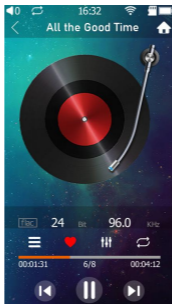

### 1) Add to my favorites

- Tap the "Music" menu and mark the song as

"Favorite". When the heart icon turns into red , it is successful.

- In Favorite list, tap "+" in the right up corner to add the favorite songs.

## 2) **Play my favorite songs**

- Tap the song title to play directly

## 3) **Delete my favorite markers**

- Cancel "Favorites" in music play interface
- Long press the song's title in my favorite song's list, and choose "Yes" when asked if to "Delete this file"


## 6. **Search**

Tap " Search" icon to star song search function.


Before searching, available WIFI should be connected. It supports both manual song name search or voice search.



 
## 1) Manual search

Manual type research supports Chinese and English language. Tap  to finish the type and start search.

## 2) Voice search


 Tap microphone icon, then press and talk to speak out the song's title.(Local music search is only available when connected to WIFI)

## 7. WIFI

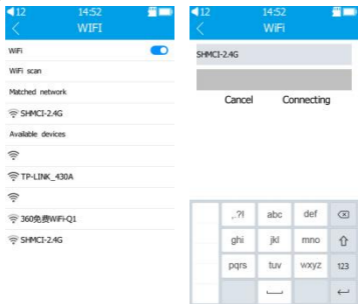

- 1) Turn on Wifi switch, it will automatically scan available Wifi.
- 2) Choose available Wifi and connect it with Wifi password.
- 3) After connected successfully, Wifi name will be displayed in the Matched network.
- 4) Wifi could be turned off.

## 8. Bluetooth

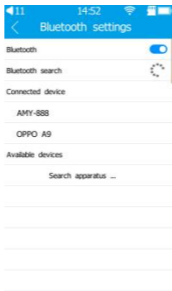 

- 1) Turn on Bluetooth switch, it will automatically scan available bluetooth.
- 2) All available devices will be listed. Choose wanted device, tap the bluetooth name and it will start to connect automatically.
- 3) After connected successfully, connected bluetooth device name will be displayed in the Connected device.
- 4) Bluetooth could be turned off.


## 9. E-book



- Tap "E-book" menu to enter into the list of e-book files.
- Tap E-book title and then scroll up/down to check the details.
- Touch the top of the screen to select Exit or Return to Main Menu.

## Chapter IV System Set

### Tap System Set icon for the system set

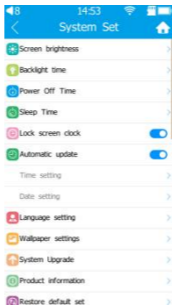

#### 1. Screen brightness

Set screen brightness from 0-10. When set is finished, tap any point of the screen to exist set action.

## **2. Backlight time**

Set the machine backlight time from 10s-120s, or on for always-on-display.

## **3. Power off time**

It is the time to automatically turn off system for saving power. It could be chosen from 1-8 minutes, or turned off directly.

## **4. Sleep time**

The MP3 will be turned off compulsively in playing status. It could be set from 10min to 120min, or turned off.

Tips: The set is for once only.

## **5. Lock the screen clock**

When it is turned on, when MP3 is unlocked, it is required to slide up to close the screen lock firstly, then

enter into main interface.

When it is turned off, whenever to unlock the MP3, it will enters into main interface directly.

The screen lock clock can be set on or off.

## **6. Automatically update**

When turned on, it will automatically update in Wifi connected status.

When it is turned off, the update time and date are able to be manually set

## **7. Language setting**

It supports multi-languages, including Simplified Chinese, Traditional Chinese, English, Japanese, Korean, Deutsch, Le francais, Lingua Italiana, Espanol, Russian, and Portuguese.

## **8. Wallpaper settings**

It supports system built-in or DIY wallpaper for main interface. DIY watch faces maximum supports

720\*1280 resolution. which could be selected

## **9. System upgrade**

It supports OTA upgrade. When new firmware is officially released, the system will be automatically upgraded under WIFI connected status.

Tips: The battery should be higher than 50%.

## **10. Product information**

The product details including model, RAM, ROM, external flash, software version and serial number will be displayed.

## **11. Restore default set.**

Factory setting: the factory setting can be restored.

## **12. Format disk**

Format TF Card or Built-in Storage.

**Note: All data cannot be recovered after formatting. please pay attention to backup.**

## Chapter V Connecting Computers

### 1. Connect to the computer.

Please connect MP3 and USB socket of computer with the provided USB cable to download & upload files. Once connected, speaker will enter into U disk mode.

For the first connection, the computer will prompt you some instructions such as "Create a driver information base" and "Find new hardware ". Once finished, the speaker could be automatically detected.

When there is reminder as right image, it connected successfully..



## 2. Upload and download files

It will show as right image in Windows system.



## 3. Disconnect from the computer

After file transfer finished, please turn off "My computer" or "File explorer" firstly, then unplug the connecting cable as follows.



For Windows 2000 and above, please operate system as below instructions:

- Click the green arrow in the lower right corner of your computer.
- Click "stop USB Mass Storage Device Disk-drive".




- Click "OK" in the dialog box of "Safely remove

hardware", then unplug the USB cable.

**Note: Different operating system may have slight change. The above picture is for reference only.**

#### 4. Batteries and charging

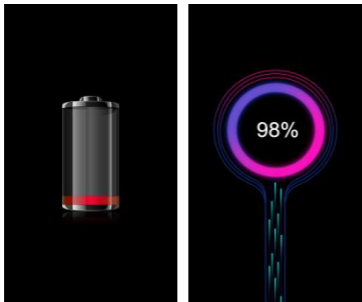

Check the remaining battery power after start-up. If in low power, please charge it in time to ensure normal use! When the system enters the low-power state, there will be low-power reminder and will be

shut down automatically.

1. Charging via adapter: Please use standard 5V 2000mA power adapter and provided charging cable. The charging time is around 3 hours.
2. Charging via computer USB: When the USB cable is connected between player and computer, please remove it as hardware according to above instruction. Then it will be in charging situation. The charging time might be longer than 3 hours.
3. In the charging state, press power on/off button, it will enters into main interface, and remain battery charging still.

## **5. Trouble Shooting**

### **-Black screen after turning on**

Please charge the battery ensure there is enough power for turning on.

If the machine crashes, please press and hold the

"power" key for 8 seconds to reset the system and restart it. If it still fails to start, please check the power status.

**-No sound when playing the song**

Please turn up the volume

Please download the music file

**-Music files are unable to download after connected**

Please upgrade the motherboard driver.

**-Computer abnormal when plugging and unplugging the player**

Please do NOT disconnect during file transfer progress

**-Overall memory display is inconsistent with the actual memory.**

Some memory space is used to store programs and display fonts.

**-Some MP3 songs can't play properly in the player.**

- 1) Ensure the file is in MPEG I Layer 3 format
- 2) Delete the incompatible songs from the player

**-The files in the player are unable to be deleted through the management software? Or when deleting files in the player, "Delete failed or delete error" is reminded?**

Check whether the files in the player are "read-only" through "My Computer". If yes, modify the "read-only" into "archive attribute" and delete it.

**-When it is used as external hard drive, any driver installation is required in WINDOWS XP/VISTA/WINDOWS 10 systems?**

No need to install drivers. Currently, WINDOWS98 operating system is not supported.

## 6. Technical specifications

Product name	Digital music player/MP3
Memory	Built-in 32GB EMMC FLASH External TF card (up to 1TB)
Operating system	Linux MOS
LCD	3.5 inch IPS TFT Dot-matrix display Resolution: 480×854
Touch screen	Multi-point full touch capacitive screen
Battery	Built-in lithium battery: 3.7V 1900mAh
SNR	≥80dB

frequency response	20Hz-20KHz
Breakpoint	Yes
Audio format	MP3 WMA WAV APE FLAC ACC OGG AIFF DSD256
Audio code stream rate	MP3/WMA:16Kbps-320Kbps WAV maximum:64BIT 384KHZ. AIFF maximum: 32BIT 192KHZ. APE/FLAC maximum: 24BIT 192KHZ. DSD maximum: 1BIT DSD256 1.2MHZ
Wallpaper	Maximum pixel:720×1280.
Bluetooth	4.2

Working time	About 8 hours (Play with wired headphones when Bluetooth and WiFi are off)
Battery charging time	About 3 hours ( 5V,2000mA adapter)
Volume control	32-level digital volume control mode
Headphone output power	1.0V 50mw
Working temperature	-5°C ~ 40°C
Headphone output	Two channel output
Transmission interface	TYPE C USB2.0

Compatible system	WINDOWS XP/VISTA/WINDOWS 10
Size (L×W×H)	100×57×14mm
System language	Chinese, English and other languages
net weight	About 145g (including battery)

The contents of this instruction manual are subject to change without prior notice.