


Please take a few minutes to read this manual carefully before using this product.

# APP Remote Control G-spot Vibrator User Manual

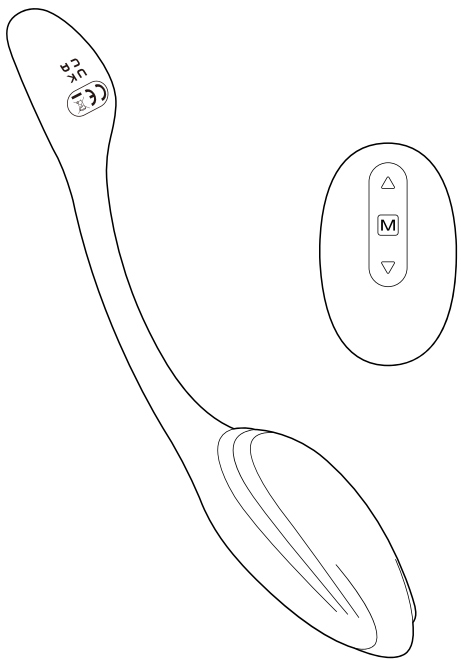


Warning: This product is ONLY for Adult over 18 years old !

## Product Details

Material: Silicone  
Volume: 40dB/30CM (Silent Room)  
Product Net Weight: 102g  
Charging Mode: USB Magnetic Charging  
Charging Time: 80 minutes  
Usage Time: 60 minutes  
Waterproof Level: IPX7

## Using Instructions

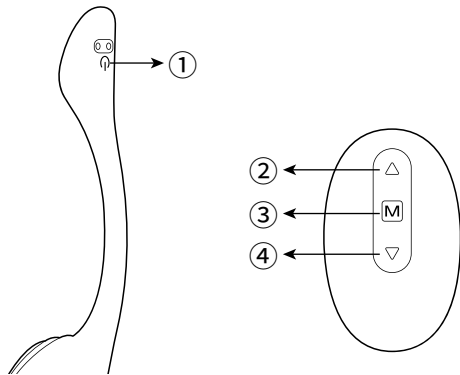

- \* Power On - Press and hold ① for 1.5 seconds, the indicator lights up and the product is in standby.
- \* Mode Switch - Short press ① to switch vibrating rhythm between 10 modes.
- \* Power Off - After use, press and hold 1 for 1.5 seconds to turn the product off.
- \* Press and hold ③ for 1.5 seconds to turn on/off the remote control.
- \* ② and ④ are Frequency plus and minus buttons, after product has been activated, short press ② to control the product vibrating modes plus, short press ④ to control the product vibrating modes minus.

## APP Control Using Instructions



Love Spouse App



Device Binding Code "7043"

1. Search from the APP store or scan the QR code to download and install "Love Spouse" APP, then register and log in.
2. Add device by scan the Device Binding Code or enter "7043".
3. Before using APP control, please activate the vibrator manually.
4. Please allow APP to access Bluetooth.
5. Modify your personal information and settings on the【mine】page. It is recommended to read the "Instruction Manual" on the【mine】page before use.

## APP Use Modes

- a. Classic mode  
The device has 10 classic vibration modes.
- b. Video mode  
Play a passion video while using the product <Support local files only >.
- c. Musical mode  
Turn on the music in your phone, and the vibration frequency will change with the music.
- d. Draw something  
Click + and draw a line at will on the screen, save and name it, then click the triangle symbol on the name to enter the mode of free stroke saving.
- e. Shake it  
The device will vibrate according to the shaking rhythm and amplitude of your phone.
- f. Interactive mode  
Friends search can search by ID number, mobile phone number, and mailbox. You can add a friend and interact on the【messages】page.

## How to Interaction

Click the icon of the friend you want to interact with, the system will initiate an interactive invitation, then click confirm.  
If the other party accepts your invitation, the interactive connection is successful.  
\* After the interactive connection is successful, the video is not turned on by default. You must first invite the other party's video and the other party agrees to open the video function before opening both parties.

## Charging Instructions

1. Please charge the product before and after each use;
2. The indicator flashes when charging;
3. After charging is complete, the indicator stops blinking and keeps on.

## Daily Maintenance

1. Please clean and disinfect the product before and after each use.
2. When using, it is recommended to apply with water-based lubricants instead of silicone-based lubricants.
3. Do not clean the product with hot water over 60°C / 140°F.
4. Do not charge the product in a humid place.
5. Store the toy in a cool, dry place and avoid direct sunlight to damage the silicone.

## Caution

- \* Keep this product away from children.
- \* Please stop using it when you feel unwell.
- \* Do not dispose of in fire or expose to excess heat.

## After-sales Service

We provide a one-year warranty for this product. If there are any quality issues with this product after product received, please feel free to contact us to get a satisfied solution. Do not dismantle the toy by yourself, our warranty does not cover human-made damage.  
Email: toystest007@gmail.com