OVENTE

MULTI-PURPOSE

IMMERSION HAND BLENDER

HS560 SERIES



OVENTE



MULTI-PURPOSE IMMERSION HAND BLENDER

HS560 SERIES

TABLE OF CONTENTS

| ITEM INFORMATION | • | • | | • | • | • | • | | 4 |
|-------------------------|---|---|--|---|---|---|---|--|---|
| IMPORTANT SAFEGUARDS | | | | • | | | • | | 5 |
| PARTS & FEATURES | | | | • | | | • | | 6 |
| USING YOUR HAND BLENDER | | | | • | | | • | | 8 |
| CARE & MAINTENANCE | | | | | | | | | 9 |

ITEM INFORMATION

HS560 SERIES

INFORMATION

Allow us to introduce the Ovente Multi-Purpose Immersion Hand Blender. This robust, slim-stick blender is equipped with thermal protection. If it suddenly stops during use, unplug and allow the hand blender to cool down to reset.

Powered by 300 watts, this hand blender instantly blends and crushes your fresh, healthy ingredients, transforming them into the healthiest and most delicious meals created in your own home. Two blending speeds from low to high with a pulse-activated sensor easily adjust to ensure the perfect consistency every time. This ergonomically designed immersion blender is non-slip, comfortable and easy to use.

FEATURES

- Slim stick design fits most mixing bowls and pots.
- Ergonomic handle prevents slippage while giving you precise control.
- Pulse-activated sensor with two blending speeds to ensure the perfect consistency every time.
- 300-watt motor instantly blends delicious smoothies, soups, marinades and sauces. Some unconventional uses are: mashed potatoes, pudding, milkshakes, eggs, protein shakes, and bullet-proof coffee. Non-food uses: soap-making, mixing paint and ceramic glaze mixing.



When using this hand blender, basic safety precautions should always be followed, including:

- Read all instructions.
- To protect against electrical shock, do not immerse the motor body, cord, or plug in water or other liquids. Only the detachable blending shaft has been designed for immersion into water or other liquids. If the hand blender falls into liquid, immediately unplug it. Carefully remove the blending shaft, clean and dry the unit thoroughly before reusing.
- This blender is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the blender by a person responsible for their safety.
- Do not allow children to use the blender without supervision.
- Avoid contact with moving parts.

- **9** Do not use outdoors or for purposes other than intended use.
- During operation, keep hands, hair, clothing, and utensils away from blades and the container you are blending inside, to reduce the risk of injury to persons and/or damage to the blender.
- Remove the detachable shaft from the blender before washing the blades or shaft.
- Blades are sharp. Handle carefully when removing, inserting, or cleaning.
- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage, splattering, and the possibility of injury from burning.
- To unplug, hold the plug and pull from the electrical outlet. Never pull the cord.
- Before cleaning, or putting on or taking off attachments, make sure the blender is off, unplugged from the outlet, and the motor has stopped completely.

PARTS & FEATURES



304 STAINLESS STEEL

304 STAINLESS STEEL BLADE



RUBBER HOOK HANGER For easy storage



ERGONOMIC HANDLE Provides a comfortable grip



HIGH SPEED (II)
Pulse-operated sensor with
one-touch operation

LOW SPEED (I)



MOTOR BODY HOUSING
Powerful 300-watt motor



SAFETY LOCK Twist shaft to detach for easy cleaning



304 STAINLESS STEEL DETACHABLE SHAFT Dishwasher-safe



304 STAINLESS STEEL BLADE Sharp and effective

MULTI-PURPOSE IMMERSION HAND BLENDER

HS560 SERIES



SALSABlend fresh-chopped tomatoes, onions, garlic and cilantro.
Perfect for summer parties!



SOUPS
Prepare delicious pureed soups,
from cauliflower and butternut
squash, to a warm tomato soup!



SMOOTHIES
Blend your favorite fruits
and veggies for a fresh,
nutritious smoothie!



BAKING Blend your ingredients easily and with more precise control

USING YOUR HAND BLENDER

This hand blender is perfectly suited for preparing dips, sauces, mayonnaise, baby food, as well as milkshakes.

- Insert the detachable shaft into the motor body housing, and turn clockwise to lock it in.
- Switch on the blender by pressing either I or II, depending on your required speed.
- Blend the ingredients by moving the hand blender slowly up, down and in circles.
- Caution: Keep fingers away from blades. To dislodge the food, first, unplug the blender from the outlet.
- This hand blender is equipped with thermal protection. If it suddenly stops during use, unplug and allow the hand blender to cool down to reset.
- NOTE: Depending on whether you are in a hot or cold climate, usage and cool down/reset times may differ.



BLENDING TIPS

- ★ Be sure that the shaft is fully submerged before blending ingredients to prevent splatter.
- ★ To purée a soup, use the hand blender to blend the ingredients to the desired consistency by using a gentle up-and-down motion right inside the pot.
- ★ When blending ingredients, tilt the container away from you to create a deeper area for blending to prevent splatter.
- ★ Use the hand blender to make smooth gravies and pan sauces.
- ★ Do not let hand blender sit in a hot pot on a stove while not in use.

CARE & MAINTENANCE

- Before cleaning, unplug the hand blender and detach the shaft and blade.
- Wipe the motor body housing with a clean, damp cloth.
 The detachable shaft and blades are dishwasher-safe or you can wipe them with a clean, damp cloth.
- If food is not easily rinsed off the shaft or blade, place a drop of dish detergent in the mixing container with water. Plug the cord into the outlet, immerse the shaft and blade, then operate the unit for about 10 seconds. Unplug, rinse under running water, and then dry thoroughly.



| Model | HS560 | Rotational Speed | 21000RPM | | | | |
|---------------|----------|--------------------------------|----------|--|--|--|--|
| Rated Voltage | 110~120V | Rated Frequency | 60Hz | | | | |
| Rated Power | 300W | Model Depose Patent Pending | П | | | | |

OVENTE

MULTI-PURPOSE

IMMERSION HAND BLENDER

HS560 SERIES





LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our hand blenders with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call 1-855-926-2626. Visit us at ovente.com









Defining Housewares