

Product care & maintenance

How often should I clean the basket?

We recommend cleaning the basket after each use. The basket and crisper plate are both dishwasher safe. If there is food residue stuck on the basket or crisper plate, place them in a sink filled with warm, soapy water and allow them to soak. Then use a soft sponge to help remove any remaining residue.