

CONGRATULATIONS!

You finally got your hands on the CINEMOOD – the first mini cinema projector for family entertainment. We developed this product with inspiration and care so that you can enjoy more time with your family. We have put our heart and soul into this project, but this is just the beginning of our long journey. You are just one button away from bringing magic into your home. To get the most out of CINEMOOD, carefully read this Quick Start Guide.



CINEMOOD

If you have any issues or questions, contact us at support@cinemood.com or call us directly at 1-800-350-6107. Support Hours are Monday - Friday 9AM-10PM EST or 24/7 via email.

SCAN QR CODE TO ACCESS VIDEO INSTRUCTIONS

You can find an extensive list of videos to support you getting started and using your CINEMOOD by scanning the QR Code or going to the following website here www.cinemood.com/support



GET STARTED

- Press and hold the Lightning Bolt button (pic **1**) to switch the device on or off.
- Turn off or dim your room's lights to get the best quality video resolution.
- Direct the projector beam of the CINEMOOD onto the surface you want to watch with, such as a wall or ceiling and adjust focus using the buttons on the right side of the device (pic **3**).
- You can control your CINEMOOD using buttons on the top of the device (pic **2**).


1. TURN IT ON

To turn on the device, press the lightning bolt button. It represents the creative energy that went into making CINEMOOD.



2. TAKE CONTROL

Control the device by utilizing the controls on top of the device. The buttons were designed to ensure intuitive control.

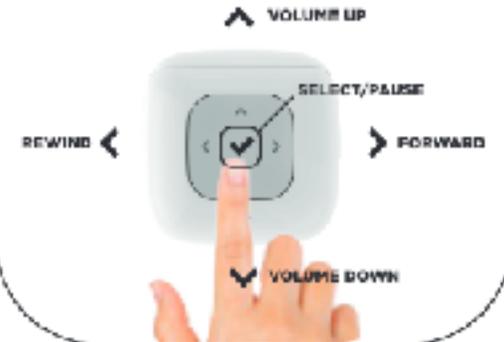

3. FOCUS & TURN OFF THE LIGHTS



Once you are ready to watch, use the manual focus buttons on the side of the device or the CINEMOOD app to adjust the perfect clarity. Then, turn your room into a real movie theater by dimming or switching off the lights to get the brightest picture.



SETUP

- You can download the CINEMOOD App from Apple Store or Google Play to set up your device much easier. Follow the in-App instructions to connect the App to the device.. If you have problems connecting - see our video tutorial or contact our Support Team.
- Follow the onscreen instructions in the CINEMOOD App or on the device.
- During setup you can connect your CINEMOOD device to your Wi-Fi network. With internet connection you can update software, watch preloaded content from the cloud, download embedded content, please install applications like Netflix or Prime Video immediately after setup.
- When setting up the device your phone number is requested in order to create a CINEMOOD account. You will receive a SMS code to confirm the account. **Your information is 100% secured.**
- You can provide your email address to get latest updates, news and promos. **No spam.**
- Adding your bank card information allows you to subscribe to some stream services and to make it easier to purchase additional content. **It's completely secured.**

SCAN QR CODE TO DOWNLOAD MOBILE APP

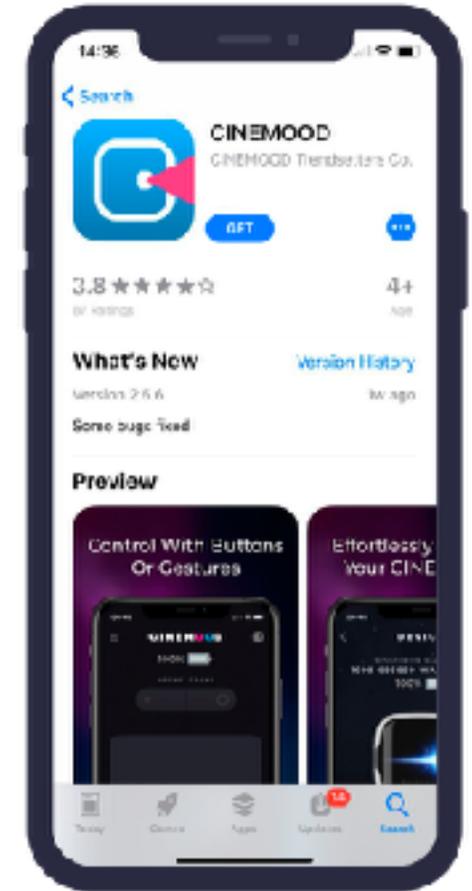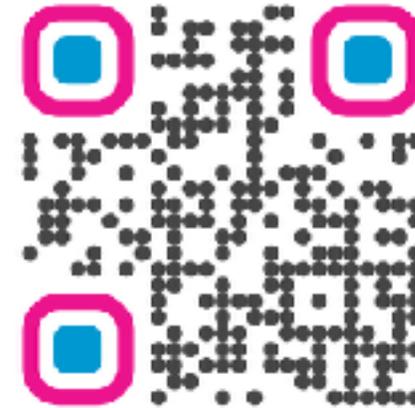

CINEMOOD

USING THE DEVICE

You can control the device using the buttons on the top of your CINEMOOD or by using CINEMOOD App on your mobile phone.


Use LEFT and RIGHT buttons to navigate in the menu, press the CENTER button to select menu item. In some cases you can press and hold central button for 2 seconds to open the options menu.

When watching, you can control the volume with UP and DOWN buttons and move backward or forward with LEFT and RIGHT buttons.

To exit content, press with CENTER button to pause and the the UP button to go back to the main menu.

You must use the CINEMOOD App on your mobile device to control Netflix and Amazon Prime Apps.

TIP: You can find additional features like Timers, Language, Keystone correction, and more under the Settings Menu

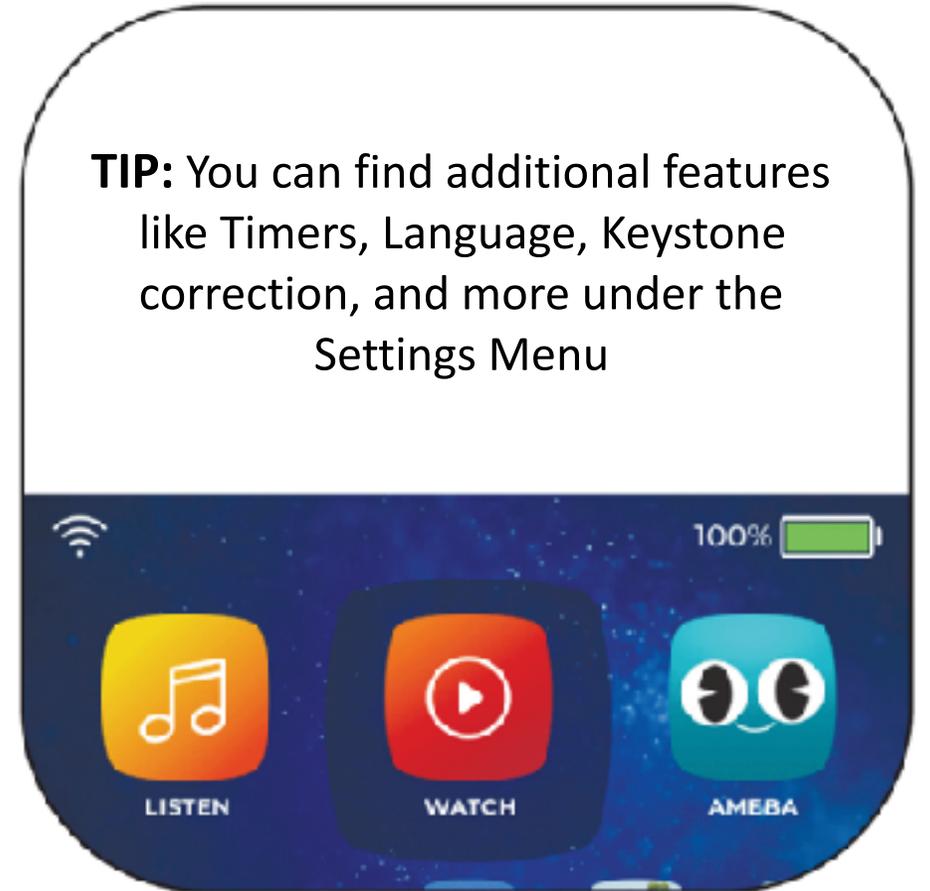

CINEMOOD

DOWNLOAD APPS & CONTENT


To access free content when you are offline, you need to download it. This applies to Netflix, Amazon Prime Video and YouTube as well.

If content has not been downloaded, you will see a transparent cloud icon on the bottom of the related content icon.

To download Netflix or other Apps, go to Main Menu>Apps, choose App's icon, press and hold the center button. Select "Download" from the pop-up menu. Complete the same steps for any Apps or any content where you see a "Cloud" icon over a content option.

Only downloaded content is available without internet connection.

TIP: You can select "Download All" to download all the respective content in a section.

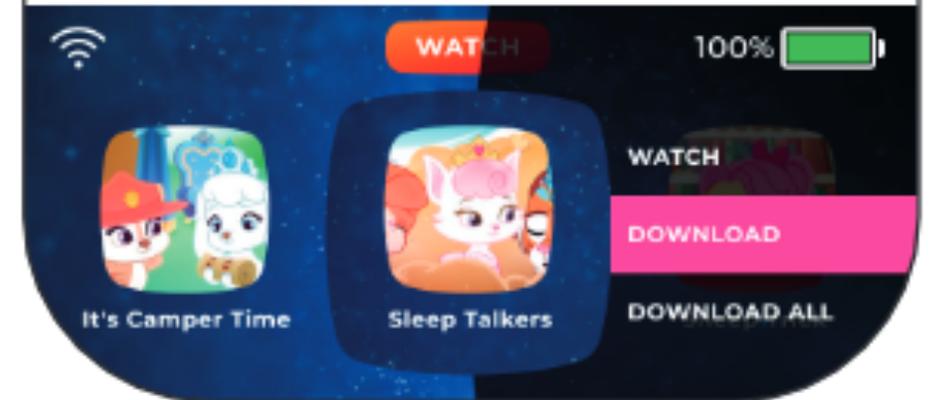


STREAM WITH YOUR VIDEO ACCOUNT

After downloading Netflix and Prime Video, open the CINEMOOD App on your iOS device and select the APP you would like to stream. Sign In using your Netflix or Prime Video account information. Use the CINEMOOD App as a remote control to scroll and select videos to watch using the hand pointer.

You can download videos from both applications to watch without internet access. These videos will be found in the “Downloaded Videos” section of the Netflix or Prime Video Apps when accessed without Wi-Fi.

If you have trouble accessing these Apps, please ensure you have the latest software updates using Settings>About menu. If issues continue, please contact our Support Team.

TIP: Double tap in each section to pull up a keyboard in the CINEMOOD App to easily enter your information

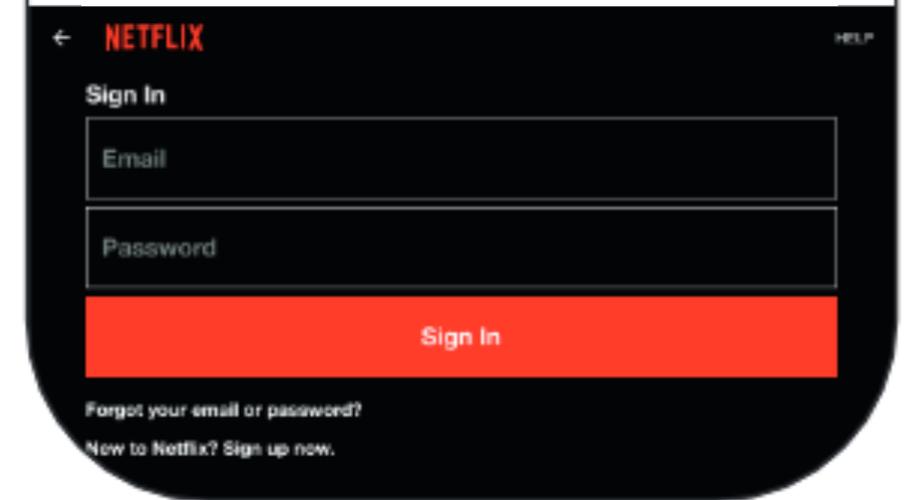

TROUBLESHOOTING

If you are having issues with your device, please call or email our Support Team at support@cinemood.com or 1-800-350-6107.

CONNECTING TO NETFLIX OR PRIME VIDEO

Ensure you have the latest software update. To download software updates, ensure the CINEMOOD is connected to your home Wi-Fi network. You can check the latest software that your CINEMOOD has installed by visiting Menu>Settings>About. There will be a box at the bottom that will search for an tell you if you need to download and then install a new update. Large updates may take a few minutes. It is a good idea to restart your device after installing the update.

UNABLE TO CONNECT PHONE

You can use your mobile device as a remote control CINEMOOD or for the Screen Mirroring feature. To use remote control, please pair and connect your CINEMOOD device ONLY in CINEMOOD App. You cannot connect to the CINEMOOD using regular mobile device's Bluetooth settings. Screen Mirroring is only available for Apple mobile devices. If you have Android mobile device - don't worry it will be available soon.

SCREEN MIRRORING IS NOT WORKING

If you cannot find CINEMOOD device in the Screen Mirroring Devices list, you need connect your CINEMOOD device and mobile device to the same Wi-Fi network.

If you receive an error when trying to play movies such as Netflix, iTunes, etc. when in mirroring mode, this is expected. Our mirroring supports use of some apps but was developed for user created content only. iTunes, HULU, HBO, and other apps stream DRM (Digital Rights Management) protected content and this is not supported with our mirroring feature. You can watch some of protected content from iTunes, Google Play, VUDU using MoviesAnywhere service. Please ask our Support Team about this feature.

LOW PICTURE BRIGHTNESS AND CONTRAST

For the best viewing experience, watch your content in a dark or dimmed room on a white reflective surface. Turn off or dim the lights and direct the beam onto the white surface. Adjust the picture using the focus buttons. If the picture is still blurred, the lens may need cleaning. Carefully clean the lens with a non-abrasive dry cloth.

CINEMOOD DOES NOT TURN ON

Your device may have run out of battery; try charging the CINEMOOD again. If your CINEMOOD is still experiencing problems after being fully charged, please contact our Support Team at support@cinemood.com.

CAN'T CONNECT TO A USB HARD DISC

The CINEMOOD can use some external USB flash drives. External HDD and SSD disks support not guaranteed.



SAFETY RULES

- Do not block the ventilation grids of your CINEMOOD. This may cause overheating.
- Do not expose your CINEMOOD to direct sunlight for extended periods of time.
- Keep your CINEMOOD away from water, other liquids, and dust.
- Do not disassemble your CINEMOOD without professional assistance.
- Be careful with your projector lens. Scratches are possible from the excess force and may affect your overall viewing experience.
- Store your CINEMOOD in room temperature, stable, and safe area.
- Do not look directly into the beam.



CINEMOOD

ADDITIONAL INFORMATION

ALL CINEMOOD PRODUCTS HAVE THE REQUIRED CERTIFICATES AND ARE FULLY COMPLIANT WITH THE RELEVANT NORMS AND STANDARDS.

CINEMOOD TRENDSETTERS CO. 2711 CENTERVILLE ROAD, SUITE 400, WILMINGTON, NEW CASTLE COUNTRY, DELAWARE 19808.
ASSEMBLED IN CHINA.

FOR MORE DETAIL ON THE PRODUCT'S CERTIFICATES, SEE WWW.CINEMOOD.COM
DATE OF PRODUCTION IS THE FIRST FOUR CHARACTERS OF THE SERIAL NUMBER (YYMM).
CINEMOOD STORYTELLER CNMD0016
FCC ID:2AKIN-CNMD0016
Model:CNMD0016

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

TECH SPECS

Dimensions

Size: 3,14" x 3,14" x 3,14"

Weight: 300 gm

Performance

Diagonal: up to 70"

Up to 5 hours of battery life

Micro-USB support

Audio output 3.5 mm

Internal memory: 16 GB

Built-In 2.5W speaker

Wi-Fi 802.11 b/g/n 2,4 GHz

Bluetooth 4.0

Built-In Microphone

Max charging: 2 A

Supported file types:

Video: mp4, 3gp, avi, mkv, webm, mov, 3g2, 3gpp, asf, divx, f4v, flv, h264, m2ts, m4v, mod, mpeg, mpg, mts, mxf, ogv, wmv

Audio: mp3, aac, m4a

Picture: png, jpg, bmp, jpeg, gif

CINEMOOD

SUPPORT

If you have any issues or questions, contact us at support@cinemood.com or call us directly at 1-800-350-6107.

We are available for live support from 9:00am - 10:00pm EST
Monday - Friday.

You can find a lot of helpful information and FAQs on our website: www.cinemood.com/support

You can find an extensive list of videos to support you getting started and using your CINEMOOD by scanning this QR Code.



CINEMOOD