

OVENTE®

1.8L ELECTRIC KETTLE

WITH PRONTOFILL™

KP413 SERIES



BLACK



WHITE



RED



GREEN



PINK



Before first using your new kettle, please read this instruction manual and keep it for future reference

ovente.com

OVENTE®

1.8L ELECTRIC KETTLE

WITH PRONTOFILL™

KP413 SERIES



OVENTE®

ovente.com

1.8L ELECTRIC KETTLE WITH PRONTOFILL™

KP413 SERIES

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS		4
PARTS & FEATURES		6
USING YOUR KETTLE		7
CLEANING YOUR KETTLE		8
DESCALING YOUR KETTLE		9



IMPORTANT SAFEGUARDS

When using your kettle, basic safety precautions should always be followed, including:

- ❗ Read these instructions carefully and thoroughly, before operating your kettle.
- ❗ Before connecting the kettle to a power source, check whether the voltage indicated on the appliance (bottom of the kettle and base unit) corresponds with the main voltage in your home.
- ❗ Do not touch hot surfaces or hot water. Use handles. Care must be taken since burns can occur from touching hot parts or from spilled hot liquid.
- ❗ To protect against fire, electric shock, and personal injury, do not immerse cord, plug, power base, or electric kettle in water or other liquid.
- ❗ Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number on **1.855.926.2626** for immediate assistance.
- ❗ The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock, or personal injury.
- ❗ Do not use outdoors or for other than its intended use.
- ❗ Switch off and unplug from the outlet before filling, emptying or cleaning, or when not in use.
- ❗ Do not overfill the kettle. Refer to the maximum level indicator.
- ❗ To avoid fire, do not operate near explosive and/or flammable fumes. Do not operate or place any part of this appliance on or near gas, electric burner or in a heated oven.
- ❗ Never pull on the cord as this may damage the cord and/or cause electric shock.
- ❗ To avoid possible steam damage, do not face the spout when operating the kettle.
- ❗ If operated on wooden furniture, use a protective pad to prevent damage on delicate finishes.
- ❗ Do not switch your kettle on if it is empty.
- ❗ Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.



IMPORTANT SAFEGUARDS

When using your kettle, basic safety precautions should always be followed, including:

- ⚠ While the water is boiling, do not attempt to open the lid to avoid the steam scalding your hand.
- ⚠ Keep the kettle out of the reach of children. Do not leave children unsupervised with the kettle.
- ⚠ This kettle should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by a person who is responsible for their safety.

SPECIAL SAFETY INSTRUCTIONS FOR THE KETTLE

- Since tap water can leave mineral deposits, we recommend filling your kettle with filtered water.
- The water level must be within the MIN and MAX marks.
- Switch off the kettle before removing from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the kettle must not become wet.
- Always make sure that the kettle is positioned properly on its power base.
- The kettle will automatically shut off once it boils.



PARTS & FEATURES

PRONTOFILL™ LID

For easy, one-handed filling without opening the lid



WATER GAUGE

Provides clear view of water level

CONCEALED HEATING ELEMENT

Helps reduce mineral build-up

360° ROTARY BASE

With built-in cord storage

EASY-OPEN BUTTON

Opens the lid wide for convenient cleaning

INDICATOR LIGHT

Lets you know when your kettle is heating

STAINLESS STEEL BAND

Beautifully accents kettle design

BUILT-IN SAFETY FEATURES

Boil-Dry Protection & Auto Shut-Off





USING YOUR KETTLE

- 1 This electric kettle features Ovente's patented ProntoFill™ lid so you can fill, boil, and enjoy your favorite beverage...all with the lid on.
- 2 With the lid still on, fill the kettle with water up to the desired level. Do not overfill to prevent the risk of spillage. Use the water level indicator to measure the desired amount of water.
- 3 Put the base on a dry, even, heat-resistant surface.
- 4 Place the kettle on the base.
- 5 Connect the kettle to a properly installed 120V 60Hz wall outlet.
- 6 Insert the plug into the socket.
- 7 Switch on the kettle by pressing the button near the base. The LED light will illuminate to indicate that the kettle is working. After boiling, the kettle switches off automatically.
- 8 To clean the interior of the kettle, open the lid by pressing the button on the handle.
- 9 Disconnect the kettle from the main power supply when not in use.



CLEANING YOUR KETTLE

- Wipe the exterior of the kettle with a soft, damp cloth or sponge.
- Remove water spots with a damp cloth.
- Do not use abrasive scouring pads.
- Never immerse the kettle in water or other liquids.
- From time to time, depending on the nature of your water supply, limescale will be naturally formed and can be found mostly on the heating element; thus, reducing the heating efficiency. Empty your kettle after each use. Leaving water inside can contribute to mineral build-up. (Refer to the descaling instructions on Page 9).



ELECTRICAL REQUIREMENTS

Voltage: 120V

Wattage: 1500W

Hertz: 60Hz



DESCALING YOUR ELECTRIC KETTLE

Residue, odor and spotting found inside your kettle are most likely caused by limescale which are natural deposits (calcium, magnesium, iron and copper) that may build up depending on the water in your area.

While you do not need to worry about hygienic or health-related issues, we do strongly recommend descaling your kettle from time to time to avoid limescale build-up and other issues.

What you need:

Water and vinegar or lemon juice

Steps:

- ❶ Mix a solution that is 3/4 parts water to 1/4 part vinegar or lemon juice.
 - ❷ Pour solution into kettle and close the lid.
 - ❸ Bring solution to a boil and leave for 5-8 hours.
 - ❹ Discard solution.
 - ❺ If the problem persists, repeat from Step 1 until limescale dissipates.
- ⚠ Caution: the solution may be extremely hot during this process.

OVENTE®

1.8L ELECTRIC KETTLE

WITH PRONTOFILL™

KP413 SERIES



ovente.com

OVENTE®



OVENTE WARRANTY

LIMITED TWO (2)-YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our kettles with a two (2)-year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call **1-855-926-2626**.

Visit us at ovente.com



Facebook.com/ovente



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



youtube.com/ovente

ovente.com

OVENTE®

Defining Housewares