


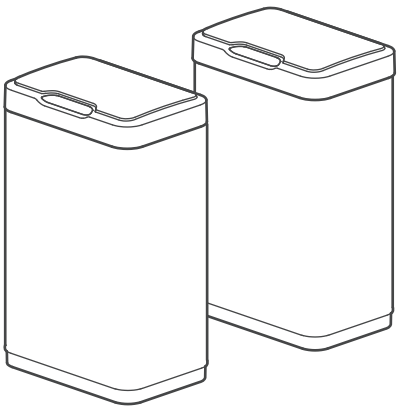

USE INSTRUCTIONS

MIRAGE SENSOR BIN

EK9278 / EK9278T

Thank you for choosing



MIRAGE SENSOR BIN

Please read these instructions before using the product.



Graphics are for illustrative purposes only.

Product Introduction

EK9278

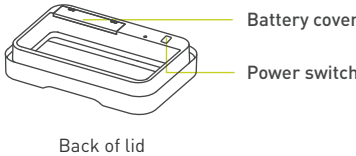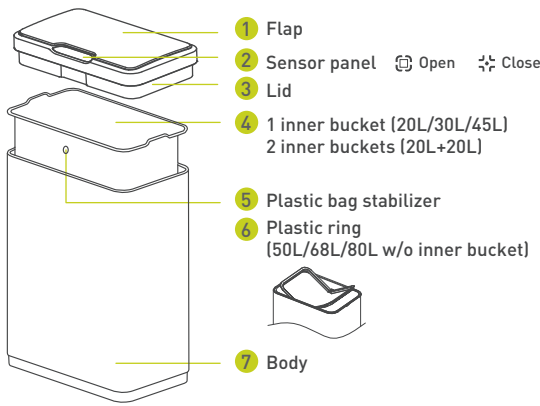

EK9278T

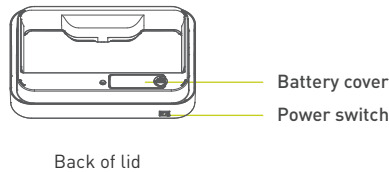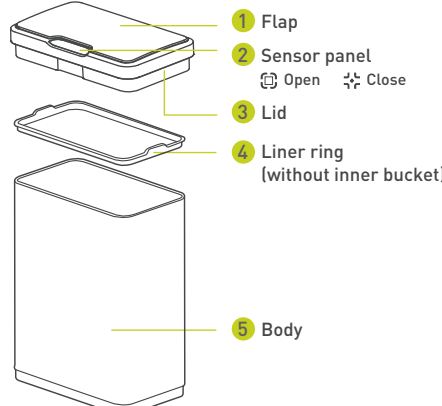


Power Supply

Alkaline batteries and outlet/adaptor not included.

- 1 EK9278: Turn to the bottom of the lid, press down and slide open the battery box cover.

EK9278T: Turn to the bottom of the lid, Unlock to open the battery cover.

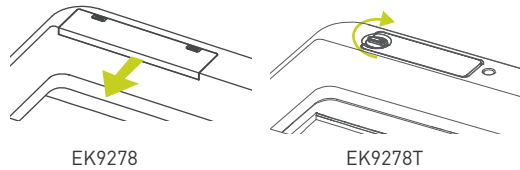

- 2 Put in new alkaline batteries following the direction instruction in the battery compartment.


*EK9278: use with 6 AA alkaline batteries (not included).

*EK9278T: use with 4 AA alkaline batteries (not included).

* Do NOT install the batteries in reverse.


* Do NOT use rechargeable batteries.

* Ensure your batteries are correctly installed to prevent leakage or rupture, which could cause exposure to harmful chemicals.

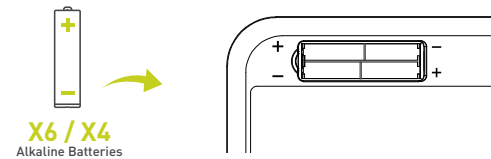


Power ON/OFF

- 1 Turn the power switch on.

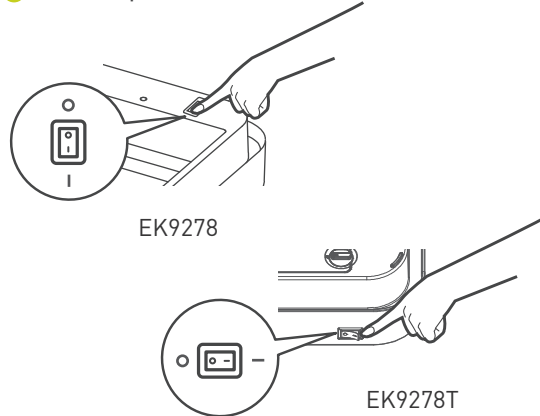

- 2 Sensor panel lights up to signal power on. LED light flashes every 6 seconds when bin is in standby mode.

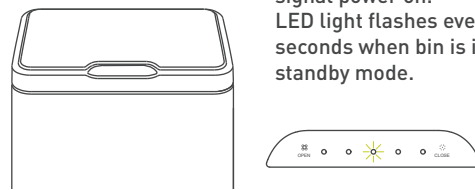

Operating Instructions

1 Sensor Mode


0-25(±5)cm



Place hand or object 0-25(±5)cm directly above the sensor panel to open the bin. All LED signal lights will turn on.




5 seconds automatic countdown close: LED signal lights count down 5 seconds before the bin automatically closes.

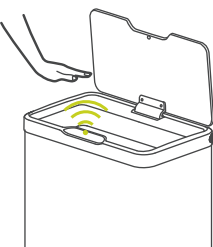

Stay Open

Keep hand or object within the sensor range to keep bin open, or use touch buttons to operate the bin.

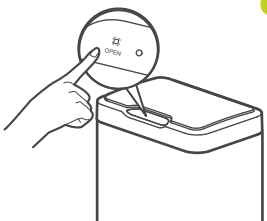

2 Manual Mode

When lid has been opened using the "☒" touch button, the lid must be closed by lightly pressing the "☒" button.


Lightly press "☒" to keep the lid open
Lightly press "☒" to close

*Please do not flip or slam the lid by hand to avoid damages to the mechanism.


Changing Bin Bag

Depending on waste sorting and recycling needs, use with or without bin bags.


- 1 Take off the lid, pull out and tighten the drawstrings, then remove the bin bag.

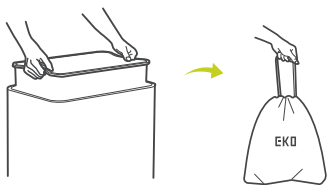

- 2 Replace the bag in the inner bucket, tucking excess bin bag into the stabilizer or folding it over the liner ring, then secure the lid back on top.

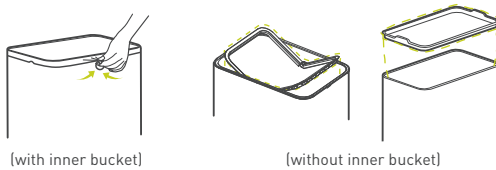

- 3 Place the lid back on top of the bin.

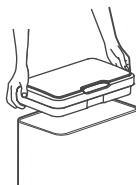


EKO Accessories Guide

Custom fit like a match made in heaven. Maximize the functionality of our products by pairing them with custom fit liners, batteries, and odour filters.

EKO BIN LINERS

Integrated drawstring handles so they are easy to lift, tie, and carry.

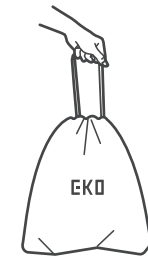

Extra strong plastic bag for EKO bins or bins with similar dimensions.

Bin Liners Size Guide

Bin Capacity	Suitable Liner Size	Product Code	Liner Dimension (WxL, cm)
3L-6L	A	EK33701	35x40
7L-9L	B	EK33702	40x45
10L-15L	C	EK33703	45x50
18L-21L	D	EK33704	55x55
25L-35L	E	EK33705	55x70
40L-60L	F	EK33706	65x75/62.8x75(USA only)
50L-90L	G	EK33707	71x89
30.3L	F-1	EK33706-1	49x70

EKO Accessories Guide

Certain products feature built-in deodorizer compartments. For products that do not, a separate EKO Grancy Perfume Capsule Holder may be purchased and attached to the product.

*Graphics for illustrative purpose only.

Using the built-in deodorizer compartment

- Compartments larger than 8x8x0.8cm are compatible with EKO Charcoal Odour Filters or perfume capsules.



- Compartments smaller than 8x8x0.8cm are compatible with EKO Charcoal Odour Filters[SKU EK8148 only] or EKO perfume capsules.



*Graphics for illustrative purpose only.

Using the EKO Grancy Perfume Capsule Holder:

Compatible with EKO perfume capsules.

*Deodorizing accessories (capsule holder, perfume capsules, charcoal odour filter) sold separately.



Available in 3 scents
-Rose
-Blue Ocean
-Fresh Forest

Attention

1. Ensure correct battery polarity during installation. Do not reverse.
2. Avoid prolonged direct sunlight and humidity.
3. Do not exert force on the bin's lid.
4. Clean the lid with a dry cloth; avoid direct water contact.
5. If the lid gets wet, air dry after removing the battery compartment.
6. Refrain from putting pressure or repeatedly flipping the lid cover.
7. Replace batteries if the lid malfunctions.
8. Maintain a clean sensor panel for best performance.
9. Position away from heat, wind, and high-traffic areas.
10. Use only new alkaline batteries; don't mix or use rechargeable/acid-based types.

Troubleshooting

1. No lights on - Please make sure the batteries are installed correctly or try new batteries.
2. No response from sensor - The lid may have been closed by hand in manual mode. Pressing "☒" will reset the modes.
3. Sensor lid does not open fully - Indicates low power, please replace batteries with some new AA alkaline batteries.

Battery and Safety Instructions

1. Only adults should handle batteries.
2. Always use the correct type of batteries (AA alkaline batteries).
3. Always use all new batteries.
4. Do not use rechargeable batteries.
5. Do not mix old and new batteries, or batteries of different types.
6. Remove batteries from equipment which is not to be used for an extended period of time.
7. For recycling and disposal of batteries, please check and comply with your local regulations.

Warranty Information

Check with local EKO retailers and distributors for more warranty information.

Not Covered By Warranty

1. Damages due to user mishandling or other than its intended use in a typical household activity .
2. Damages due to natural disasters such as fire, earthquake, flood and other Force Majeur events.
3. Damages including dents, scratches, and water damage due to transport handled by the user.
4. Any modification to the product, including disassembly or attempts to repair by the user.
5. Intentional damage to the product.

*To request after-sales service, please provide proof of purchase from EKO authorized retail channels.

*All copyrights belong to EKO.



* We apologize for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.