

**HAPPY
NUTS**

THE BALLBER™



USER GUIDE

JUST THE TIPS

USING YOUR GUARD

Step by Step

- Step 1** Choose your guard, if desired.
- Step 2** Press power button to turn on trimmer.
- Step 3** Slide trimmer blade across skin to remove hair, repeat as necessary.
- Step 4** Rinse the blade under running water and wipe with a soft cloth. Store in a dry place.



VISIT WWW.MYHAPPYNUTS.COM/REGISTER
REGISTER THE BALLBER™ & JOIN THE NUT CLUB
TO RECEIVE A FREE, EXTENDED WARRANTY.

4 Different Lengths

Instructions:

To attach the guard, slide it over the top or bottom of the trimmer blade so that the notches on the sides of the guard cover the hardware on the sides of the trimmer. To remove the guard, unlatch one side of the guard and remove from the blade.



USE NO GUARD OR 1MM GUARD FOR A TIGHT TRIM



USE THE 3MM GUARD FOR SOME STUBBLE



USE 5MM GUARD FOR A LONGER TRIM

CHARGING

During Use:

When the trimmer is charged, the indicator light will show as green. The indicator light flashes red when the trimmer needs charging.

Charging:

The red indicator light turns on while charging & turns green after the battery is fully charged. The trimmer will take up to 120 minutes to fully charge & lasts up to 150 minutes on a full charge.



Disclaimer:

Do not overcharge. Overcharging can shorten the life of the battery over time. Only use the power cord provided.

REPLACING THE BLADES

Step 1

Push under the trimmer blade head with both of your thumbs in the direction of the arrow to detach the blade assembly. See picture below.

Step 2

Place the replacement blade into trimmer body with blade side-up & snap it into place.

Make sure you hear a click when attaching the blade.

Caution:

Ensure trimmer is turned off and not charging before replacing the blade. Do not use the trimmer if the blade is damaged.

Throw the broken blade away immediately. For optimal performance, blades should be replaced every 6 months or when the trimmer no longer provides the results you expect. Visit www.myhappynuts.com to purchase The Ballber™ replacement blades.



VISIT WWW.MYHAPPYNUTS.COM
TO EXPLORE PRODUCTS FOR MEN'S NUTS

USE CODE: BALLBER10
FOR 10% OFF NEXT ORDER | LIMIT ONE USE PER CUSTOMER

CLEANING

- Step 1** Use the cleaning brush to remove hair from the blade.
- Step 2** Rinse the blade under running water and wipe with a soft cloth.
- Step 3** Store in a dry place.

Caution:

Always ensure trimmer is turned off and unplugged before cleaning. Clean after each use.

IMPORTANT SAFETY INSTRUCTIONS

For household use only. When using an electric product, always follow basic safety precautions. Read all instructions before using The Ballber™. Save these instructions for future reference.

WARNING | TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

- Use this product only for its intended household use as described in this manual.
- This trimmer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the trimmer by a person responsible for their safety. Children should be supervised to ensure that they do not play with the trimmer.
- The trimmer is intended to cut hair, and is capable of cutting skin if not used carefully. Do not use attachments not specified by the manufacturer.
- This trimmer is for personal use only. Do not use it on animals.
- Always attach the power cord to the trimmer first, then to power outlet.
- Never use the trimmer if it has a damaged power cord or damaged power adapter, if it is not working properly, if it has been damaged, or after the charging cord has been dropped into water. Contact customer service at info@myhappynuts.com to determine if the product is under warranty.
- Keep the appliance away from direct sunlight and heated surfaces. Do not store at temperatures above 140°F (60°C). Do not place anything heavy on or pinch the appliance.
- To prevent possible damage to the power cord, do not wrap it around the product.
- Keep the air openings free of lint, hair and similar objects.
- Never drop or insert any object into any opening.
- Do not operate or plug in trimmer where aerosol (spray) products are being used or where oxygen is being administered.
- Always check the blade and trimming guard before using the trimmer. Do not use the trimmer if the blade or guard are damaged, as injury may occur.
- Always store the trimmer, attachments and power cord in a moisture-free area. Make sure the cord is disconnected from the trimmer.
- To recharge the battery, only use the supply unit provided with the trimmer.

DANGER | TO REDUCE RISK OF ELECTRIC SHOCK

- If connected to a power outlet, do not reach for the appliance that has fallen into water. Unplug immediately before retrieving appliance.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink. Do not place or drop into water or other liquid.
- Do not use while fully submerged in water.
- Always unplug the appliance from the electrical outlet immediately after charging. Unplug this appliance

BATTERY

THIS APPLIANCE CONTAINS BATTERIES THAT ARE NON-REPLACEABLE & MATERIALS THAT ARE HAZARDOUS TO THE ENVIRONMENT. BATTERY MUST BE DISPOSED OF SEPARATELY FROM HOUSEHOLD WASTE.

- Unplug and operate the trimmer until the battery runs out.
- Remove the screw at the base of the backside of the trimmer.
- Remove the battery and PCB (Protection Circuit Board) for disposal.
- Dispose of the battery safely according to your local environmental laws and guidelines.

For assistance, email us at info@myhappynuts.com for additional support.

The Ballber™ is designed in California and assembled in China. Distributed by Suit Up Brands LLC, Playa Del Rey, CA 90293.
© 2021 Suit Up Brands LLC. All rights reserved. Happy Nuts and The Ballber are trademarks of Suit Up Brands LLC, registered in the U.S.



**WE'RE MAKING
YOUR NUTS
OUR BUSINESS**



*Scan to activate an extended warranty
and get 10% off your next order*