

SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed including the following.

- This BODUM coffee grinder is intended for grinding coffee beans for domestic use only. Do not use to grind anything else as this would damage the appliance.
- Before operating this appliance for the first time, read all instructions. Failure to observe the instructions and safety notes may result in hazardous conditions.
- After unpacking the appliance, check it for damage. If in doubt, do not use it, contact your dealer.
- Keep the packaging materials (cardboard, plastic bags etc.) out of reach of children (danger of suffocation or injury).
- This appliance is designed for household use only. Do not use outdoors. Do not place on or near a hot gas or electric burner, or in a heated oven.
- The manufacturer rejects any liability for damage or injury caused by improper or unreasonable use. Do not use appliance for other than intended use.
- Do not allow children to play with the appliance.
- Close supervision is necessary when any appliance is used by or near children or not familiar persons.
- This appliance is not intended for use by young children or infirm person unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely
- Never touch the appliance with damp or wet hands. Do not touch the mains cable or plug with wet hands. Always unplug the appliance by holding the plug, not the cord. Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or it is dropped or has been damaged in any manner.
- Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- The use of any accessory attachment, not recommended by the appliance manufacturer, may result in fire, electric shock or injury to persons.
- In the case of a fault or malfunction occurring, switch the appliance off; do not attempt to repair it yourself. Have repairs to the appliance carried out only by a customer service workshop that is authorized by the manufacturer. Failure to comply with the above safety notes can compromise the safety of the appliance.
- Never attempt to exchange the mains cable of the appliance as special tools are required for this. To ensure continued safety of the appliance, if the cable needs to be repaired or exchanged,

have this carried out exclusively by a customer service work shop authorized by the manufacturer.

- Unplug from outlet when not in use before putting on or taking off parts and before cleaning. Never immerse the item in water: remember this is an electrical appliance.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Only clean the appliance using a brush or damp cloth.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs and the unit in water or other liquid.
- Avoid contacting moving parts.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Do not permit children to play with the device.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with the appliance.