

Troubleshooting

- To protect the non-stick coating: “Never use aggressive or abrasive cleaning products or utensils to clean
- the appliance”. “Clean the plates and the appliance’s housing with a damp soft cloth”.
- Too much steam or quality of the waffle’s poor, also to protect the non-stick coating: “Lightly coat the
- cooking plates with a little cooking oil or cooking spray”
- Faulty machine, quality poor, too much steam, soggy waffles: Use recommended recipe in the attached
- instruction manual. If you use your own recipe, you will have to adapt it by trying it out a few times and
- adjust as necessary to suit your tastes.
- Regarding overcooked waffles, you should periodically check them and remove the waffles when you
- are happy with them.
- If faulty, defective or poor quality is related to the waffle quality or the plates, please refer to above
- points plus the maintenance instructions in the manual which will help ensure the waffle maker continues to function for the future
- Cleaning the product by immersing in water can cause electrical problems. Not spraying the plates with a little oil evenly can result in uneven cooking.
- Never immerse the appliance, cord or plug into water or any other liquid. Never use aggressive or abrasive cleaning products or utensils to clean the appliance