

Elite Gourmet

COMPACT SLOW JUICER

MODEL: EJX600

INSTRUCTION MANUAL

Before operating your new appliance, please read all instructions carefully and keep for future reference.



Questions? Elite's customer service team is ready to help.
For more Elite products, visit us at shopelitegourmet.com.

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	2
SHORT CORD PURPOSE	3
POLARIZED PLUG	3
PARTS IDENTIFICATION	4
BEFORE FIRST USE	4
HOW TO USE	5
CLEANING AND MAINTENANCE	6
RECIPES	7
WARRANTY POLICY	11
RETURN INSTRUCTIONS	12

IMPORTANT SAFEGUARDS

The Elite Brand takes consumer safety very seriously. Products are designed and manufactured with our valued consumers' safety in mind. Additionally, we ask that you exercise a level of caution when using any electrical appliance by following all instructions and important safeguards.

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE.

WARNING: When using electrical appliances, basic safety precautions should always be followed as below:

1. READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.
2. Remove all bags and packaging from appliance before use.
3. Only use the appliance on a stable, dry surface.
4. This appliance is not for use by children or by persons with a physical or sensory limitation, as well as mentally limited persons or persons with a lack of experience and knowledge. These persons should not operate the appliance without additional guidance and supervision.
5. Children should not use or play with the appliance. Children should not be involved in cleaning and maintenance of the appliance. Keep the appliance out of reach of children.
6. This appliance is suitable for use in environments such as Home, Office, Hotel or Motel rooms and other residential settings.
7. ATTENTION: This appliance cannot be used with an external timer or a separate remote control.
8. Before use, check if the voltage indicated on the appliance corresponds with the voltage of your power source.
9. Do not let the cord hang on a hot surface or over the edge of a table or counter top.
10. Never use the appliance when the cord or plug is damaged, after malfunction or when the appliance is damaged. In that case, take the appliance to the nearest qualified service center for check-up and repair.
11. For maintenance other than cleaning, please contact customer service.
12. Close supervision is necessary when the appliance is used by or near children.
13. Elite Gourmet shall not accept liability for damages caused by improper use of the appliance.
14. Improper use of the appliance can result in property damage or even in personal injury.
15. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
16. Never let the machine work for longer than 20 minutes at a time.

SAVE THESE INSTRUCTIONS. THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.

SHORT CORD PURPOSE

Note: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a long cord.

Longer power-supply cords or extension cords may be used if care is exercised in their use.

If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the counter top or tabletop where it can unintentionally be pulled on or tripped over by children or pets.


POLARIZED PLUG

If this appliance is equipped with a *polarized plug* (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug.

If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarized plug.

PARTS IDENTIFICATION

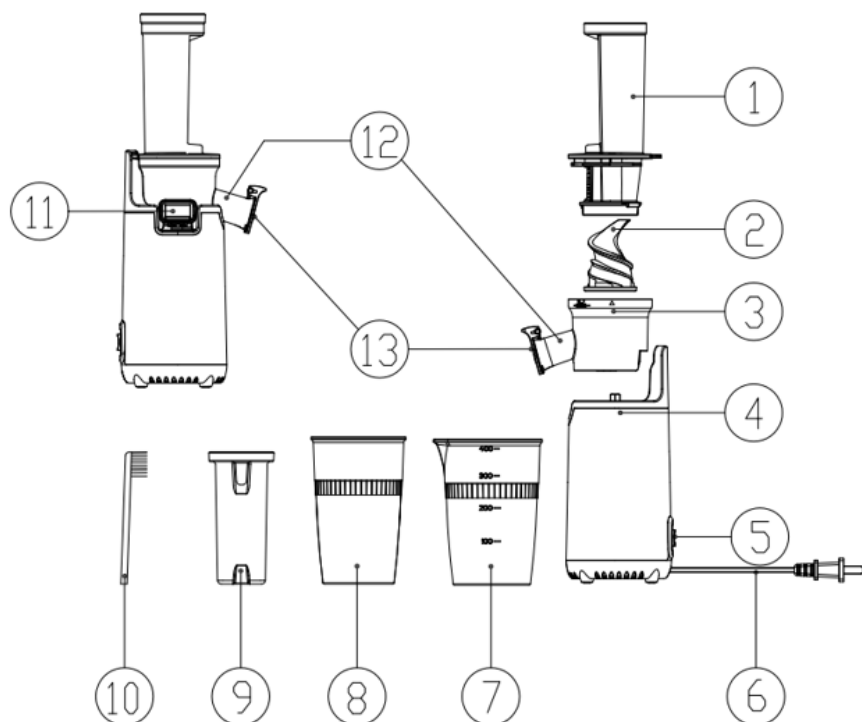

- | | |
|------------------------------|-----------------------|
| 1. Chute & Strainer Assembly | 7. Juice Cup |
| 2. Squeezing Auger | 8. Pulp Cup |
| 3. Juicing Bowl | 9. Pusher |
| 4. Power Base | 10. Cleaning Brush |
| 5. On/Off/Reverse Switch | 11. Pulp Spout |
| 6. Power Cord | 12. Juice Spout |
| | 13. Juice Spout Cover |

BEFORE FIRST USE

- Read all instructions and important safeguards.
- Remove all parts from the packaging.
- Wash all removable and washable parts, such as the Pusher, Chute & Strainer Assembly, Juicing Bowl, Cups and Brush in warm, soapy water. Rinse and dry thoroughly.

ASSEMBLING THE JUICER

Please make sure the unit is unplugged and the switch is turned to the “O” position prior to assembling the appliance.

1. Position the juice squeezing bowl on the Power base aligning the position of the spouts and the axle. (Fig 1)
2. Push the squeezing auger firmly into the center of the juice squeezing bowl, making sure that it is firmly seated or else the Chute & Strainer Assembly will not fit and lock properly. (Fig 2)
3. Position the chute on the bowl to align the “arrow sign” to the “unlock sign” and twist it clockwise until it clicks the safety lock. Make sure that the “arrow sign” aligns with the “lock sign” on the Bowl. (Fig 3)
4. Place the juice container and the pulp container under the relevant spouts. (Fig 4)

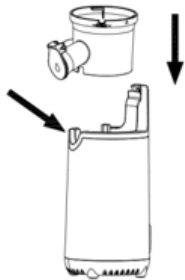


Fig. 1



Fig. 2



Fig. 3

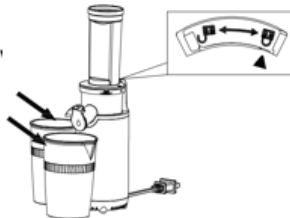


Fig. 4

HOW TO USE

1. The On/Off Switch has 3 positions: On (I), Off (O), and Reverse (R).
2. Check and make sure all parts are well assembled in correct position.
3. Prior to use, make sure that the juicer is turned off. Then plug into outlet. Position the Cups underneath the Spouts. Clean fruit and vegetables prior to juicing. For best results, cut ingredients into 1-1.5" segments.
4. Insert the prepped ingredients into the chute. Push the food down into the bowl using the Pusher.
5. Press the switch to Setting "O" to start the juicing operation.
TIP: Begin with firmer ingredients, and then squeeze softer ingredients.
NOTE: Let the juicer run for 30 seconds after the last ingredient was fed.
6. If the machine becomes stuck during use, turn the switch to R and hold down the switch so that the machine runs in the opposite direction. This could remove any obstructions. Release the switch to stop the reverse movement. If this does not work, turn the machine off, unplug from the outlet and reassemble the machine according to the instructions. Then try to start the machine again.
7. When the juice cup or pulp collecting cup is full or when all fruits and vegetables have been squeezed, turn the switch Off and close the Juice Spout Cover.

Open & Close of Juice Spout Cover

During the juicing process, you can keep the juice spout cover closed before the juice is full in the juicing bowl.



Benefit of the Juice Spout Cover:

- To stop dripping at the end of juicing.
- To mix the juice with different fruits and vegetables.



CAUTION:

- Remove hard pits or seeds prior to pressing to prevent possible damage to the Auger. The peel and pits/seeds must be removed from oranges, lemons, grapefruit, and melons before use.
- Never use the machine with an empty bowl, always add ingredients.
- DO NOT insert fingers or other foreign objects into the chute while the machine is in use.
- Use only the Pusher and NOT spoons, forks, tongs, etc.
- Never let the machine work for longer than 20 minutes at a time.
- DO NOT touch the On/Off Switch with wet hands.

CLEANING & MAINTENANCE

***DO NOT PLACE REMOVABLE PARTS IN DISHWASHER**

1. Turn the switch to Off. Close the Juice Spout Cover and remove the Cups. Unplug the juicer and allow it to cool completely before cleaning.
2. Remove the Chute by turning the chute counter-clockwise until the “arrow sign” aligns with the “unlock sign” (Fig 5)
3. Remove the Squeezing Auger by pulling it out upward. If it is difficult to remove, move auger slightly left to right while pulling upward. (Fig. 6)
4. Remove the Juicing Bowl by lifting it upward vertically. (Fig 7)

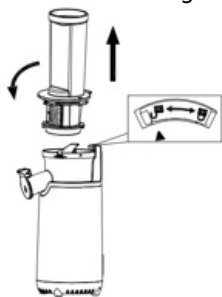


Fig. 5



Fig. 6

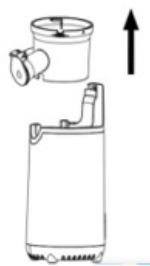


Fig. 7

5. HAND WASH disassembled parts under running water. Use the included Cleaning Brush to clean the sieve/strainer properly. **DO NOT PLACE PARTS IN DISHWASHER.**
6. Use the chisel end of the Cleaning Brush to help remove fibrous material from the Pulp Spout.
7. If there is still residue in the mouth of the Spout, you can turn the Juicing Bowl over, open the Silicone Pressure Valve and rinse with water. Then reattach the valve. (Fig 8)

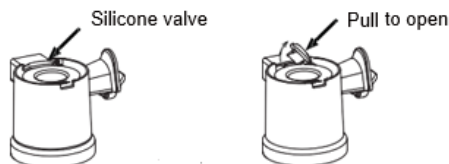


Fig. 8

8. To clean the seal ring in the center of the juicing bowl, please follow the steps below:
 - a. Turn the juicing bowl upside down for easier handling. Push the seal ring out with your thumb (Fig 9) and clean it with water.
 - b. After cleaning, install the seal ring in the center of the juicing bowl. The ribbed surface should face upward (Fig. 10). Make sure the groove of the seal ring is secure in the juicing bowl.
 - c. The flat side of the seal ring will be inside the juicing bowl while the ribbed side will be facing outward. (Fig 11)

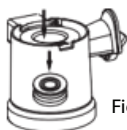


Fig. 9

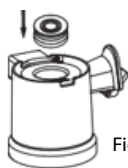


Fig. 10



Fig. 11

CLEANING & MAINTENANCE

9. DO NOT submerge the Power Base in water.
10. DO NOT use harsh metal sponges, as they could damage the machine.
11. Dry all parts thoroughly after cleaning. Once completely dry, reassemble (see page 5) and store in a dry place.

HELPFUL TIPS

- Starchy fruits and vegetables, such as sugarcane, avocado, banana, fig, mango, papaya, dragon fruit, kiwi and grapes, are not suitable for juicing as they will easily clog the sieve.
- Fibrous fruits and vegetables such as celery and pineapple, should be cut into 1-1.5" pieces prior to juicing.
- Seeds and pits should be removed from fruits like citrus and melon before processing.
- Seedy fruits like strawberries and raspberries might clog the sieve. Be sure to go slowly and limit these types of fruits to small quantities to avoid clogging.
- Do not put ice cubes into the chute. It may damage the squeezing auger.
- Only use the pusher provided with this juicer. Other accessories may damage the juicer or cause injury.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
The juicer stops running suddenly.	Too many ingredients put into the juicer.	Switch to "R" position instantly to make the ingredients return upwards. If the machine still stops running, please clean the machine before use.
	Hard fruits or vegetables have not been cut in small pieces.	Hard fruits and vegetables (such as carrot) shall be cut into thin strips or small cubes before putting into chute.
The juice yield is low or juice flows out of the main housing.	The Bowl and the silicone valve are not installed properly.	Please re-install the Bowl silicone valve by referring to the installation method.
Abnormal noise.	Parts cause extrusion sound during squeezing.	The sound is caused by extrusion of fruits and vegetables, which is normal phenomenon.
The Chute & Strainer Assembly cannot be opened.	There is too much pulps inside the bowl.	Press switch to "R" setting to eject the pulps backward.
	There is hard foods stuck inside.	Press switch to "R" to eject the object backward.
	The pulp mess is stuck.	Pour water into the Chute to soften the stuck pulp mess overnight.
The container & accessories are dyed after use.	Dyed parts are due to natural color of specific fruits/veggies.	This is natural color and unavoidable.

RECIPES

PINEAPPLE JUICE

1/2 pineapple	1 lemon
1 handful of parsley	1 green apple
1 small piece of ginger	2 branches of celery

- Scratch the skin off the ginger.
 - Cut pineapple, apple, celery and ginger into small pieces.
 - Turn the Juicer on. Place the ingredients in the chute one after another and use the pusher to push them through.
 - Squeeze the lemon to get all the juice through the juicer. Serve and enjoy.
-

POWER RED JUICE

6 red strawberries
1 red apple
1 bowl of cherries
1 beetroot

- Wash all ingredients and cut them into pieces.
 - Turn the Juicer on. Place the ingredients in the chute one after another and use the pusher to push them through.
-

AFTERNOON DELIGHT JUICE

4 carrots
1 mango
1 pear

- Peel all ingredients and cut them into pieces.
 - Turn the Juicer on. Place the ingredients in the chute one after another and use the pusher to push them through.
-

DETOX GREEN LEMON JUICE

1 lemon or lime	A small bunch of kale
1 bowl of parsley	1/2 glass of pre-made rose water
1/2 cucumber	

- Wash cucumber and cut into slices.
- Cut parsley and kale leaves and mix them with the cucumber slices.
- Add rose water and vegetables to the juicer and start the extraction.
- When juicing is done, squeeze and add all the lemon juice into the cup and stir.

RECIPES (cont.)

THE GREEN DELIGHT

1/2 cucumber
1 pear
Handful of wheat grass

1 medium celery
1 green cabbage
1 lemon

- Wash all ingredients and cut them into pieces except lemon.
 - Turn the Juicer on. Place the ingredients in the chute one after another and use the pusher to push them through.
 - When juicing is done, squeeze and add all the lemon juice into the cup and stir.
-

PAPAYA JUICE

2 grapefruits
1/4 papaya
1 bowl of grapes

- Cut grapefruit and remove white skin to avoid bitter taste. Cut into pieces.
 - Remove skin and seeds from papaya and cut into pieces.
 - Turn the Juicer on. Place all ingredients in the chute one after another and use the pusher to push them through.
-

WHEAT GRASS KIWI JUICE

1 handful of wheat grass
2 kiwi
1 fennel

- Peel all ingredients and cut them into pieces.
 - Turn the Juicer on. Place the ingredients in the chute one after another and use the pusher to push them through.
-

PEAR & TANGERINE JUICE

2 tangerines
2 pears
1 celery bunch

- Wash all ingredients and cut them into pieces.
- Turn the Juicer on. Place the ingredients in the chute one after another and use the pusher to push them through.

RECIPES (cont.)

KIWI POMEGRANATE JUICE

4 kiwis
2 pomegranates
5 ice cubes

- Peel and cut kiwi into pieces.
 - Cut pomegranate in half and collect the beads.
 - Turn the Juicer on. Place kiwi and pomegranate beads in the chute one after another and use the pusher to push them through.
 - Add ice and enjoy.
-

GRAPEFRUIT SPINACH JUICE

2 grapefruits
2 tangerines
1 bowl of spinach

- Peel and cut grapefruit and tangerine into small pieces.
 - Turn the Juicer on. Place all ingredients in the chute one after another and use the pusher to push them through.
-

APPLE WHEAT GRASS JUICE

1 lemon
1 handful wheat grass
1 apple
1 teaspoon vanilla extract

- Wash wheat grass and apple then cut them into pieces.
 - Turn the Juicer on. Place the wheat grass and apple in the chute one after another and use the pusher to push them through.
 - When completed, add lemon juice and vanilla extract. Mix well and enjoy.
-

STRAWBERRY & APPLE JUICE

2 apples
small bowl of strawberries
1/2 tablespoon vanilla extract
1/2 teaspoon nutmeg

- Wash fruits then cut them into pieces.
- Turn the Juicer on. Place the wheat grass and apple in the chute one after another and use the pusher to push them through.
- When completed, add vanilla extract & nutmeg powder. Mix well and enjoy.

LIMITED WARRANTY* ONE (1) YEAR
WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE

PLEASE DO NOT RETURN TO STORE OF PURCHASE.

If you have any problems with this unit, contact Customer Service for support.

1. Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. This Warranty applies only to the original purchaser of this product.
2. Retail stores/merchants selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.
3. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.
4. At its sole discretion, Maxi-Matic USA will either repair or replace the product found to be defective during the warranty period.
5. The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.
6. Consumer's remorse is not an acceptable reason to return a product to our Service Center.
7. This limited warranty covers appliances purchased and used within the 50 U.S. states plus the District of Columbia and does NOT cover normal wear of parts or:
 - Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
 - Damages caused in shipping.
 - Damages caused by replacement or resetting of house fuses or circuit breakers.
 - Defects other than manufacturing defects.
 - Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
 - Lost or missing parts of the product. Parts will need to be purchased separately.
 - Damages of parts that are not electrical; i.e. cracked or broken plastic/glass, scratched/dented inner pots.
 - Damage from service or repair by unauthorized personnel.
 - Extended warranties purchased via a separate company or reseller.
 - Acts of nature such as fire, floods, hurricanes, tornadoes, etc.

8. This warranty does not apply to re-manufactured merchandise.

Maxi-Matic, USA shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty.

*One Year Limited Warranty valid only in the 50 U.S. states plus the District of Columbia, excluding Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary by state, province, and/or jurisdiction.

**Any instruction or policy included in this manual may be subject to change at any time.

MAXI-MATIC, USA

18401 E. Arenth Ave. City of Industry, CA 91748

Visit: shopelitegourmet.com for Live Chat Support and Contact Us Form

RETURN INSTRUCTIONS

RETURNS:

- A. Any return of defective merchandise to the manufacturer must be processed accordingly by first contacting customer service to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.
- B. **IMPORTANT RETURN INSTRUCTIONS.** Your Warranty depends on your following these instructions if you are returning the unit to Maxi-Matic, USA:
1. Carefully pack the item in its original carton or other suitable box with sufficient cushioning to avoid damage in shipping.
 2. Before packing your unit for return, be sure to enclose:
 - a) Your name, full address with zip code, daytime telephone number, and RA#,
 - b) A dated sales receipt or PROOF OF PURCHASE,
 - c) The model number of the unit and the problem you are having (Enclose in an envelope and tape directly to the unit before the box is sealed,) and
 - d) Any parts or accessories related to the problem.
 3. Maxi-Matic, USA recommends that you ship the package via UPS ground service for tracking purposes. **We cannot assume responsibility for lost or damaged products returned to us during incoming shipment.** For your protection, always carefully package the product for shipment and insure it with the carrier. C.O.D shipments cannot be accepted.
 4. **All return shipping charges must be prepaid by you.**
 5. Once your return has been received by our warehouse, Maxi-Matic, USA will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph B.
 6. **Maxi-Matic will pay the shipping charges to ship the repaired or replacement product back to you.**



Elite Customer Service Center

Mail: Maxi-Matic, USA
18401 E. Arenth Ave
City of Industry, CA
91748-1227

Website: shopelitegourmet.com
Visit our website to contact us for support
Register your product online



To better serve our customers, we've included this QR code to scan with your mobile device and easily download helpful product tools. The link will direct you to the item page on the Elite Gourmet website so you can download the Instruction Manual, view product videos, tasty recipes, and other great Elite Gourmet products. It's simple, just access your camera, point at the QR code & your mobile device will do the rest.



[elitebymaximatic](https://www.facebook.com/elitebymaximatic)



[@elite_by_maximatic](https://www.instagram.com/elite_by_maximatic)

Elite is a registered trademark of Maxi-Matic, USA.
Copyright Elite by Maxi-Matic.

Actual product may vary from the images/illustrations in this manual due to continual product improvement.

MODEL: EJX600