

The product, accessories and other drawings in the manual are schematic diagrams for reference only. Due to product updates and upgrades, the actual product and the schematic may differ slightly, please refer to the actual product. If you have any questions, please contact customer service.

Precautions for installation

(please read carefully before installation)

- ❶ For the large size of this product, please try to assist 2 people during installation.
- ❷ Please confirm the quantity of each component carefully before installation.
- ❸ In order to protect the floor, please install it on a soft floor or a soft cloth.
- ❹ To avoid injury during installation, it is recommended that you wear gloves.
- ❺ Please note that once the Cylinder is installed, it is difficult to remove it. If you need to disassemble, please tap the head of the Cylinder with a rubber-headed hammer several times, and then remove the base. Then use the principle of vibration to continue to gently tap the base. Therefore, you need to use tools to complete it, so please be careful not to get injured.

(The product damage and accidents caused by this operation are not covered by the product guarantee, please be careful)

Precautions for use

- ❶ When cleaning, please wipe with a soft cloth.
- ❷ Please read the instruction manual for the functional use of the product.
- ❸ Please avoid using in damp or fire place. Please avoid direct sunlight.
- ❹ Please do not step on the chair or use it as a ladder, there is a risk of overturning.
- ❺ Please note that this product is limited to one person. The use of more than two people will destroy the stability of the product and have certain risks.
- ❻ For your safety, it is strictly prohibited to disassemble the Cylinder.

AF083



Backrest×1



Seat cushion×1



Headrest×1



Footrest slider×2



Armrest handle×2



Lumbar Pillow×1



Cylinder×1



Tilt mechanism×1



Footrest×1



Armrest surface×2



Base core×1



Cover of the recliner adjuster×2



Chair wheel×5



Base arm×5

Accessories table

① Spare screw for footrest slider (M6x16mm) x1	② Spare screw for armrest surface (M6x16mm) x1	③ Spare screws (M8x25mm) x2
④ recliner adjuster screws (M5x16mm) x3	⑤ Wrenchx3	⑥ Rubber bandx3

03

Insert the chair wheel into the base

04

Insert the Cylinder into the base

01

Align the C-shaped notch of the base arm with the column at the edge of the base core, move upward to buckle, and install 5 base arms in sequence

02

Put the base face up and press down firmly on the base core

05

Unscrew the backrest screw and place the backrest as shown

06

Backrest screw hole
screw hole of the cover of recliner adjuster
Backrest screw hole

Fix the backrest with backrest screws (Note: first align the upper holes of the main recliner adjuster
(Note: first align the upper holes of the main recliner adjuster (the side with the handle), and then tighten the 4 backrest screws in sequence))

07



Buckle up the cover of the recliner adjuster as shown and fix it with the recliner adjuster screws

08



Unscrew the pre-installed screws of the tilt mechanism, put on the tilt mechanism as shown, and fix it with the tilt mechanism screws
(Note: After all the screws are screwed in 1/3, then tighten them all; after installation, the operating lever is on the right side of the cushion when a person sits on the chair)

11



Unscrew the pre-installed screws of the footrest slider, place the footrest slider as shown, and screw on the footrest slider screws
(Note: Do not tighten the four screws completely)

12



Insert the footrest into the footrest slider hole. Swipe it back and forth several times
(Note: When the sliding is not jammed, tighten all the footrest slider screws)

09



Lifting switch

Unscrew the pre-installed screws of the armrest surface, then fix the armrest surface and the armrest handle with them
(note: the thick side of the armrest surface is on the same side as the handle lift switch)

10



Unscrew the pre-installed screws of the armrest on the seat cushion, place the armrest as shown, and fix it with the armrest screws

13



Insert the footrest back into the cushion, and put rubber bands on the top of the sliding rod


14



Insert the assembled base and cylinder into the hole of the tilt mechanism



Stand upright the chair and install the headrest as shown

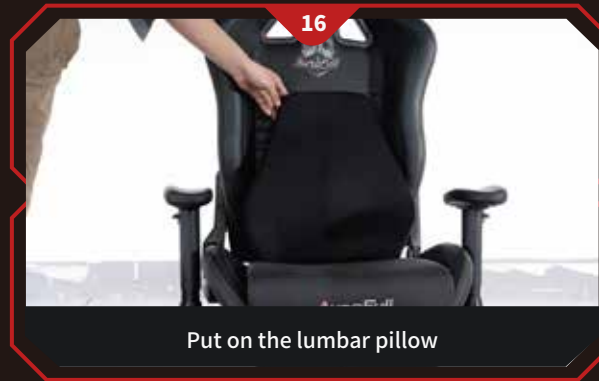

Put on the lumbar pillow

product instructions



Lifting function

If the person is not sitting on the chair, the chair can be raised by raising the lever on the bottom right Tilt mechanism of the cushion. A person sits in a chair, raise the lever on the right Tilt mechanism of the seat cushion, and then descends



Reclining function

The person sits on the chair, the person leans back and pulls the handle on the right side of the cushion, the chair can lie back, when lying at a proper angle, release the handle to lock the backrest; continue to move the handle up, the person recovers Sitting back, the backrest can rebound

Troubleshoot common problems

❶ After the installation, found the chair leaning forward

The Tilt mechanism is reversed. Please remove the Tilt mechanism and change its direction, refer to step 8.

❷ The backrest cannot be installed

Please refer to step 5 and step 6. If you still have problems, please contact after-sales customer service.

Manual publication date: March 20, 2021