



## **Electric Charcoal Starter**


### **User Manual**



(Product picture & specifications are for reference only)

Thank you for purchasing WishDirect® electric charcoal starter. To reduce the risk of injury, please read the operating instructions through carefully before using the device, and then store with the machine for future reference!

## Overview

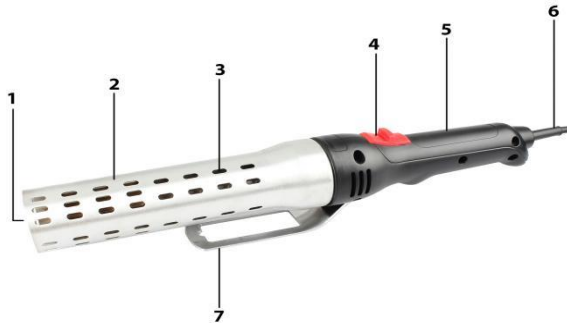

### Components:

- 1 Hot Air Nozzle
- 2 Cooling Body
- 3 Air Intake Holes
- 4 On/Off Switch
- 5 Handle
- 6 Connection Cable
- 7 Device Foot (also be used as wall mount)

### Technical information

|                   |               |
|-------------------|---------------|
| Power supply      | 110-120V~50Hz |
| Power consumption | 2000W         |
| Temperature       | 650C°/1200F°  |
| Volume of air     | 500 L/Min     |

Fire lighter is **CE** certificated and **SGS** tested, great for igniting charcoal, wood, briquettes and others for fireplace, fire pit, campfire, BBQ, grill, smoker, pizza oven, etc.

## SAFETY INSTRUCTIONS



Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire or serious injury.

### IMPORTANT WARNINGS

1. This appliance can't be operated by individuals with disabilities or persons unfamiliar with these instructions, including children.
2. Do not operate the appliance in explosive atmospheres, such as flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
3. Keep the hot electrical device away from the electrical cable or other flammable materials.
4. The appliance plugs must match the outlet. Never modify the plug in any way.
5. Do not expose the appliance to rain or wet conditions.
6. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
7. Never leave the hot air device unattended when it is in operation.
8. Using personal protective equipment, like eye protection, dust masks, non-skid safety shoes and hard hat helps to reduce personal injuries.
9. Don't touch the metal surface when it's heating or still not cool after using.

10. Cool down the fire lighter before packing away. Ensure the switch is in the off-position before connecting to power source, picking up or carrying the tool.

## Product Introduction

WishDirect® electric charcoal starter is a convenient device for getting quick startups of fire. You can start cooking almost right away with getting hot coals and briquette piles within minutes. The bounce button design can reduce risk of overheating and avoid injury effectively. The fire starter can be operated for any indoor and outdoor use, like BBQ grills and smokers, fireplace, campfire, wood stove, fire pit, pizza oven.

## Product Features

**Powerful Fire Igniter:** Designed with 120V/2000W heating element, our firelighter offers the easiest way to get fire within minutes with the clean superheated air, reaching temperatures up to 1200°F.

**Easy to Use:** Pull the button, the appliance starts working. Release the button it bounces back automatically. The charcoal starter will not be affected by outdoor wind or temperature, keeping the same start-up all the time.

**Humanized Design:** The metal shield is easy to clean and high heat-resistant. The device foot can be used as stand for placing the appliance and also can be a wall mount. The handle with ergonomic design is easy to grasp.

**Non-toxic & Odorless:** Electric charcoal lighter starts the fire up without smoke, smell, toxic additives or chemicals. Keep you and family safe and free from fluid lighter taste.

## Before the First Use

Before the first use, please take out the product from package and read this manual carefully. Please pay particular attention to operational instructions and cautions to avoid any injury or property damage. Please clean the surface with a clean damp cloth and dry thoroughly. Never immerse the appliance in water or any other liquid. Never clean the charcoal starter in the dishwasher.

## Operation Steps

1. Open the package.
2. Check whether the entire product is in good condition.
3. Plug connection cable in a suitable power supply socket. Use your own unwound extension cable if necessary.
4. Use your thumb to push the switch and hold. The device will begin to blow hot air.
5. Use the hot air to heat charcoals or briquettes in one place and then continue towards that same spot, fire will be lit within minutes.
6. Release the button and the button automatically bounces back to switch itself off.
7. Totally Cool down the fire lighter before packing or storing.

## Care and Maintenance

The device is large extent maintenance-free. But correct care or maintenance is essential to ensuring that this product is in good condition and safe for long-term use.

1. Stop using when the power cord and plug appear worn out, deformed, discolored or damaged.
2. Ensure that the air inlet and outlet openings are always clean and free from dirt.
3. Clean the item with a damp cloth. Don't use, turpentine paint stripper, petrol or other similar substances.
4. Do not expose to rain or moisture. Store indoors.
5. Connect to a properly grounded outlet only. Never modify, disassemble the plug and device parts in any way.
6. Do not allow the hot parts of the firelighter to touch the cord or other flammable materials.
7. Pack the device well or use the original packaging to avoid transit damage.

### **Troubleshooting**

If you experience any problem with the appliance, or need any technical assistance and product return information, please send e-mail to [support@wishdirect.net](mailto:support@wishdirect.net) for Electric Charcoal Starter customer care team.

All contents in this document have been checked carefully. WishDirect® Company reserves the right to interpret any printing mistake or misunderstanding of content.