

DIGITAL KITCHEN SCALE

ADVICE FOR USE AND CARE

- Placing your scale on a hard flat surface to ensure the greatest accuracy and repeatedly.
- Clean your scale with a damp cloth but do not allow water to get inside the scale.
- Do not use chemical abrasive cleaners to clean the scale.
- Do not allow your scale to become saturated with water as this can damage the electronics.
- Do not store the scale in an upright position when not in use as this will drain the batteries.
- Remove the batteries if the scale is not being used for a long time
- Treat your scale with care because it is a precision instrument.
- Do not drop it or jump on it.