 



QUICK START GUIDE

Intended Use

The electric spin scrubber can clear stains on the surface of objects by rotating at high speed. It is mainly used for cleaning various indoor and outdoor scenes such as bathroom, living room, and kitchen.

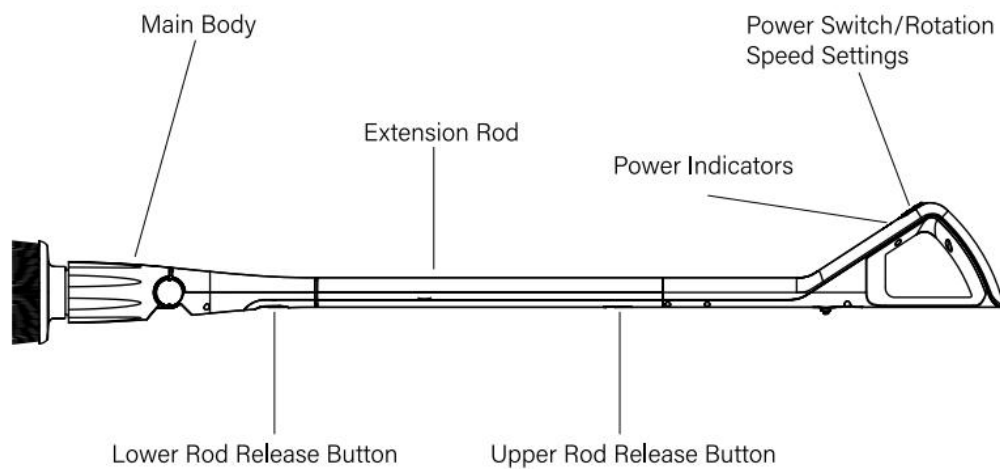

 Small Flat Brush
Suitable for cleaning stoves in smaller areas and soap in the bathroom




Corner Round Brush
Suitable for curved surface, 360-degree no dead angle cleaning



Hard Flat Brush
Large contact area, efficient and quick for cleaning stains



Pointed Brush
Clean up the dust in the corner gap

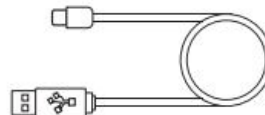


USB Charging Cable

Installation and Use

1.Extension Rod Operation

The product has a three-stage design and the length can be adjusted freely according to use scenes. Please press and hold the rod release button when inserting and pulling out the extension rod.

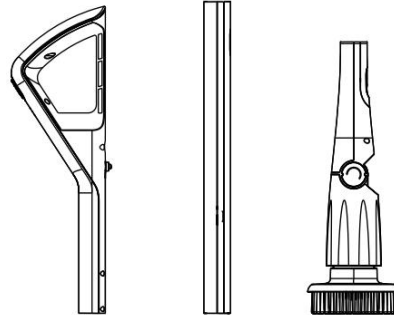


Note:1) Please fully charge the electric spin scrubber before first use.

2) No submersion in water above the shaft.

2.Brush Installation and Replacement


Brush head installation: When you install the brush head, align the connector of the main body and then insert the brush head directly.

Brush head replacement: Hold the brush head with your hand and pull it out, then insert other brush heads.

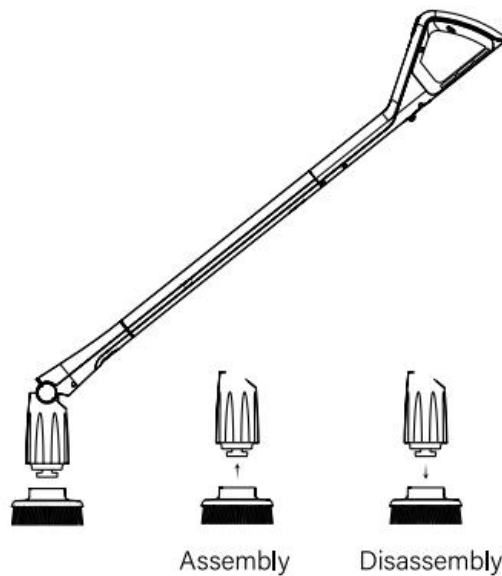

3. Angle Adjustment

The angle adjustment button on either side of the spindle can be pressed for a maximum of 84°.

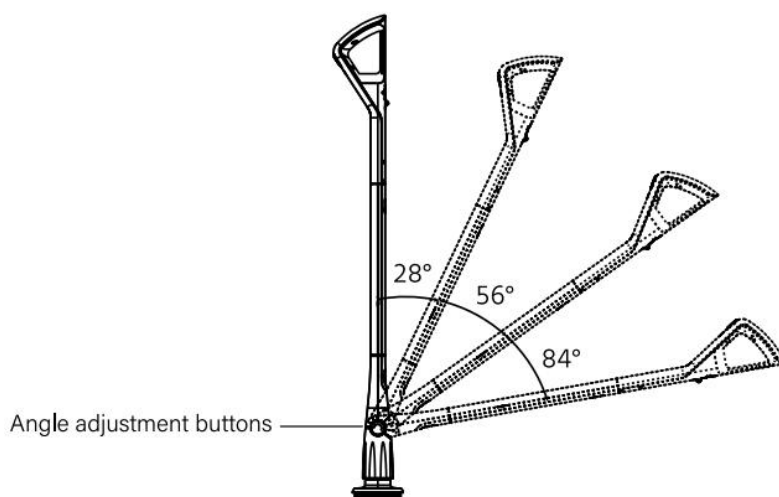

Warm Tips

How to have a better cleaning?

Before using the electric spin scrubber to clean, please soak the stains with cleaning solution for 5-10 mins.

Why does the brush head stop rotating when using?

Please hold the electric spin scrubber stick to aim at dirty spots without applying too much pressure on the rotating brush head, or the brush could be cut off and get damaged. The brush head will stop rotating.

Why do all the indicator lights keep flashing?

Please check whether the handle and the body are assembled in place. After assembly, when the indicator lights stop flashing, Restart the machine.

Errors and Corrective Measures

Doesn't work after power on	Please check if it's in charging status. Unplug the charger and restart it.
	Please check whether the handle and the telescopic rod are assembled in place. After assembly, restart the machine.
	Please restart it or check if the battery capacity is sufficient.
Unable to charge	Charging indicator lights are off. Please check if the charger is well inserted.
Stop working	If it stops working suddenly, please restart it or check if the battery capacity is sufficient.

After-Sales Service

If you have any problems during use, please contact us with this email: support@tilswall.com or official website: www.tilswall.com, we will help you solve it as soon as possible, your good experience is our life long pursuit.