

# OPERATION INSTRUCTION

(A)Light



(D)Start/Stop

(B)Mode

(C)Reset


## A.Features :

- ◆ 12 Digits LCD Display, Display Hour,Minute,Second,Month,Day and Week
- ◆ Chime hourly and Daily Alarm
- ◆ 12 / 24H format selectable, Auto Calendar
- ◆ 1/100 second Chronograph with split functions
- ◆ EL backlight

## B.Operational Manual:

- ◆ At any mode , press A key , the EL back light on for 3s.
- ◆ Press B key to convert mode:
- ◆ Normal time display mode → Chronograph mode → Alarm mode → Time setting mode

## Chronograph functions:

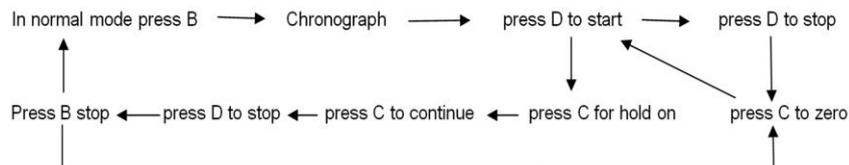

## Alarm & Chime ON/OFF:

- ◆ In normal mode press B twice enter into Alarm mode , press D key to ON/OFF the "ALM" / "SIG" function
- ◆ If "ALM" / "SIG" symbol appears, means ALM/SIG function ON, otherwise means OFF.

## Alarm Setting:

- ◆ In normal display Mode, press B key twice enter into Alarm Mode
- ◆ Press C key the Hours will flash, Press D key to adjust "Hour" for your Alarm. Pay attention to AM/PM
- ◆ Press C key the Minutes will flash. Press D key to adjust "Minutes" for your Alarm.
- ◆ Press B key to exit.

## Time & date setting:

- ◆ In normal Mode, press B key three times to enter into setting mode and the "Seconds" flashing. Press D key to zero.
- ◆ Press C the "Hours" will flash. Press D to adjust "Hours"
- ◆ Press C the "Minute" will flash. Press D to adjust "Minutes"
- ◆ Press C the "Month" will flash. Press D to adjust "Month"
- ◆ Press C the "Date" will flash. Press D to adjust "Date"
- ◆ Press C the "Week" will flash. Press D to adjust the "Week"
- ◆ Press B key to exit.