

Warranty

All products sold by BETUS® come with a one year warranty. If by any chance the item is damaged, defective or broken apart, you are covered with free replacement! Please do not hesitate to contact us for any questions, concerns or suggestions!

Questions or Concerns?

✉ orders@betusfactory.com

BETUS®
I d e a s F o r H o m e

FLIP PAGE DOWN CLOCK INSTRUCTION



©BETUS

WWW.BetusFactory.com



Installation

1. Installing the battery

Open the battery chamber and insert one D Carbon-Zinc battery in accordance with the correct polarities. (DO NOT USE ALKALINE BATTERY or it may affect the performance)

2. Setting the time

Adjust the time by turning the knob on right the side (rotate counterclockwise ONLY).

Please set the time 1 minute ahead to compensate the clock's mechanism. (e.g. set the time to 10:11 when it's currently 10:10)

Specification

ACCURACY	Average monthly difference of ± 90 seconds
OPERATING TEMPERATURE	-10°C to +50°C
BATTERY	1xD battery (Approximately 6 months of battery life)

Maintenance and Care

1. Avoid exposure to extreme heat or direct sunlight.
2. Handle the clock with care. Do not drop the clock and avoid heavy impacts.
3. Please keep this clock side up.
4. Please replace the battery every 6 months or when the clock begins to slow down.

FAQ

Q1: The clock arrives broken, number cards fall off or bent.

A1: During transportation, the cards may break and fall off due to rough handling. When this happens, please accept our apology in advance and contact us for free replacement cards and installation video. (orders@betusfactory.com)

Q2: The clock doesn't keep time accurately.

A2: Please replace the batteries and set the time 1 minute ahead to compensate the clock's mechanism. If the problem remains, please contact us for further instruction.

Q3: Any instruction on installing the number cards?

A3: Please follow the below pictures. You may email us for free instruction video.

