 


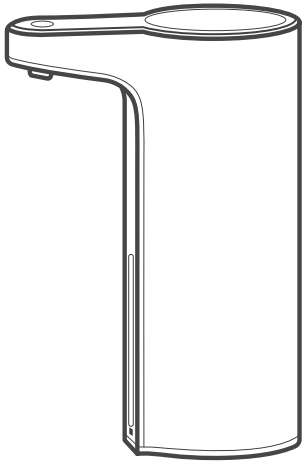


AROMA SMART SOAP DISPENSER


EK6088F (Foam)
EK6088L (Liquid)

Thank you for choosing
Aroma Smart Soap Dispenser.
Please read these instructions before using the product.
Graphics are for illustrative purposes only.

 
Product Introduction

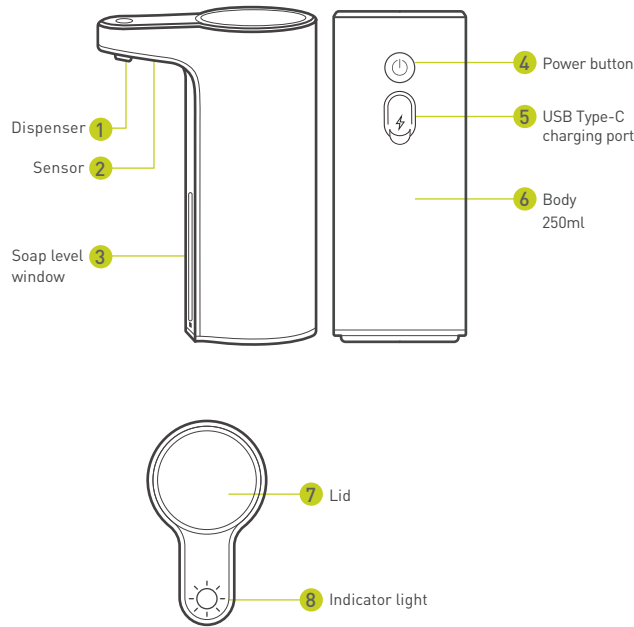


Power ON/OFF

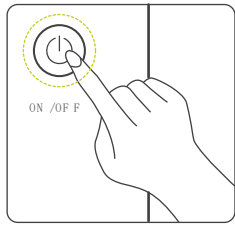 

 - ① Press and hold power button for 3 seconds to turn on.

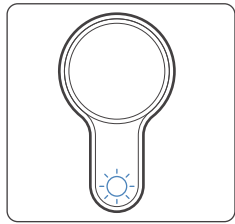

- ② Blue light turns on to indicate power on.

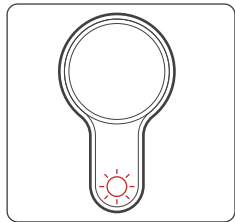

- ③ Press and hold power button for 3 seconds to turn off. Red light flashes to indicate power off.


Operating Instructions

① Sensor detected dispensing

Place hand within 0-8(±2)cm below the sensor to dispense soap.

Device returns to standby mode after dispensing.

* For first-time use or after refilling, place your hand under the sensor several times to activate and prime the pump.

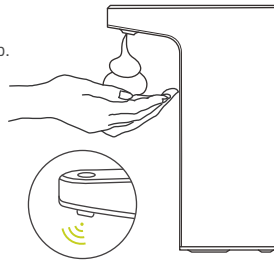

② Adjusting amount

Quickly press  button to adjust amount of soap desired. Each press increases the dispensing level:

Level 1


Press once: blue light flashes once – low output.

Level 2

Press twice in a row: blue light flashes twice – medium output.

Level 3

Press three times in a row: blue light flashes three times – high output.

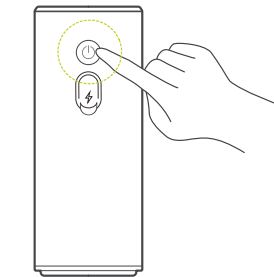


Charging

① Low power

Red indicator light flashes to signal low power.


* Dispenser can be used 20 times before it turns off automatically.

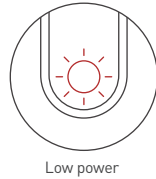

② USB charging

While charging, red indicator light flashes slowly. When indicator light turns blue without flashing, dispenser is fully charged.

*Use a certified 5V/1A power adapter.
*The sensor function can be used during charging.

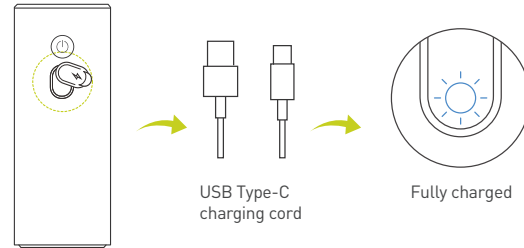


EK6088F
Battery life:
Assuming 30 pumps daily at the highest setting, one charge lasts up to 3 months.

EK6088L
Battery life:
Assuming 30 pumps daily at the highest setting, one charge lasts up to 2 months.


Refill

- ① When amount of soap dispensed is less than normal, check window to view soap level. Before refilling, switch off the power.

- ② Press the top to pop open the lid.

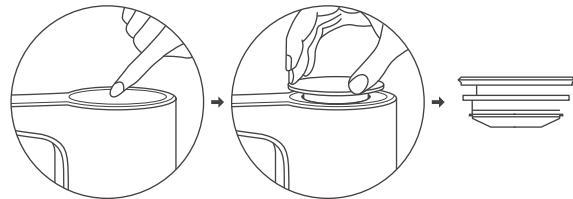


- ③ Pour soap into the container. Place lid back onto dispenser, then turn on power to continue use.

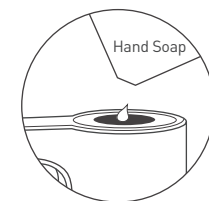


*Dispenser holds up to 250ml.
*EK6088F works only with foaming soap.
*EK6088L works only with liquid soap.

Cleaning

- ① Press the power button  twice, the blue light will flash continuously, then enter cleaning mode.
*In cleaning mode, blue light flashes continuously.

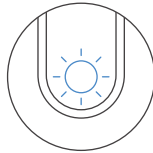

- ② Hold down the power button to start cleaning. Device dispenses water continuously during cleaning. Please clean the dispenser over the sink.
*Sensor pump function is deactivated in cleaning mode.

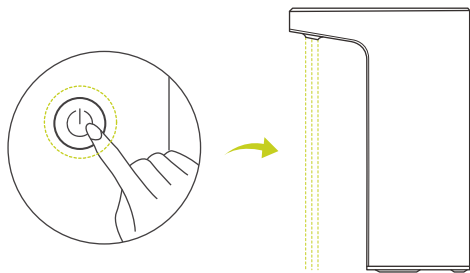

- ③ To manually exit cleaning mode, press the power button  twice again to return to standby mode.

*Cleaning mode will automatically exit after 20 seconds.

Product Packing List

Aroma Smart Soap Dispenser x1
USB Charging Cord x1
Instructions Guide x1

Care and Maintenance

• Cleaning

Clean exterior with microfibre cloth, plain water and soap.
Clean and unclog internal pump mechanisms with cleaning mode function.
Avoid using harsh chemical solutions.

• Charging

Powered by a built-in lithium battery (non-removable).
Charge using a 5V/1A adapter with USB Type-C cable.

• Attention:

1. Charge via USB Type-C cable using a 5V/1A adapter.
2. For indoor use only, avoid direct exposure to sunlight.
3. Do not excessively twist or bend USB cord.
4. Clean exterior with damp microfibre cloth.
5. Keep sensor clean and free of soap build up.
6. Using the incorrect type of soap could lead to malfunctioning of the product. Please use foaming hand soap with EK6088F, and liquid hand soap with EK6088L.
7. Do not disassemble parts or attempt repair. Doing so will void the warranty.
8. Do not place it under running water.

Troubleshooting

• No sensor (blue light does not turn on)

Check if device is low in power.
Check if hand is placed within sensor range.
Check if sensor is clean and free of dirt / soap build up.

• Blue light indicator flashes frequently

Device is in cleaning mode. Press power button twice to exit cleaning mode and return to standby mode for normal operation.

• Blue light is on, but no flow of soap

Check if the correct type of soap is filled (liquid vs. foam).
Start the dispenser again after fully charged.

• New dispenser first time use / first use after soap refill

Place hand underneath sensor pump and activate sensor for at least 5 pumps.

*Contact your local after-sales service channel for EKO products if issues persist after troubleshooting.

Warranty Information

Check with local EKO retailers and distributors for more warranty information.

Not Covered by Warranty

1. Damages due to user mishandling or other than its intended use in a typical household activity.
2. Damages due to natural disasters such as fires, earthquakes, floods, and other uncontrollable events.
3. Damages including dents, scratches, and water damage due to transport handled by the user.
4. Any modification to the product, including disassembly or attempts to repair by the user.
5. Intentional damage to the product.

* To request after-sales service, please provide proof of purchase from EKO authorized retail channels.

* All copyrights belong to EKO.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.