




ONIVA®
a Picnic Time brand

843-00 Concert Table

1. To open, push outward on both hooks to unlock table.
2. Place the opened table on the ground so the table surface is face down with the table legs facing up.
3. Pull both legs up from the table and push down on the hinges locking the legs in place.
4. Once both legs are opened and locked, flip the table over and push hooks down on either side to lock into place.

To fold table back into carrying case, reverse the above instructions.

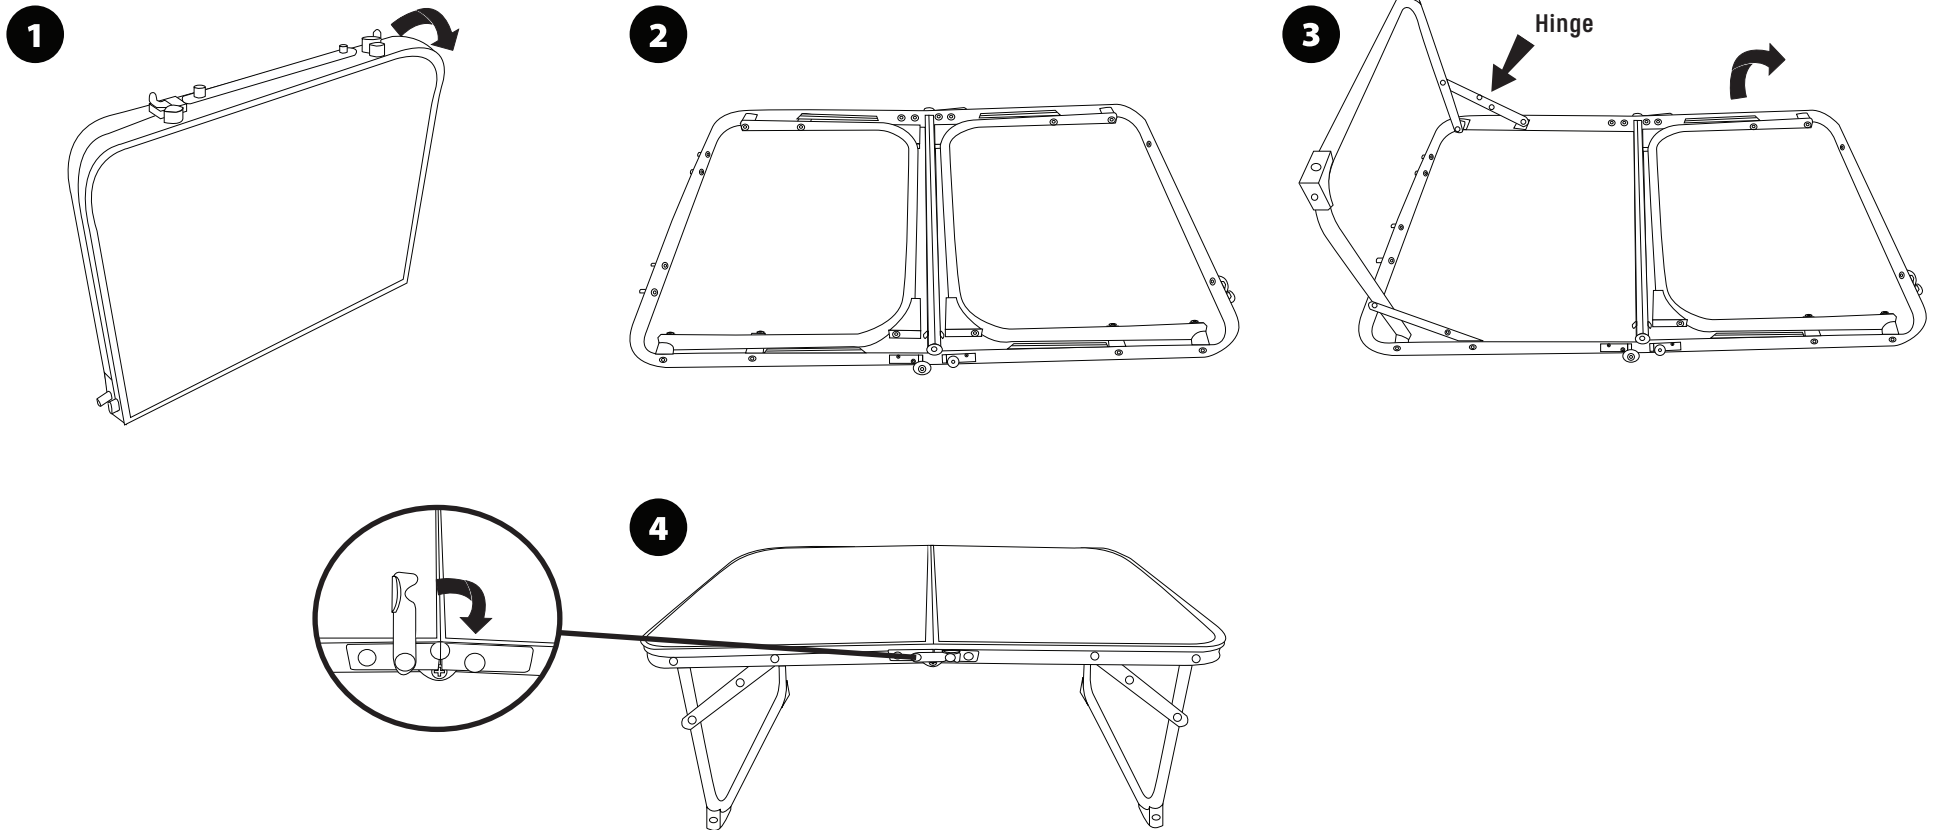

WASHING INSTRUCTIONS

Surface wash with a damp cloth only. Spot clean. Do not immerse in water. Dry immediately.

Made in China

©ONIVA a Picnic Time Brand® Moorpark, CA 93021, USA. All rights reserved