

### ONE YEAR LIMITED WARRANTY

LogicMark, LLC warrants to the original consumer/purchaser that this product shall be free of defects in material and workmanship under normal use and circumstances for a period of one (1) year from the date of original purchase for use. When the original consumer/purchaser returns the product pre-paid to LogicMark, LLC; 10106 Bluegrass Pkwy; Louisville KY, 40299, USA within the warranty period, and if the product is defective, LogicMark, LLC will at its option repair or replace such.

This warranty shall constitute the sole liability of LogicMark, LLC concerning the product. LogicMark, LLC expressly disclaims all other warranties INCLUDING, WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NO PERSON, FIRM, OR CORPORATION IS AUTHORIZED TO ASSUME FOR LogicMark, LLC. ANY OTHER LIABILITY IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. LogicMark, LLC and agents and distributors will bear no liability whatsoever for incidental or consequential damages or charges of any kind.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above disclaimer regarding incidental or consequential damages may not apply to you.

This warranty is void if the product has been damaged or tampered with or if the product or any such parts have been opened. In all cases of damage during shipment, a claim must be filed with the shipping carrier and not with LogicMark, LLC.

This warranty gives you specific legal rights; you may also have other rights which vary from state to state.

### OUT OF WARRANTY REPAIRS

If the warranty period has expired or if you are not the original owner of the product, LogicMark, LLC will at its option either (1) replace this product with a functionally similar (but not necessarily identical) refurbished product or (2) repair the original product and return it to the original consumer/purchaser after payment of repair/replacement charges has been received.



**CHECK THE CONTENTS** and make sure all parts are included.

**4 AAA  
Alkaline  
Batteries**



**Double Stick  
Velcro**



**Emergency Wall  
Communicator  
(EWC)**



**Screwdriver**



**2 Screws**




**INSTALL THE BATTERIES** using the screwdriver provided, alternating positive and negative according to the diagram on the inside of the battery cover.

3

### TEACH THE EWC TO THE BASE

ON THE CONSOLE: Press and release the Red Code Learn button, located on the back near the power cord. You will hear the voice prompt "Pendant Learning" from the base.

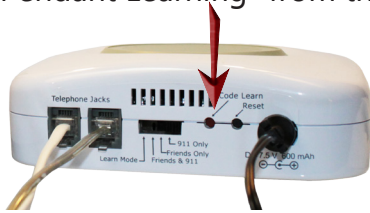

ON THE EWC: Press the Grey Test Button and the Red HELP Button at the same time and hold until you hear "Pendant Learning" from the EWC.



**NOTE: If you are replacing an EWC or pendant, be sure to erase all pendants first and then relearn all present pendants and EWCs to the system. To erase, simply press the Red Code Learn button for at least 8 seconds. You will hear the voice prompt "All Pendants Erased."**

4

**MOUNT THE EWC TO THE WALL** using either the screws provided or the double stick Velcro. If using the screws, place them exactly 3 1/8<sup>TH</sup> of an inch apart.



**NOTE: Be sure to mount EWC low to the ground and where it can be reached from both inside and outside of the tub.**

5

**CHECK THE SYSTEM.** Press the Grey Test Button for AT LEAST 4 seconds. You should hear the prompt "All Systems are OK" followed by the battery status. If you hear "Base and Pendant Out of Range," repeat Step 2. If still unsuccessful, call 1-800-519-2419.

