

USER'S GUIDE

I. Keys:

1. UNIT: Key for changing weight unit from kg → Jin → lb → oz → kg, 1kg=2Jin → 2.2Lb=35oz
2. POWER: Key for switching ON/OFF functions;
3. TARE: Key for removing tare choosing lock and locking functions.

II. Procedure:

When the screen displays (0.00or0.000), hook in goods, the screen display the weigh of the goods. Max weight shall not exceed full load add 40kg, overloaded the screen will display "O-Ld" or "Err" and the buzzer will warn, when the goods on the scale is stable, the scale will hold the weigh of the goods automatically, the buzzer utter the sound of hint and display "LOCK", If need new weighing, press the "ON/OFF" key and put the goods on the hook the weight.

Choosing Locking Function: Press TARE for 2 seconds. "H-ON" or "H-OFF" will appear on the screen. "H-ON" stands for locking function, which means weight of the article will be fixed on the screen with the sign "LOCK". Press TARE again to weight new objects. "H-OFF" stands for no locking function, which means weight of the article will not be fixed on the screen.

III. Caution:

1. Vertical position required for turn on or self test.
2. When weighing, take hold of the hanging belt instead of gripping the casing of the scale.
3. Avoid any strong shock or vibration during operation.
4. When the screen appear the sign (LO) batteries are exhausted and need to replace. If the scale is not use for long time, remove the batteries to avoid leakage and damage to the circuits.