

Anker Soundcore Liberty Neo [A3911] User Manual

[Home](#) » [Anker](#) » Anker Soundcore Liberty Neo [A3911] User Manual

Contents [[hide](#)]

1 Soundcore Liberty Neo User Manual

- 1.1 Wearing
- 1.2 Charging
- 1.3 Turn On / Off
- 1.4 Pairing
- 1.5 Controls
- 1.6 Reset
- 1.7 Specifications
- 2 Related Posts


Soundcore Liberty Neo User Manual



L




R

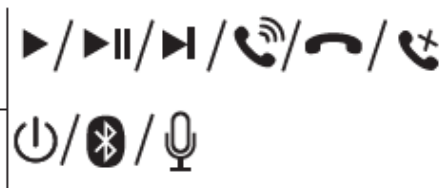

Wearing



 
1



2



 3

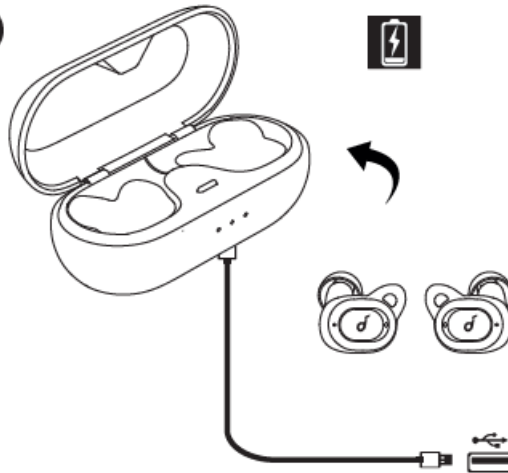

Remove the film on the earbuds when taking them out

of the charging case for the first time.



1. Choose the EarTips and jackets that fit your ears the best.
2. Insert the earbuds into the inner canal of your ears.
3. Turn to lock.



If all the jackets are too large, Soundcore Liberty Neo can be used without jackets.




Charging

Charge the charging case before using the earbuds for the first time. Place the earbuds in the charging case before you start charging.



**Clean the charging pin on a regular basis to prevent connection issues.
Open or close the charging case to activate the LED battery indicator on the charging case.**

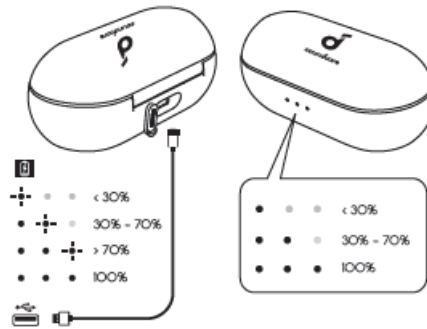

Earbud status indicator

	Flashing red (once every minute)	Low battery
	Steady white	Charging
	Off	Fully charged




To preserve battery lifespan, fully charge at least once every 45 days.




Turn On / Off

1. The earbuds switch on automatically when taken out of the charging case. To manually switch on the earbuds, press and hold the multifunction button for 1 second until the indicator blinks white on both earbuds.

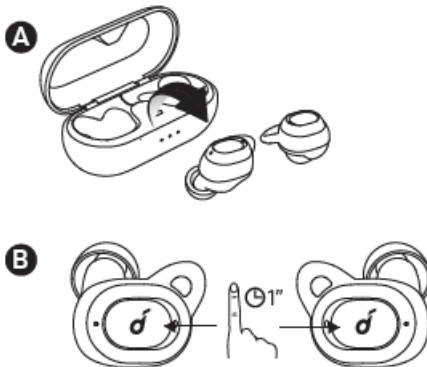

	ON	Flashing white once (Earbud status indicator)
--	----	---

2. The earbuds switch off automatically when placed back in the charging case. To manually switch off the earbuds, press and hold the multifunction button on both the earbuds for 5 seconds until the LED indicator turns red.

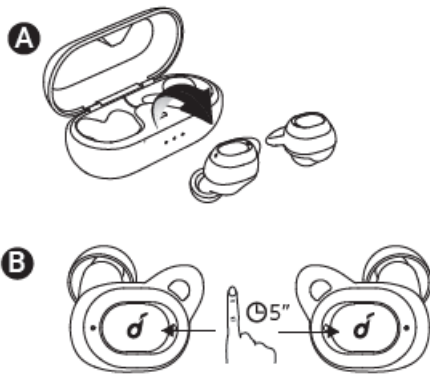


OFF Flashing red once (Earbud status indicator)



Pairing

Bluetooth connection (Device)

Enter pairing mode when earbuds are switched on

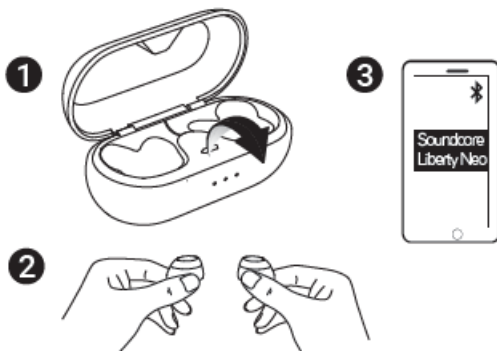

Rapidly flashing white

Pairing mode




Slowly flashing white

Connected to a device

True Wireless Stereo connection (Earbuds)

Enter True Wireless Stereo pairing mode when earbuds are switched on.

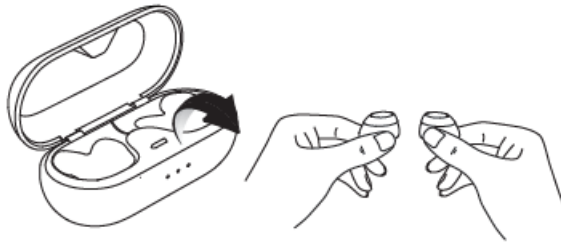

Rapidly flashing white
(Right earbud)
Flashing white (Left
earbud)

True Wireless Stereo is
connecting (The left earbud
is connecting to the right
earbud) but earbuds are not
connected to your device



Rapidly flashing white
(Right earbud)
Slow flashing white (Left
earbud)

True Wireless Stereo connection
is successful (The left earbud is
connected to the right earbud)
but earbuds are not connected to
your device



Slow flashing white
(Both earbuds)

True Wireless Stereo
connection is successful (The
left earbud is connected to the
right earbud) and earbuds are
connected to your device



Controls



Press

Play / pause



Press and hold for 1 second
(The multifunction button
on the right earbud)

Next track



Press and hold for 1 second
(The multifunction button
on the left earbud)

Previous track



Control volume via the
connected device

Volume up / down



Press

Answer / End call



Press and hold for 1 second

Reject call



Press (The multifunction
button on the right earbud)

Put current call on hold
and answer incoming call



Press and hold for 1 second
(The multifunction button
on the right earbud)

Switch between the held
call and the active call
Transfer a call between
headphones and mobile
phone



Flashing white

On a call



Flashing white

Incoming call






Double click the multifunction button on either one of the earbuds

Activate Siri / other voice control software



Reset

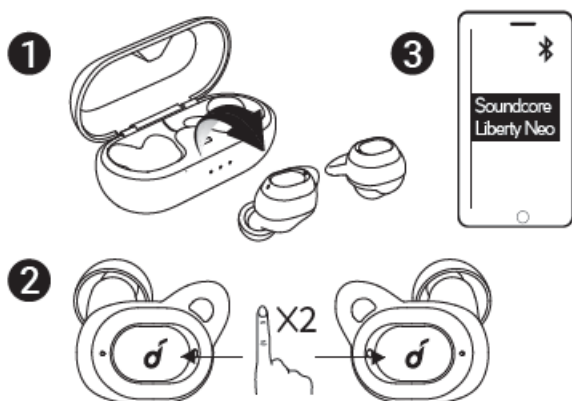

Reset the earbuds if you can only hear sound on one side:

1. Open the Bluetooth list on your mobile device and delete “Soundcore Liberty Neo”.
2. Take the earbuds out of the charging case, press and hold the multi-function button on both earbuds for 5 seconds until the LED indicator flashes pink, release the button when the LED indicator turns off.
3. Press and hold the multi-function button again on both earbuds for 8 seconds until the LED indicator flashes pink, then release the button when the LED indicator turns off.
4. Place the earbuds back to the charging case for resetting (Make sure charging case still has power), take the earbuds out of the charging case once the LED indicator on both earbuds turns solid white. Now the left earbud will automatically connect to the right earbud. The connection is successful if the left earbud flashes slowly and the right earbud flashes rapidly. If the connection was unsuccessful, place the earbuds back in the charging case and take them out again and repeat steps 2-4 until the connection is successful.
5. Open the Bluetooth menu on your mobile device, search for “Soundcore Liberty Neo”.

Specifications



Specifications are subject to change without notice.

Earbud Input Rating	5 V 0.3 A
Charging Box Input Rating	5 V 1 A
Charging time	1.5 hours
Playtime (varies by volume level and content)	5 hours
Weight (product net weight)	51 g / 1.8 oz
Impedance	16 Ω
Driver (full range)	6 mm × 2
Frequency response	20 Hz – 20 KHz
Bluetooth version	V5.0
Range	10 m / 33 ft

Please note that your rights under applicable law governing the sale of consumer goods remain unaffected by the warranties given in this Limited Warranty.

Anker Soundcore Liberty Neo [A3911] User Manual – [Original PDF](#)

Anker Soundcore Liberty Neo [A3911] User Manual – [Optimized PDF](#)

Related Posts



[LAMAX E-Scooter S5000 User Manual](#)

LAMAX E-Scooter S7500 PRODUCT NAME ...



[Anker Anker Soundcore Liberty 2 User Manual](#)

Anker Anker Soundcore Liberty 2 Product specification Product number :
Anker Soundcore Liberty 2 Bluetooth version : 5.0...



[Eachine TYR069 Racing Drone Quick Start Guide](#)

Eachine TYR069 Racing Drone Quick Start Guide Package Include 1x
integrated frame with 2.0mm plate thickness and 3D...



[Harman Spark HSA-15UA-BR User Manual](#)

Harman Spark HSA-15UA-BR User Manual HARMAN Spark Model: HSA
15UA BR SKU: AT&T 6466C Description Harman Spark is...