

without authorization from Chipolo, or has the Chipolo repaired at a repair shop that is not included in the Chipolo-approved repair network; D. Damage caused by force majeure (such as floods, fires, earthquakes, or lightning); E. The user is unable to provide a valid proof of purchase or the product model and barcode do not match or are altered; F. Natural wear and tear of the product (the exterior and similar); G. Faults, damages, or defects not caused by Chipolo; H. Barcode and warranty labels are damaged or unrecognizable; I. External damages (including wear, tear, and scratches) are not entitled to the warranty service; J. Our warranty does not cover services, which were verbally promised by the dealer but violate principles disclosed herein.

## REGULATORY COMPLIANCE

### FCC COMPLIANCE

Federal Communication Commission Interference Statement (FCC)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with the RF exposure SAR test exclusion

requirements for portable devices if a minimum separation distance of 5 mm is kept. However, the device shall be used in such a manner that the potential for human contact during normal operation is minimized.

The product complies with the FCC portable RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual.

Any changes or modifications not expressly approved by the party responsible for compliance, may void the authorization to operate this equipment.

### ISED CANADA COMPLIANCE

This device complies with ISED's licence-exempt RSS.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance, may void the authorization to operate this equipment. This device complies with the RF exposure SAR test exclusion requirements for portable devices if a minimum separation distance of 5 mm is kept.

However, the device shall be used in such a manner that the potential for human contact during normal operation is minimized.

### CE AND UKCA - DECLARATION OF CONFORMITY

Chipolo d.o.o. hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and of the Radio Equipment Regulations (RER) SI 2017 No. 1206. The most recent and valid version of the DoC (Declaration of Conformity) can be viewed at [chipolo.net/regulatory](http://chipolo.net/regulatory)

### ANTENNA SPECS

Modulation method: GFSK

Antenna power: < 1 mW

Operating frequency band: 2402-2480 MHz

### WEEE DIRECTIVE & PRODUCT DISPOSAL

At the end of its service life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for recycling of electrical and electronic equipment or returned to the supplier for disposal.

# chipolo

## Chipolo ONE Point

USER MANUAL • HANDLING AND WARRANTY • REGULATORY COMPLIANCE

## USER MANUAL

Chipolo ONE Point is an item finder that helps you locate your personal items using the Find My Device app on your Android device.

### LET'S GET STARTED

- 1 Press your Chipolo and place it next to your phone.
- 2 Wait for the pop-up to appear and follow the instructions on the screen.  
If the pop-up does not appear, visit [chipolo.net/point-popup](http://chipolo.net/point-popup)
- 3 After setup, you can locate your Chipolo in the Find My Device app.

### BASIC FEATURES

Chipolo ONE Point is a special edition of the Chipolo finder, that works exclusively with Google's Find My Device network through the Find My Device app on your Android device. The Find My Device app can help you locate a missing item by making the Chipolo ONE Point play a sound when nearby and by displaying its last known location on a map. Find a lost item by marking the Chipolo ONE Point as lost in the Find My Device app and get a notification when Google's Find My Device network locates it.

### NEED HELP?

Visit our support pages at [www.chipolo.net/support](http://www.chipolo.net/support) or contact our customer support at [support@chipolo.net](mailto:support@chipolo.net)

### BATTERY

This product has a replaceable CR2032 battery that will last up to 1 year. When the battery runs out you can replace it in 3 simple steps:


- 1 Use your fingernails or insert a smaller tool into the small gap on the side of the Chipolo and carefully remove the lid (image A1)
- 2 With your thumbs, push down the battery cover and rotate counterclockwise (image A2)
- 3 Remove the battery cover and replace the battery. To close, place the battery cover back on, rotate clockwise then cover with the Chipolo lid (image A3)

**Please use only the specified CR2032 battery type.**


A1



A2

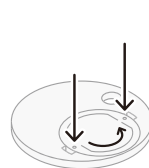

A3

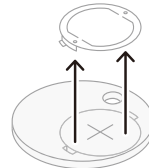

### HANDLING AND WARRANTY

#### REQUIREMENTS

Chipolo ONE Point works with Google's Find My Device app. Check compatibility at [chipolo.net/point-devices](http://chipolo.net/point-devices)

#### TECH SPECS

Range: up to 60 m (200 ft) - line of sight.

Temperature range: -15 °C to +50 °C (5 °F to 122 °F).

#### FACTORY RESET

How to do a factory reset:

1. Press your Chipolo ONE Point for 30 seconds.
2. Point will begin to beep in 1-second intervals.
3. Release the button right after you hear the 5th beep.
4. After a successful factory reset you will hear a confirmation sound.

For more information visit [www.chipolo.net/support](http://www.chipolo.net/support)

#### PRIVACY

Google's Find My Device network uses end-to-end encryption that prevents third parties from accessing data while it is transferred from one end to another. This means that neither Chipolo nor Google can access your location reported by the Find My Device network.

#### WARNING

Do not ingest battery, Chemical Burn Hazard. This product contains a coin battery. If the coin battery is swallowed, it can cause severe internal burns in just 2 hours and can lead

to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. This product is not a toy or edible. Mobile device casings can interfere with signal strength and decrease Chipolo's visibility. Large metal parts near your mobile devices and your Chipolo can interfere with the Bluetooth signal. Caution! Lithium battery inside. Risk of explosion in case of incorrect use. Please do not expose the product to a direct heat source. Please do not expose the product to any mechanical stress or impact. Do not attempt to disassemble your Chipolo. You run the risk of electric shock and voiding your warranty. Tips for the most efficient usage can be found at [www.chipolo.net/point-faqs](http://www.chipolo.net/point-faqs)

#### WARRANTY

2 years

Warranty is only valid under normal use of your device and when the Chipolo is purchased at Chipolo-approved distributors/sellers as stated at [www.chipolo.net](http://www.chipolo.net). Any purchase from sellers not authorized by Chipolo is not subject to any warranty and/or repair service. Man-made damages and any of the following conditions are all out of warranty: A. The warranty period has expired; B. Damage caused by human factors, including damages caused by usage under an improper operating environment and the failure to comply with the user manual; C. The customer disassembles, repairs or modifies the device