

Troubleshooting Problems

1. The unit has stopped and LCD backlight is flashing.

An obstruction has occurred. Blocking movement of the mamaRoo. Clear the obstruction and press play to resume.

2. The unit doesn't turn on.

Check that the unit is connected to a power source.

3. I cannot hear the built-in-sound.

Refer to page 17 to verify that sound is not muted. The mamaRoo is designed to turn off after 4 hours of uninterrupted use. If you would like to continue using your mamaRoo, press the power button.

4. I can't hear music from attached MP3 device.

Adjust the volume on both the mamaRoo and the MP3 device.

5. I can't remove the front end cap from the mamaRoo during disassembly.

Refer the image #5 n the disassembly section of this manual.

6. The packaging foam blocks do not fit when the base is repackaged.

The base must be hamed. Refer to image #9 in the disassembly section of this manual.