 


INTETURE

# User Manual

**BP10** Cordless Vacuum Cleaner

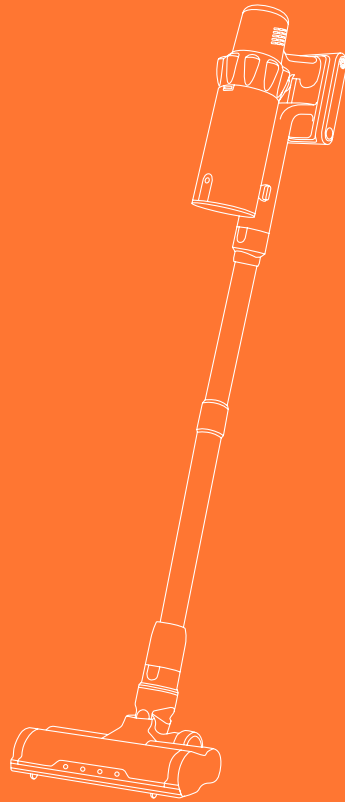

# Content

---

<b>1. WARNING</b>	<b>2</b>
<b>2. PACKAGE LIST</b>	<b>3</b>
<b>3. KNOW THE PRODUCT</b>	<b>4</b>
3.1 Product Details	4
3.2 Digital Touch Screen	5
3.3 Accessories Function	5
<b>4. PRODUCT ASSEMBLY</b>	<b>6</b>
4.1 Install Vacuum Cleaner	6
4.2 Install Wall Mount	6
<b>5. HOW TO USE</b>	<b>8</b>
5.1 Charging	8
5.2 Operating	9
<b>6. MAINTENANCE</b>	<b>11</b>
6.1 Main Body Cleaning	11
6.2 Empty Dust Cup	11
6.3 Wash Dust Cup and Filters	12
6.4 Brush Roller Cleaning	14
<b>7. SPECIFICATION</b>	<b>15</b>
<b>8. TROUBLESHOOTING</b>	<b>15</b>
<b>9. WARRANTY</b>	<b>17</b>

# 1. WARNING

 
 
 


 
 
 
 

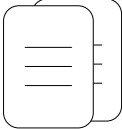 
Thank you for purchasing the INTETURE BP10 cordless vacuum cleaner. Before using this machine, please read the following safety warning first and take safety protection measures to avoid malfunctions caused by improper operation.

- ① This INTETURE appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of the appliance to ensure that they can use it safely.
- ② Suitable for dry locations only. Do not use or store outdoors with wet surfaces. Do not handle any part of the plug or appliance with wet hands. Store properly in a dry place indoors.
- ③ Do not use a damaged cable or plug. If the device or charger does not work properly, dropped, damaged, missed or dropped into water, please contact support@inteture.com , INTETURE after-sales team for support.
- ④ Do not vacuum flammable or combustible liquids, such as petrol, or use in areas where liquids may be present.
- ⑤ Turn off the power switch before plug or unplug the adapter.
- ⑥ Do not vacuum anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- ⑦ Do not use without filters or dust cup to avoid damaging the motor and contaminating the air. Wash hands after using the vacuum cleaner.
- ⑧ FIRE WARNING: Do not place this product on or near a cooker or any other hot surface and do not incinerate this appliance even if it is severely damaged. The battery might catch fire or explode.
- ⑨ Unplug the charger from the power outlet before performing routine cleaning or maintenance.
- ⑩ Battery leaks may occur under extreme conditions. If any liquid gets on your skin wash quickly with soap and water. If liquid gets into your eyes, rinse with water for at least 15 minutes immediately. Seek medical attention immediately.
- ⑪ Charge the unit with the charger we provided.
- ⑫ Avoid using this product to vacuum hard, sharp objects, as this may cause damage.

**Note:** The vacuum cleaner adopted thermal protection technology to prevent overheating, will stop working when the item is over-heated.


## 2. PACKAGE LIST

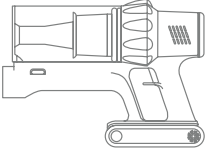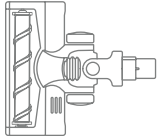 Please check and confirm the accessories and parts according to the following sheet before using.


 <p>Main Body*1</p>	 <p>Adjustable Extension Tube*1</p>		 <p>Motorized Floor Brush*1</p>
 <p>Long Crevice Nozzle *1</p>	 <p>2 in 1 Upholstery Brush*1</p>	 <p>Extra Hepa Filter*1</p>	 <p>Charger*1</p>
 <p>Wall Mount*1</p>	 <p>Extra sponge Filter*1</p>	 <p>Mini Cleaning Brush*1</p>	 <p>Quick User Guide*1</p>

## 3. KNOW THE PRODUCT

### 3.1 Product Details

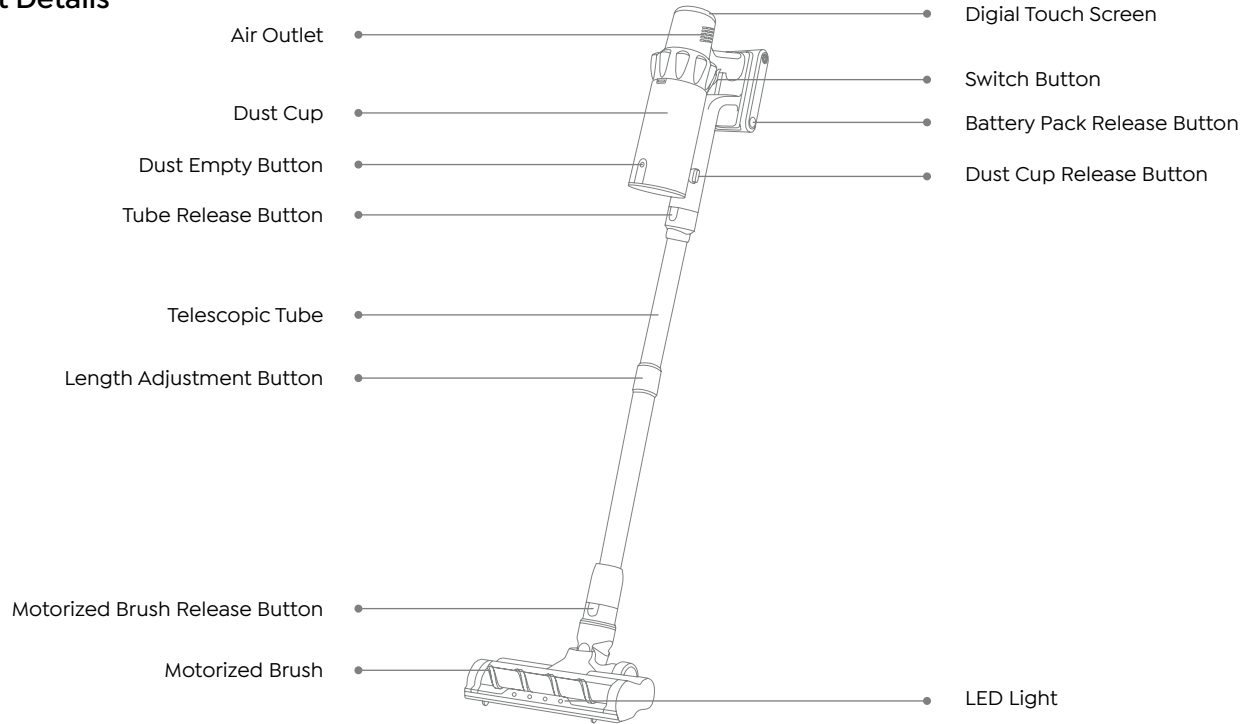

### 3.2 Digital Touch Screen

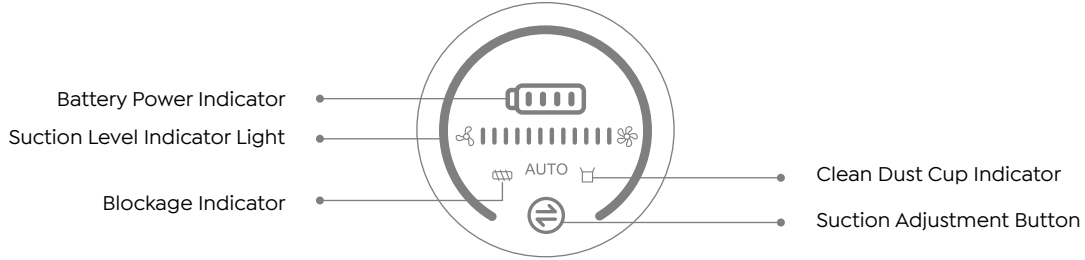 

### 3.3 Accessories Function

#### 2 in 1 Upholstery Brush

Easy to snap-on design, can help you remove dust and hair on the carpet.



#### Mini Cleaning Brush

Remove hair, rubbish, and micro dust on the accessories or filters.



#### Long Crevice Nozzle

Remove dust on the hard-to-reach areas like windows, bed feet, gaps between sofa, etc.



#### Multi-fuction Rolling Brush

Remove dust, debris, and hair from all kinds of floors, carpets, and velvet.



#### Wall Mount

 
Fix the vacuum cleaner and accessories on the wall hanger for easy storage.




## 4. PRODUCT ASSEMBLY

### 4.1 Install Vacuum Cleaner


- Directly Install Cleaning Accessories

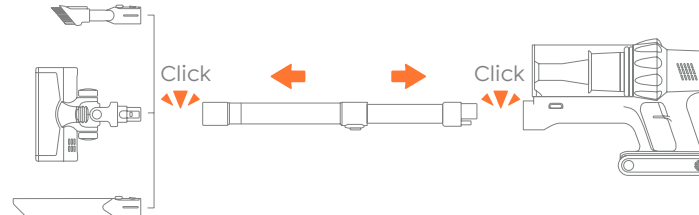

 - Install Extension Tube & Cleaning Accessories

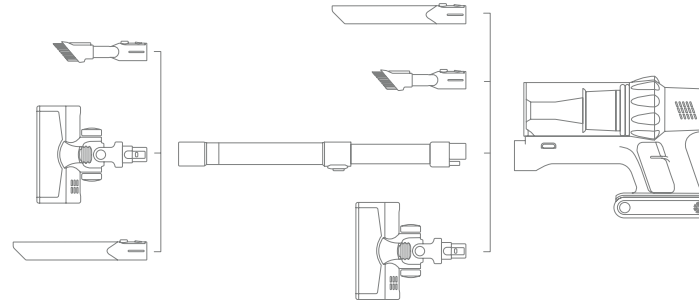

## 4.2 Install Wall Mount

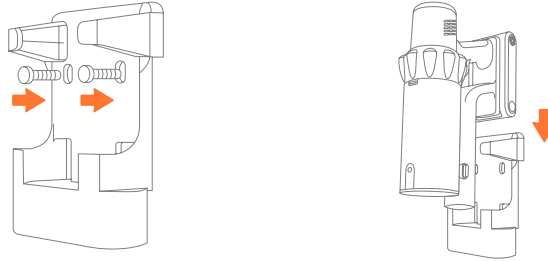 

### **WARNING**

- Please make sure there is no gas, water, or electrical cables and wires behind the mounting area.
- To avoid the dock dropping down, please make sure it must be installed firmly.
- Store appropriately indoors in a dry place. Do not expose the machine to sunlight or freezing temperature. Recommended temperature range: 39.2°F (4°C)-104°F(40°C).

## 5. HOW TO USE

 
### 5.1 Charging




- When using a new battery or using it for the first time after long-term storage, please fully charge the battery first.
- When storing and not using the vacuum cleaner for a long time, please ensure that it is charged and discharged at least once every three months.

#### • Charging Methods


① Connect the main body to charge.

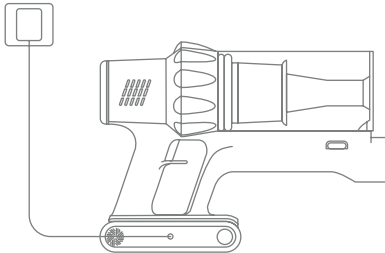

② Hang on the wall mount to charge.

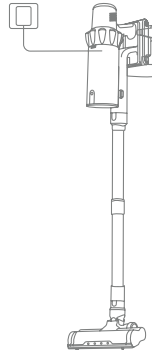 

③ Charge the battery directly

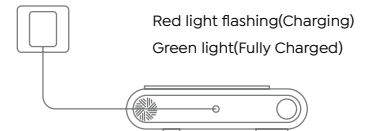 

## 5.2 Operating

 


**Before each use, make sure that**

- The battery is fully charged, and fixed in place.
- The dust cup and filters are cleaned, and fixed in place.


### • Start To Work

Press the switch button to turn it on, and it will start MANUAL mode.

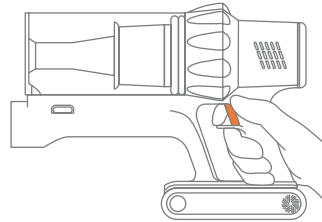


### • Select Cleaning Mode

 - ① In MANUAL mode, touch the "⊖" button to switch suction level. With the adjustment of the suction mode, the suction indicator light will change from gradient color to red in turn: MIN>MID>MAX.
- ② After switching to the highest suction level in manual mode, continue press the "⊖" button to switch to AUTO mode.

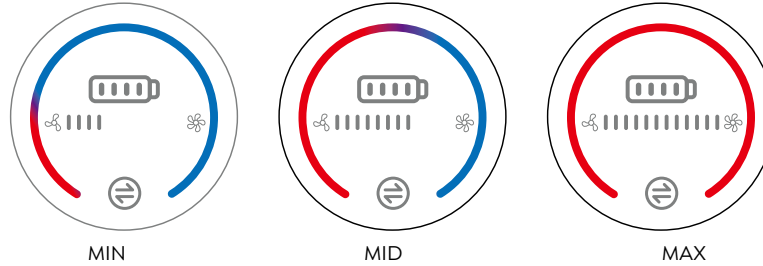

### • Abnormal Indicator

 When the red light flashing and the motorized floor brush does not work, it means that the motorized floor brush/telescopic tube/dust cup is blocked, please clean it immediately. When the floor brush is blocked, the red lock rotor prompt light will always be on, and when the ventilation port is blocked, the red lock rotor prompt light will flash 5 times. At the same time, the floor brush will stop working and the main motor will continue to operate.

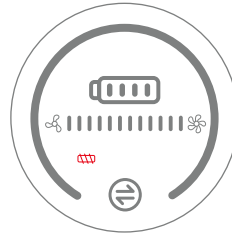


## 6. MAINTENANCE

Tip: Please clean the vacuum cleaner regularly to extend its lifespan.

### 6.1 Clean the Main Body

 
- Turn off the power before cleaning the body.
- Please use a neutral detergent, wipe the body with half-wet cloth.
- Please avoid sun exposure and store in a cool and dry place.

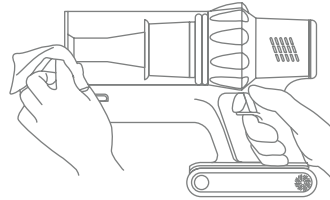


### 6.2 Clean the Dust Cup/Filters

- Empty Dust Cup

 When using, if the garbage in the dust cup exceeds MAX Line, please empty it in time.

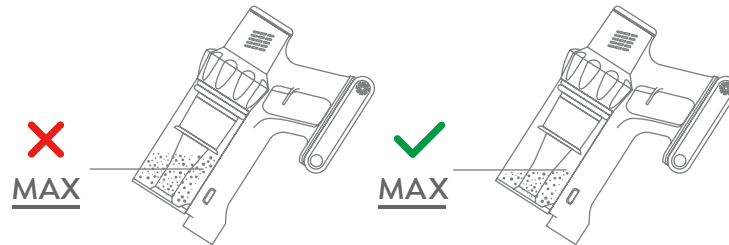

 
- Press the dust empty button to empty the dust.

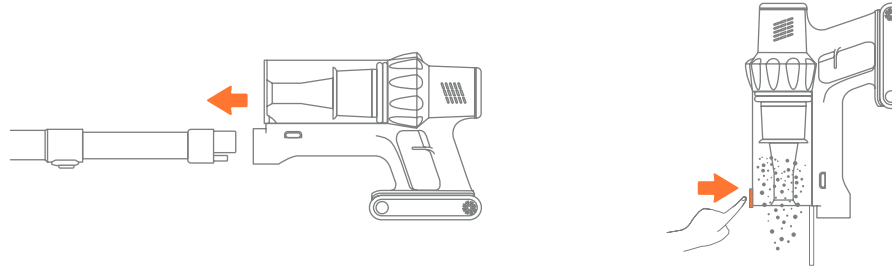

### 6.3 Wash Dust Cup and Filters

- Remove dust cup from main body.

 Press the dust cup release button on the main body, then get the dust cup released from the main body.

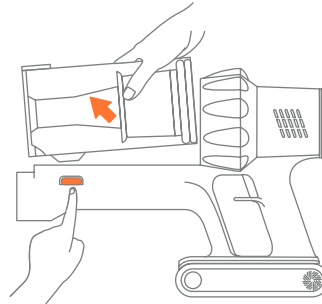


- Remove filters from dust cup.

First lift up the sponge filter, then lift up the entire cyclone filter, including the multi-cone filter.




- Remove HEPA filter from main body.

 
First lift up the sponge filter, then lift up the entire cyclone filter, including the multi-cone filter.

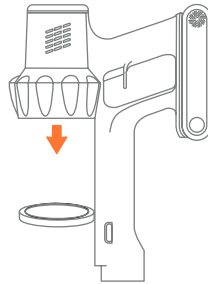

 - Clean dust cup and filters with water. Make sure that the dust cup and filters have dried before use.

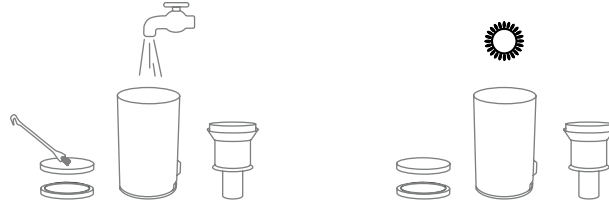

 
- Install the multi-cone filter and HEPA filter clockwise, aligning the clips to install the cyclone filter. Then install the sponge filter and dust cup.

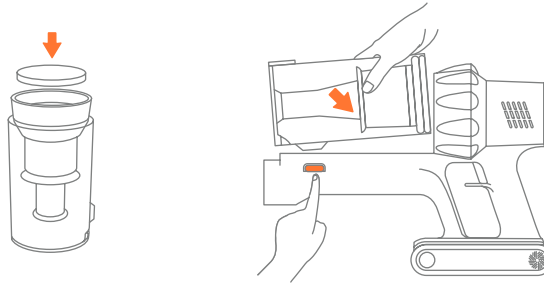


## 6.4 Brush Roller Cleaning

Tip: After long periods of use, the bristle may be jammed by hair or similar build-up. It's recommended to clean the brush roller periodically to ensure efficient operation and maintain suction.

 
- Push the button to the “unlock” sign, remove the brush roller.

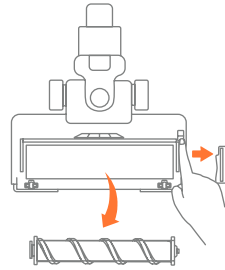

 - Remove the debris wrapped around the roller with the mini cleaning brush, then flush the roller with water.

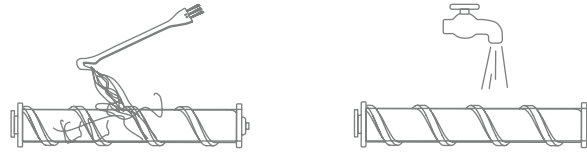

 - Gently push the brush roller into the motored brush, until securely in place. Make sure the brush roller is completely dry before using.

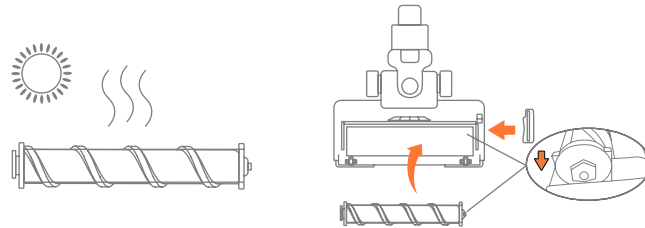

## 7. SPECIFICATION

Product	Cordless Vacuum Cleaner
Model	BP10
Rated Voltage	DC 25.9V
Suction level	Min-Mid-Max
Charge time	4-5H

## 8. TROUBLESHOOTING

ISSUE	CAUSE	SOLUTION
Vacuum cleaner not work	<ul style="list-style-type: none"> <li>• Out of power.</li> <li>• Battery pack not installed in place or has failed.</li> <li>• Motor has failed.</li> </ul>	<ul style="list-style-type: none"> <li>• Full charge the vacuum cleaner.</li> <li>• Battery pack installed in place.</li> <li>• Contact INETURE Team via email for replacing the battery or motor.</li> </ul>
Weak suction	<ul style="list-style-type: none"> <li>• Dust cup is full of garbage.</li> <li>• Motorized floor brush, tube or filters is clogged with garbage.</li> <li>• Low battery power.</li> <li>• Dust cup or filter are not installed correctly.</li> </ul>	<ul style="list-style-type: none"> <li>• Empty the dust cup.</li> <li>• Clear out any garbage that is blocking the motorized floor brush, tube or filters.</li> <li>• Full charge the vacuum cleaner.</li> <li>• Install the multi-cone filter, HEPA filter and dust cup according to the instruction correctly.</li> </ul>

ISSUE	CAUSE	SOLUTION
Charging is not normal	<ul style="list-style-type: none"> <li>• Charger is not correctly connected.</li> <li>• Battery pack or charger has failed.</li> <li>• Charger is not original.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the charger are fully plugged in socket.</li> <li>• Contact INTETURE Team via email for replacing the battery or charger.</li> <li>• Use the original charger provided by INTETURE only.</li> </ul>
Insufficient use time after charging	<ul style="list-style-type: none"> <li>• Insufficient charging time.</li> <li>• Motorized floor brush, dust cup, tube or filters is clogged with garbage.</li> <li>• Battery aging.</li> </ul>	<ul style="list-style-type: none"> <li>• Full charge the vacuum cleaner.</li> <li>• Clear out any garbage that is blocking the motorized floor brush, dust cup, tube or filters.</li> <li>• Contact INTETURE Team via email for replacing the battery.</li> </ul>
Motorized floor brush stops with four indicators on the battery pack flashing	<ul style="list-style-type: none"> <li>• Motorized floor brush is clogged with garbage.</li> </ul>	<ul style="list-style-type: none"> <li>• Clear out any garbage that is blocking the motorized floor brush.</li> </ul>

## 9. WARRANTY

### 9.1 The 2-Year Warranty

- Our INTETURE machine has a 2-year warranty against original defects in material and workmanship, when used for private household purposes in accordance with the INTETURE Instruction Manual.
- This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.

## 9.2 What is covered?

Only applies to purchases made from authorized retailers of INTETURE.  
This warranty will only be valid if the machine is used in the country in which it was sold.

## 9.3 How to claim?

Please keep your proof of purchase. To make a claim under our warranty, you need to provide your original purchase receipt with the purchase date and order number on it.

**If your machine is not functioning properly, or you still have any questions after reading this manual carefully, please feel free to contact us, we will reply to you in 24 hours and try our best to provide you with a satisfactory solution.**

**Email Our Customer Service : [support@inteture.com](mailto:support@inteture.com)**

## Federal Communication Commission Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# Declaration of Conformity

We (Manufacturer is responsible for this declaration)  
Ekoo Electronic Co.,Ltd.  
(Company name)

B09,block B,f2,bldg.b,runfeng Pioneer Park,no.973, minzhi Avenue, Minzhi St., Longhua, Shenzhen, CN.(Company address)

Declare under our sole responsibility that the product  
Trade name:INTETURE  
Equipment: Vacuum Cleaner  
Model No. : BP10

To which this declaration relates is in conformity with the essential requirement set out in the Council Directive on the Approximation of the laws of the Member States relating to LVD Directive(2014/35/EU) & EMC Directive(2014/30/EU) & RoHS(2011/65/EU) product is responsible to affix CE marking, the following standards were applied:

EN 60335-2-2:2010+A11:2012+A1:2013

EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A14:2019+A2:2019

EN 62233:2008

EN 55014-1:2021

EN 55014-2:2021

EN IEC 61000-3-2:2019+A1:2021

IEC62321-3-1:2013

IEC62321-4:2013

IEC62321-5:2013

IEC62321-6:2015

IEC62321-7-1:2015

IEC62321-7-2:2017

IEC62321-8:2017

Full Name: George.wang  
Signature: George.wang

Position: Approbation Manager  
Place/Date: Shenzhen,China/Jun.27-2022

