

Speak with our Experts

+1 (240) 514-4451

Mon-Fri: 9:00am ~01:00pm PST

8:00am ~12:00pm PST

support@yelow.net

CR1001E

Alarm Clock with USB Charger



CREATE YOUR PERFECT SLEEP ENVIRONMENT

[Http://www.yelow.net](http://www.yelow.net)



Version 1.0

Chapter 1 LOCATION OF CONTROLS

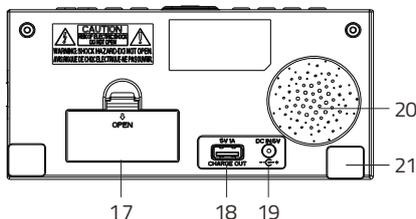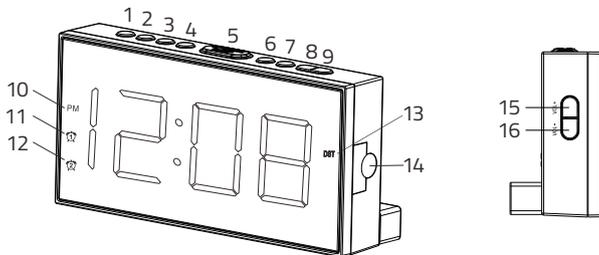


- | | | |
|-------------------------|-----------------------|-----------------------|
| 1. Set Time Button | 2. Hour Button | 3. Minute Button |
| 4. Dimmer Button | 5. SNOOZE Button | 6. Alarm Pause Button |
| 7. Alarm OFF Button | 8. Alarm 1 Button | 9. Alarm 2 Button |
| 10. PM Indicator | 11. Alarm 1 Indicator | |
| 12. Alarm 2 Indicator | 13. DST Indicator | |
| 14. 12/24H & DST Button | 15. Volume + Button | |
| | 17. Battery Door | |
| | 18. USB Port | |
| | 19. DC Jack | |
| | 20. Speaker | |
| | 21. Holder (x 2pcs) | |

Note: Battery is not included

Chapter 2 POWER RESOURCES

1. Install 2pcs 1.5V "AAA" size batteries to the proper terminals in the battery compartment to memorize the time setting in case of power outage.
NOTE: Batteries(not included) don't support time display but can back up time & alarm setting and trigger an alarm in case of AC power failure.
2. Connect the adapter line to DC jack, then plug into a 100~240V AC wall power outlet.

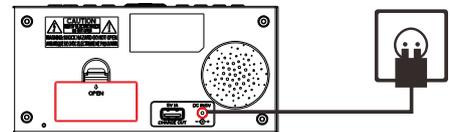

Chapter 3 TIME SETTING

1. Press **SET TIME** button once, display **12:00** starts flashing.
2. Press **HOUR** button to set the hour. press **MIN** button to set the minute.
3. Press **SET TIME** button or **OK SNOOZE** button to save time or wait for another 5 seconds to confirm automatically.

To change 12H/24H time format

Press **12/24H & DST** button to change 12H/24H time format.

Chapter 3 ALARM SETTING

1. Press  button, the alarm indicator  (11) will light up, the display  starts flickering.
2. Press  button to set the hour, press  button to set the minute.
3. Press  button or  button to save alarm time or just wait for another 5 seconds to confirm automatically.
4. Push  or  button to adjust alarm volume.

Setting ALARM 2 is the same as ALARM 1.

- 03 -

Chapter 4 DIMMER

Repeat  button to adjust the brightness of display for your preference.

 
There is 5 levels, The sequence is as follows:

01-02-03-04-05-04-03-02-01.....

Chapter 5 DST

Hold press  button to switch DST function.

DST indicator will turn on.

Hold press  button again to turn off DST function.

DST indicator will turn off.

- 05 -

Turn off Alarm

When alarm goes off:

1. Press  button to temporarily turn off alarm for 9 minutes. Alarm will ring every next 9 minutes.
2. Press  button to turn off alarm for 24 hours. The alarm indicator  or  is still on, which means alarm is still activated and will ring after 24 hours.
3. Cancel Alarm

Press  button to turn off alarm1 or alarm 2 permanently.

And corresponding indicator  or  will turn off.

If alarm 1 goes off, then press  button, just turn off alarm1 permanently.  indicator (11) will turn off.

If alarm 2 goes off, then press  button, just turn off alarm 2 permanently.  indicator (12) will turn off.


- 04 -

Chapter 6 USB CHARGING

Plug charging cable into device such as phone or tablet.

Device can charge both your phone or tablet at the same time.

The maximum charge current is 1 Ampere.

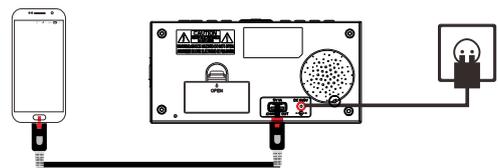

- 06 -