

Pumpkin Chair FHPC100 Assembly Instructions




1. Open the package and unwrap the four short legs and put rubber feet on each of the four legs



2. Bolt the four legs to the X-frame base of the Egg Chair Stand





3. Put nuts and bolts in middle of C frame stand

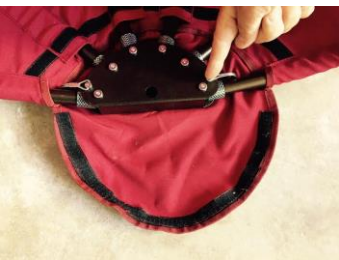

4. Open chair frame completely and put the four catch pins in place


Make sure the flat tops are on the inside of the chair so they do not poke through the fabric or through the seat

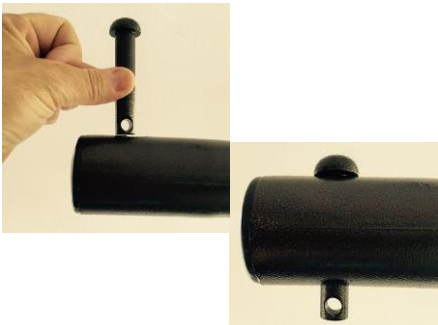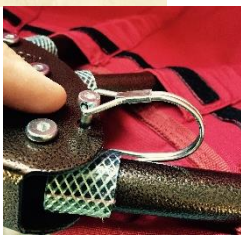


5. Put the longer of the two swivel pins in the top of the C frame stand



6. Attach snap hooks to each end of both sets of chains, then slide one of each and a washer on the top swivel pin

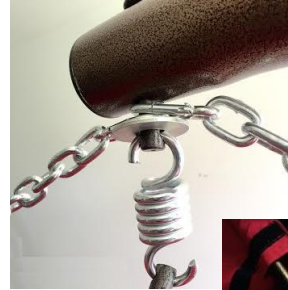

7. Attach seat spring to swivel pin

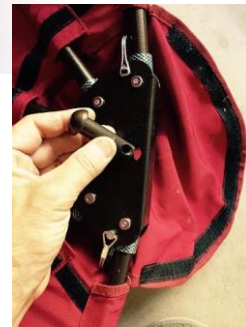

8. Put the shorter of the two swivel pins through the top of the chair and through the grommet, then attach



9. Once the chair is attached, tilt the chair to either side. Clip the snap hooks to the metal loops on the chair, repeat on both sides



10. Make sure all fasteners are tight in the seat frame is straight, adjust your pillows the way you like put in a good level location and enjoy your egg chair, thank you for your business