

pTron Tangent Lite User Manual

pTron

Tangent Lite
Hi-Fi Sports Wireless Neckband



User Manual

Control Buttons Description:



*MFB-Multi Function Button

Bluetooth Connection:

1. Press the power button for 3sec to turn ON the Bluetooth headset.
2. After getting turned ON Blue & Red light will flash alternatively. That means the device is in Bluetooth mode and ready to pair mode. You will also hear the voice prompt as "pairing".
3. Turn ON the Bluetooth of your phone or device & search for "pTron Tangent Lite" in available Bluetooth devices name list & click to connect.
4. After a successful connection, you hear the voice prompt as "connected".

Re-connection:

After turned ON, the neckband will reconnect to the last paired device. If there's no prior connection history, or that it fails to reconnect to any device, the neckband will enter standby mode and wait for connection.

Button Operation:

Power ON: Press & hold the power button for 3sec. Blue LED light will start flashing which indicates that the headset is turned ON. You will also hear the voice prompt as "Power ON".
Power OFF: Press & hold the power button for 5 sec. Red LED light will start flashing which indicates that the headset is turning OFF. You will also hear the voice prompt as "Power OFF".

Volume Up: Click the "+" button at regular intervals to increase the volume.

Volume Down: Click the "-" button at regular intervals to decrease the volume.

Music Play/Pause: Click the power button once to play/pause the music.

Next Song: Long press the "+" button for 2sec to go to the next track.

Previous Song: Long press the "-" button for 2sec to go to the previous track.

Call Receive & Hang up: Click once the power button.

Call Reject: Press & hold or click twice the power button to reject the call.

Redial: Click the power button twice to redial the last dialed number.

Google Assistance/Siri: Long press the power button for 2sec to activate voice assistant.

Charging:

Plug the Micro USB cable to its port to charge pTron Bluetooth headset. You can use any adaptor of DCSV/1A output to charge the headset. During charging it will show Red light and will turn to Blue light after getting fully charged.

Trouble Shooting:

1. Bluetooth Not Searching: If your phone doesn't find the "pTron Tangent Lite" in your Bluetooth device list then make sure that it must be near to the device at the 3-meter range. And check it must be flashing blue & red light alternatively. If it is flashing only blue light for once in regular intervals that means the headset is already connected with some other device.

2. Auto-disconnection: Make sure the headset should full charge to 100% & reconnect your device after restarting your phone & Bluetooth headset.

3. Device Connected but No Music/Call Output: Check the settings of your Bluetooth connection and make sure that call & music function must be activated.

Disclaimer:

The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purposes only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.